

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HEYNEMO](#) /

› [HEYNEMO 22-Quart Electric Roaster Oven User Manual](#)

HEYNEMO Roaster Oven Electric 22 Quart

HEYNEMO 22-Quart Electric Roaster Oven

Model: Roaster Oven Electric 22 Quart

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PRODUCT OVERVIEW

The HEYNEMO 22-Quart Electric Roaster Oven is designed for versatile cooking, including roasting, baking, and warming. It features a self-basting lid, a removable inner pan, and a steel rack for easy use and cleaning.



Overall View: The HEYNEMO 22-Quart Electric Roaster Oven in white, featuring the control knob and brand logo on the front.


Say NO to Dry Turkey



-  AIR CYCLE HEATING
-  VISUALIZATION TOP
-  150-450°F ADJUSTABLE TEMP

Self-Basting Lid: The lid is designed to continually recirculate moisture, ensuring food remains juicy. It also features a visualization top to monitor cooking progress without lifting the lid.

Defrost and Warm Function

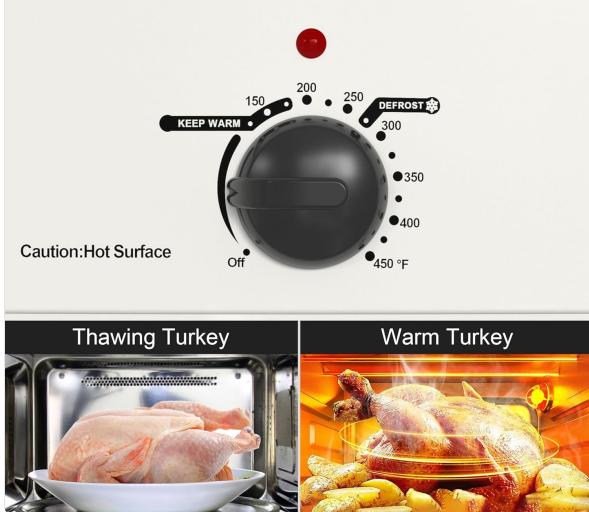

Control Panel: Features a full-range temperature control

knob from 150°F to 450°F, along with dedicated "Keep Warm" and "Defrost" settings. A red indicator light will illuminate when the unit is heating.



Removable Components: The roaster includes a removable inner pot and a steel rack, making it easy to insert and remove large items like turkeys, and simplifying the cleaning process.

BEFORE FIRST USE

1. Carefully unpack the roaster oven and remove all packaging materials, tags, and labels.
2. Wash the lid and the removable inner pot thoroughly in hot, soapy water.
3. Rinse all parts with clean water and dry them completely before assembly.
4. Ensure the heating unit (the main body of the roaster) is wiped clean with a damp cloth and dried. Do not immerse the heating unit in water.
5. It is recommended to operate the empty roaster oven at 450°F for 30 minutes during its first use to burn off any manufacturing oils. Some smoke or odor may be present; this is normal. Ensure adequate ventilation.

SETUP

1. Place the roaster oven on a stable, heat-resistant, and level surface. Ensure there is sufficient clearance around the unit for proper ventilation.
2. Insert the removable inner pot into the main heating unit.
3. Place the steel roasting rack inside the removable inner pot.
4. Ensure the temperature control knob is set to "OFF" before plugging the unit into a standard AC 120V electrical outlet.

OPERATING INSTRUCTIONS

General Operation

1. Prepare your food and place it on the roasting rack inside the removable inner pot.
2. Place the self-basting lid securely on the roaster oven.
3. Plug the power cord into a standard AC 120V electrical outlet.

4. Turn the temperature control knob to your desired setting (from 150°F to 450°F). The red indicator light will illuminate, indicating the unit is heating.
5. Once the desired temperature is reached, the indicator light may cycle on and off to maintain the temperature.
6. Monitor cooking progress through the visualization top on the lid, if applicable.
7. When cooking is complete, turn the temperature control knob to "OFF" and unplug the unit from the outlet.
8. Use oven mitts to carefully remove the lid and then the roasting rack with the cooked food.

Defrost Setting

The "Defrost" setting is designed to safely thaw frozen foods, such as turkeys, before cooking. Set the knob to "Defrost" and follow recommended thawing times based on the food's weight. Always ensure food is fully thawed before proceeding with cooking.

Keep Warm Setting

After cooking, you can use the "Keep Warm" setting to maintain your food at an ideal serving temperature without overcooking. Simply turn the knob to "Keep Warm" (approximately 150°F).

Self-Basting Lid

The unique design of the self-basting lid ensures that moisture continually recirculates back into the food, resulting in more tender and juicy results, especially for large roasts like turkey.

Product Demonstration Video

Your browser does not support the video tag.

This video demonstrates the ease of roasting a turkey using the HEYNEMO electric roaster oven, highlighting its features and the delicious results.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your roaster oven.

1. Always unplug the roaster oven from the electrical outlet and allow it to cool completely before cleaning.
2. Remove the lid, roasting rack, and removable inner pot.
3. The lid, roasting rack, and removable inner pot are dishwasher safe for convenient cleaning. Alternatively, they can be washed by hand in hot, soapy water. Rinse thoroughly and dry completely.
4. Wipe the exterior of the heating unit with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
5. Never immerse the main heating unit, cord, or plug in water or any other liquid.
6. For stubborn food residue in the inner pot, soak it in warm, soapy water before cleaning.
7. Ensure all parts are completely dry before reassembling or storing the roaster oven.
8. Store the roaster oven in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Roaster does not heat.	Not plugged in; power outlet not functioning; temperature knob set to "OFF".	Ensure unit is securely plugged in; check power outlet with another appliance; turn temperature knob to desired setting.

Problem	Possible Cause	Solution
Food is cooking too slowly or too quickly.	Incorrect temperature setting; lid not properly sealed.	Adjust temperature knob as needed; ensure lid is seated correctly to retain heat and moisture.
Smoke or odor during first use.	Manufacturing oils burning off.	This is normal for initial use. Ensure adequate ventilation. It should dissipate after the first use.
Food is dry.	Lid not properly sealed; insufficient liquid in the pan; cooking at too high a temperature.	Ensure lid is properly seated; add appropriate liquids (broth, water) to the pan; adjust temperature down. The self-basting lid helps retain moisture.

SPECIFICATIONS

Brand: HEYNEMO

Model Name: Roaster Oven Electric 22 Quart

Capacity: 22 Quart

Color: White

Power Source: AC 120V

Wattage: 1450W

Temperature Range: 150°F to 450°F

Product Dimensions: 15.72"D x 23.34"W x 14.61"H

Item Weight: 14.33 pounds

Special Features: Removable pan, lid and rack, easy to clean and dishwasher safe, Large capacity, Full-range adjustable temperature control, Warm Function, Self-basting lid.

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries regarding your HEYNEMO 22-Quart Electric Roaster Oven, please refer to the contact information provided with your product packaging or visit the official HEYNEMO website. Please have your model number (Roaster Oven Electric 22 Quart) and purchase details ready when contacting support.