

kunphy Mor-DE-UC-BCM-187

KUNPHY 350ml Ultrasonic Cleaner Instruction Manual

Model: Mor-DE-UC-BCM-187

1. INTRODUCTION

Thank you for choosing the KUNPHY 350ml Ultrasonic Cleaner. This device utilizes high-frequency ultrasonic waves (46,000 Hz) to provide thorough and gentle cleaning for various items without causing damage. The ultrasonic vibrations, combined with a gentle water flow, effectively remove hidden dirt and grime from intricate surfaces. This manual provides essential information for the safe and efficient operation of your ultrasonic cleaner.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the main unit in water or other liquids.
- Ensure the power cord is not damaged and is properly connected to a grounded outlet.
- Keep out of reach of children.
- Do not operate the cleaner without liquid in the tank.
- Unplug the device when not in use and before cleaning.
- Avoid cleaning scratched or cracked glasses/sunglasses, as ultrasonic cleaning may worsen existing damage.
- Do not disassemble or attempt to repair the unit yourself. Contact customer support for assistance.

3. PRODUCT OVERVIEW

3.1 Components

- Ultrasonic Cleaner Unit (with 304 stainless steel tank)
- Transparent Lid
- Power Adapter (integrated or separate, depending on model)
- Watch Stand (included for specific items)

3.2 Features

- **Effective Ultrasonic Cleaning:** 46,000 Hz frequency for deep cleaning.
- **Generous Capacity:** 350ml stainless steel tank, suitable for various items.
- **Simple Operation:** One-button ON/OFF control.
- **Automatic Shut-off:** Device automatically turns off after a cleaning cycle (typically 3 minutes).
- **Durable Construction:** 304 stainless steel interior for corrosion resistance.
- **Stable Design:** Non-slip silicone strip on the bottom for stability and noise reduction.
- **Versatile Use:** Ideal for jewelry, watches, glasses, dentures, electric shaver heads, makeup brushes, combs, and more.



Image 1: KUNPHY 350ml Ultrasonic Cleaner showing its compact design and items it can clean.

Einfach zu bedienen



Image 3: Visual guide for filling the tank and placing items.

5. OPERATING INSTRUCTIONS

- 1. Prepare Items:** Ensure items to be cleaned are suitable for ultrasonic cleaning. For watches, use the included watch stand if applicable.
- 2. Place Items:** Carefully place the items into the water in the stainless steel tank. Ensure items are fully submerged but not overcrowded.
- 3. Start Cleaning:** Close the lid and press the ON/OFF button to start the cleaning cycle. The device will begin operating, and you may hear a gentle humming sound.
- 4. Automatic Shut-off:** The cleaner will automatically stop after approximately 3 minutes.
- 5. Inspect and Repeat:** After the cycle, open the lid and carefully remove the cleaned items. Rinse them under clean water and dry with a soft cloth. If items are still dirty, you may repeat the cleaning cycle.
- 6. Empty and Clean:** After use, unplug the device, empty the water from the tank, and wipe the tank and exterior clean.



Image 4: Demonstration of cleaning effectiveness on glasses.

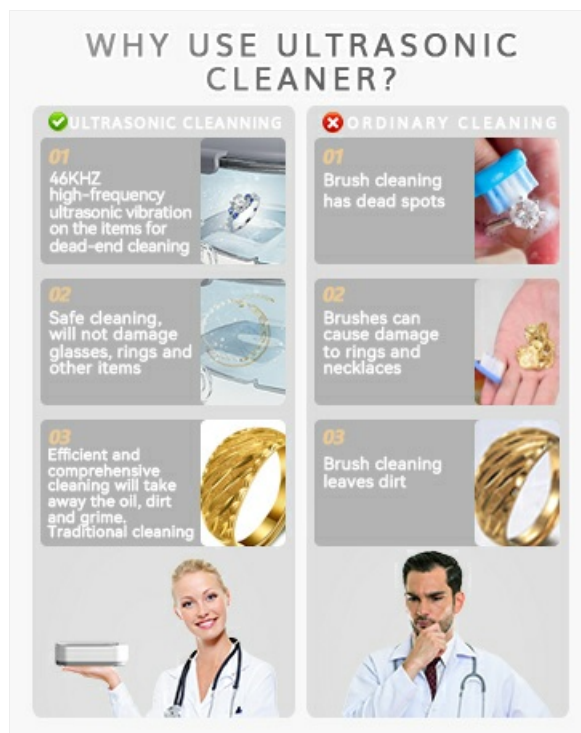


Image 5: Demonstration of cleaning effectiveness on jewelry.

6. MAINTENANCE

- **Cleaning the Tank:** After each use, empty the water and wipe the stainless steel tank with a soft cloth. Do not use abrasive cleaners or harsh chemicals.
- **Exterior Cleaning:** Wipe the exterior of the unit with a damp cloth. Ensure no water enters the electronic components.
- **Storage:** Store the cleaner in a cool, dry place away from direct sunlight and moisture when not in use.
- **Descaling:** If mineral deposits build up in the tank, use a mild descaling solution or vinegar diluted with water, run a short cycle, then rinse thoroughly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply.	Check if the power cord is securely plugged into the unit and the wall outlet. Ensure the outlet is functional.
Cleaning is not effective.	Insufficient water or cleaning solution; items too dirty; items overcrowded.	Ensure tank is filled to the appropriate level. Add a small amount of cleaning solution. Clean fewer items at a time. Run multiple cycles if necessary.
Unusual noise during operation.	Unit not on a flat surface; tank empty.	Place the unit on a stable, flat surface. Ensure the tank is filled with water.

8. SPECIFICATIONS

- **Model Number:** Mor-DE-UC-BCM-187
- **Manufacturer:** SWX
- **Capacity:** 350ml
- **Ultrasonic Frequency:** 46,000 Hz
- **Power:** 18 Watt-hours
- **Material:** PTFE (Polytetrafluoroethylene), 304 Stainless Steel
- **Color:** White
- **Package Dimensions:** 31 x 11.2 x 7.9 cm
- **Weight:** 680 grams
- **Included Components:** Ultrasonic cleaner unit, watch stand
- **Batteries Required:** No
- **Date First Available:** April 15, 2022

9. CUSTOMER SUPPORT

For any questions, concerns, or technical assistance regarding your KUNPHY Ultrasonic Cleaner, please contact our customer service. We aim to provide high-quality support to ensure your satisfaction.