

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [eXtremeRate](#) /

> [eXtremeRate Chrome Blue Custom Shell for Xbox Series X|S Controller \(Model FX3D404\) - Instruction Manual](#)

eXtremeRate FX3D404

eXtremeRate Chrome Blue Custom Shell for Xbox Series X|S Controller

Model: FX3D404
Brand: eXtremeRate

INTRODUCTION

This manual provides instructions for the installation, use, and maintenance of your eXtremeRate Chrome Blue Custom Shell for Xbox Series X|S controllers. Please read these instructions carefully before proceeding with installation to ensure proper fit and function.

SETUP AND INSTALLATION

This custom shell is designed specifically for Xbox Series X and Xbox Series S controllers. It is not compatible with other Xbox One controller models. Please verify your controller model before beginning the installation process.

Please check the appearance of controller faceplate.



Figure 1: Compatibility check for Xbox Series X/S controller faceplate.

Package Contents:

- 1 x Chrome Blue Faceplate Shell
- 1 x T8H Screwdriver
- 5 x Screws

Important: The Xbox controller and any other internal components are not included with this product.



Figure 2: Included components for the custom shell installation.

Installation Steps:

1. **Prepare the Controller:** Ensure your Xbox Series X|S controller is powered off and remove any batteries.
2. **Remove Original Faceplate:** Carefully disassemble your original faceplate from the controller. This typically involves removing screws and gently prying the shell apart. Refer to the video guide for detailed visual instructions.
3. **Install New Faceplate:** Align the eXtremeRate Chrome Blue custom shell with the controller's internal components. Ensure all clips and screw posts are properly seated.
4. **Secure the Faceplate:** Use the provided T8H screwdriver and screws to secure the new faceplate onto the controller. Do not overtighten the screws.
5. **Final Check:** Verify that the new faceplate is securely attached and all buttons function correctly before reinserting batteries and powering on the controller.

Installation Video Guide:

For a comprehensive visual guide on the installation process, please watch the official eXtremeRate

installation video below. This video demonstrates the steps for replacing the shell on an Xbox Series X|S controller.

Your browser does not support the video tag.

Video: eXtremeRate Multi-Style Replacement Shell for Xbox Series X & S Controller. This video demonstrates the disassembly of an Xbox Series X|S controller and the installation of a replacement faceplate.

OPERATING INSTRUCTIONS

Once the eXtremeRate Chrome Blue Custom Shell is installed, the operation of your Xbox Series X|S controller remains unchanged. The custom shell is a cosmetic replacement and does not alter the functionality of the controller's buttons, joysticks, or internal electronics.

Continue to use your controller as you normally would for gaming and other functions. Ensure that all buttons and triggers move freely and respond as expected after installation.



Figure 3: Xbox Series X|S controller with the Chrome Blue custom shell installed.

MAINTENANCE

Proper cleaning and care will help maintain the appearance and longevity of your custom shell.

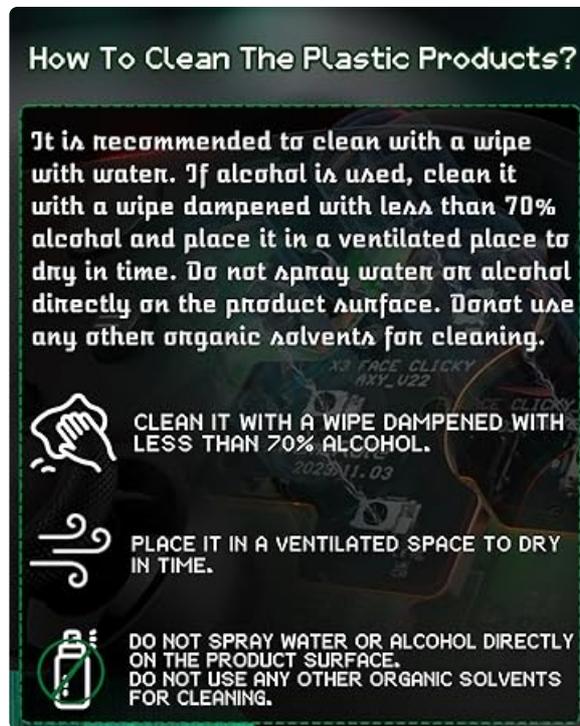


Figure 4: Cleaning instructions for plastic products.

Cleaning Instructions:

- It is recommended to clean the shell with a wipe dampened with water.
- If alcohol is used, clean it with a wipe dampened with less than 70% alcohol.
- After cleaning, place the shell in a well-ventilated area to dry completely.
- **Do not** spray water or alcohol directly onto the product surface.
- **Do not** use any other organic solvents for cleaning, as this may damage the finish.

TROUBLESHOOTING

Issue	Possible Cause	Solution
New faceplate does not fit flush or sit properly.	Incorrect controller model; internal components not aligned; clips not fully engaged.	Verify controller is an Xbox Series X S model. Re-open the controller and ensure all internal components are correctly positioned and clips are engaged. Do not force the shell.
Buttons or joysticks are sticking or not responding.	Buttons or internal components are misaligned during reassembly.	Disassemble the controller again and carefully re-align all buttons, membranes, and internal components before re-securing the faceplate.
Difficulty removing the original faceplate.	Original shell may be tightly secured or unfamiliar removal process.	Refer to the installation video for precise instructions on how to safely remove the original faceplate without causing damage. Use appropriate tools gently.

SPECIFICATIONS

Feature	Detail
Brand	eXtremeRate
Model Number	FX3D404
Compatible Platform	Xbox Series X, Xbox Series S
Color	Chrome Blue
Material	Acrylonitrile Butadiene Styrene (ABS)
Finish Type	Glossy
Product Dimensions	6.5 x 4.53 x 1.97 inches
Item Weight	1.41 ounces
Date First Available	December 1, 2020

WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. For warranty inquiries, please contact eXtremeRate customer support directly or refer to the product packaging for any included warranty cards or documentation.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your eXtremeRate Chrome Blue Custom Shell, please contact eXtremeRate customer support through their official website or the retailer where the product was purchased. Provide your product model number (FX3D404) and a detailed description of your issue for efficient assistance.