

[manuals.plus](#) /

› [One For All](#) /

› [One For All URC 4910 Samsung Replacement Remote Control User Manual](#)

## One For All URC4910

# One For All URC 4910 Samsung Replacement Remote Control User Manual

Model: URC4910

## 1. INTRODUCTION

---

Thank you for choosing the One For All URC 4910 Samsung Replacement Remote Control. This remote is designed to function identically to your original Samsung TV remote, offering seamless control without complex setup. It is compatible with all types of Samsung televisions, including LCD, LED, and Plasma models.

## 2. SETUP

---

### 2.1 Battery Installation

The One For All URC 4910 remote control requires **two AA batteries** for operation. To install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

**NO SETUP REQUIRED:** Once batteries are inserted, your remote control is ready for use with your Samsung TV. No programming or code entry is necessary.



This image displays the full layout of the One For All URC 4910 remote control, highlighting the arrangement of its 46 buttons, including the power, number pad, volume, channel, navigation, and special function keys.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Basic Functions

The One For All URC 4910 remote control provides **identical operation to your original Samsung remote**. It supports all standard Samsung functions, including:

- Power On/Off
- Volume Up/Down
- Channel Up/Down
- Number Pad for direct channel input
- Menu (classic and Smart Hub) navigation
- Guide access
- HDMI input selection

- Playback controls (Play, Pause, Stop, Rewind, Fast Forward)
- Color buttons (Red, Green, Yellow, Blue) for specific functions

This replacement remote is **compatible with all Samsung TV types** (LCD, LED, Plasma, etc.), making it the ideal replacement for your Samsung television.



This illustration demonstrates the remote control in active use, emitting an infrared signal towards a television. It visually represents the line-of-sight communication required for the remote to operate the TV.

### 3.2 Function Transfer Option

The **Function Transfer Option** allows you to copy one or more functions from your original remote control to this universal remote. This is useful for transferring specific or unique functions not pre-programmed.

1. Place the One For All URC 4910 and your original remote control on a flat surface, facing each other, about 2-5 cm apart.
2. Press and hold the desired function button on the One For All remote (e.g., a specific app button) until the LED blinks twice.
3. Press the corresponding button on your original remote control. The LED on the One For All remote will blink rapidly to confirm the successful transfer.
4. Repeat for any other functions you wish to transfer.



This image depicts the function transfer feature, where specific commands from an original Samsung remote can be copied to the One For All URC 4910. This allows for customization and consolidation of remote functionalities.

## 4. MAINTENANCE

To ensure the longevity and optimal performance of your One For All URC 4910 remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote. Avoid using abrasive cleaners or solvents, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working.

Always replace both batteries at the same time with new ones of the same type (AA).

- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from impacts and drops, which can damage internal circuitry.

## 5. TROUBLESHOOTING

If you encounter issues with your One For All URC 4910 remote control, refer to the following common problems and solutions:

- **Remote is not responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace the batteries with fresh AA batteries.
- Ensure there is a clear line of sight between the remote control and the TV's infrared receiver. Remove any obstructions.
- Make sure you are within the maximum operating range (up to 10 meters).

- **Specific functions are not working after transfer:**

- Repeat the function transfer process, ensuring both remotes are stable and correctly aligned during the transfer.
- Ensure the original remote's battery is not low during the transfer process.

- **Remote works intermittently:**

- This often indicates low battery power. Replace the batteries.
- Ensure the TV's IR receiver is not blocked or dirty.

## 6. SPECIFICATIONS

Feature	Description
Brand	One For All
Model Number	URC4910
Compatible Devices	Samsung TVs (LCD, LED, Plasma)
Connectivity Technology	Infrared (IR)
Number of Buttons	46
Controller Type	Push Button
Maximum Range	10 Meters
Battery Type	2 x AA batteries (not included)
Special Features	Backlight
Country of Origin	China

## 7. WARRANTY AND SUPPORT

---

## 7.1 Manufacturer Warranty

This One For All remote control comes with a **3-Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

## 7.2 Spare Parts Availability

Spare parts for this product are guaranteed to be available for **2 years** from the date of purchase.

## 7.3 Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official One For All website or contact their customer service department. Refer to the product packaging or the One For All website for specific contact details in your region.

---

© 2025 One For All. All rights reserved.