

One For All URC4912

One For All URC4912 Sony TV Replacement Remote Control User Manual

Model: URC4912 | Brand: One For All

1. INTRODUCTION

This manual provides comprehensive instructions for the One For All URC4912 Sony TV Replacement Remote Control. Designed to function identically to your original Sony TV remote, the URC4912 offers immediate compatibility with all Sony TV models (LCD, LED, Plasma) without requiring any setup. It also includes a learning feature for personalized customization of functions.

2. SETUP

2.1 Installing Batteries

The URC4912 remote control requires two AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always use new batteries and dispose of old batteries responsibly.

2.2 Initial Setup (No Configuration Required)

The One For All URC4912 remote control is pre-programmed for all Sony televisions. No setup or programming is required. Simply insert the batteries, and the remote is ready for immediate use with your Sony TV.







Image 1: Front view of the One For All URC4912 remote control. This image displays the remote's layout, including number buttons, navigation pad, volume and channel controls, and dedicated app buttons for services like YouTube and Netflix.

3. OPERATING THE REMOTE CONTROL

3.1 Basic Functions

The URC4912 remote provides all standard functions found on an original Sony TV remote:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (PROG +/-):** Changes TV channels.
- **Mute Button:** Silences the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen or smart TV interface.

3.2 Specific Sony Functions

This remote supports common Sony-specific functions, including:

- **Theatre:** Activates or deactivates Theatre mode.
- **i-Manual:** Accesses the TV's electronic instruction manual.
- **Options:** Displays context-sensitive options for the current screen.

3.3 Learning Feature

The URC4912 remote includes a learning feature, allowing you to copy functions directly from your original remote control. This is useful for any specific functions not pre-programmed or for personalizing button assignments.

1. Place the URC4912 remote and your original remote on a flat surface, facing each other, with their IR emitters approximately 1-2 inches apart.
2. On the URC4912, press and hold the **SETUP** button (if available, or refer to the full manual for specific button combination to enter learning mode) until the LED indicator blinks twice and then stays lit.
3. Press the button on the URC4912 that you wish to program. The LED will blink rapidly.
4. On your original remote, press and hold the corresponding function button until the URC4912's LED blinks twice to confirm successful learning.
5. Repeat steps 3 and 4 for any other buttons you wish to program.
6. To exit learning mode, press the **SETUP** button again. The LED will turn off.

Note: If the LED shows a long blink, the learning was unsuccessful. Try again, ensuring both remotes are stable and the original remote's batteries are fresh.







Image 2: Angled view of the One For All URC4912 remote control, highlighting its ergonomic design and button placement for easy access to various functions.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or liquids.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the LED indicator (if present) signals low power. Always replace both batteries simultaneously.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

Problem	Solution
Remote does not respond.	<ul style="list-style-type: none">◦ Check if batteries are inserted correctly with correct polarity.◦ Replace old batteries with new ones.◦ Ensure there is no obstruction between the remote and the TV's IR receiver.
Some buttons do not work.	<ul style="list-style-type: none">◦ Verify the remote is pointed directly at the TV.◦ If a button was programmed using the learning feature, try re-learning the function.
Learning feature fails.	<ul style="list-style-type: none">◦ Ensure both remotes are stable and facing each other at a close distance (1-2 inches).◦ Check batteries in the original remote.◦ Press and hold the button on the original remote firmly and for a sufficient duration.

6. SPECIFICATIONS

Brand	One For All
Model	URC4912
Compatible Devices	Television (All Sony TV types: LCD, LED, Plasma)
Special Features	Infrared, Learning Function
Number of Items	1
Battery Type	2 x AA batteries (not included)

Product Dimensions	19.5 x 4.4 x 2.5 cm
Item Weight	100 g

7. WARRANTY INFORMATION

For detailed warranty information regarding your One For All URC4912 remote control, please refer to the official One For All website or the warranty card included with your purchase. Warranty terms and conditions may vary by region.



8. SUPPORT

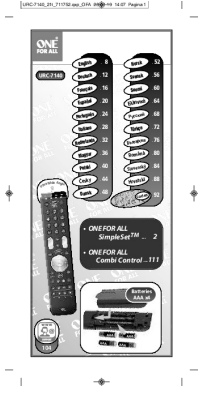



Should you require further assistance, technical support, or have questions not covered in this manual, please visit the official One For All support website or contact their customer service. You can often find FAQs, additional guides, and contact information on their brand page:

[Visit One For All Official Website](#)

© 2023 One For All. All rights reserved.

Related Documents - URC4912

	<p>One For All 5 Universal Remote URC-7552 User Manual</p> <p>Comprehensive user guide for the One For All 5 Universal Remote (Model URC-7552), detailing setup, features, troubleshooting, and customer service information for operating various audio and video devices.</p>
	<p>One For All URC-4912 Universal Remote Control Setup and User Guide</p> <p>Comprehensive user manual for the One For All URC-4912 universal remote control, detailing setup for Sony TVs, audio device control, and learning new functions. Available in multiple languages.</p>

	<p>One For All URC-7140 Universal Remote Control Manual</p> <p>Comprehensive instruction manual for the One For All URC-7140 universal remote control, detailing setup, features, and troubleshooting.</p>
	<p>One For All URC-4912 Remote Control User Guide</p> <p>Comprehensive guide for the One For All URC-4912 universal remote control, covering setup, button functions, learning new functions, and audio device control for Sony TVs and other brands.</p>
	<p>One For All URC 1823 Vizio Universal Replacement Remote User Guide</p> <p>User guide for the One For All URC 1823 Universal Replacement Remote for Vizio TVs, including setup, troubleshooting, and learning functions.</p>
	<p>One For All URC 4812 Universal Replacement Remote for Sony TVs - User Manual</p> <p>User manual for the One For All URC 4812 universal replacement remote control, designed for Sony TVs. This guide provides detailed instructions on setup, programming, troubleshooting, and controlling audio devices, along with warranty information.</p>