

One For All URC4914

One For All Panasonic URC4914 TV Replacement Remote Control User Manual

Model: URC4914

1. INTRODUCTION

This manual provides instructions for the One For All URC4914 Panasonic TV Replacement Remote Control. This remote is designed to function as a direct replacement for your original Panasonic TV remote, offering compatibility with various Panasonic TV types including LCD, LED, and Plasma models. It supports common Panasonic functions and includes a learning feature for customization.

2. SETUP

2.1. Battery Installation

The URC4914 remote control requires two AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image 1: Rear view of the URC4914 remote control, illustrating the location of the battery compartment. The cover is typically located on the lower half of the remote's back side.

2.2. Initial Use

No setup is required for basic functionality. Once batteries are installed, the remote is ready to operate all compatible Panasonic televisions. Point the remote towards your TV and press the **POWER** button to test.

3. OPERATING INSTRUCTIONS

The URC4914 remote control features a standard layout for Panasonic TVs. Below is an overview of key buttons and their functions.





Image 2: Front view of the URC4914 remote control, displaying the full button layout for operation.

3.1. Button Functions

- **POWER:** Turns the TV on or off.
- **INPUT/TV/AV:** Selects the input source (e.g., HDMI 1, AV, TV tuner).
- **VIERA LINK:** Activates Panasonic's Viera Link function for connected devices.
- **GUIDE:** Displays the electronic program guide (EPG).
- **APPS/NETFLIX/HOME:** Provides quick access to smart TV applications, specifically Netflix, and the TV's home menu.

- **Navigation Pad (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **EXIT/MENU/BACK:** Exits menus, opens the main menu, or goes back to the previous screen.
- **VOL +/-:** Adjusts the volume level.
- **PR +/- (Channel +/-):** Changes TV channels.
- **MUTE:** Mutes or unmutes the TV audio.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Record):** Controls media playback on compatible devices or TV functions.
- **Number Pad (0-9):** Direct channel selection and data entry.
- **INFO:** Displays information about the current program or input.

3.2. Learning Feature

The URC4914 remote includes a learning function, allowing you to copy functions directly from your original remote control. This is useful for any specific functions not pre-programmed or for customizing button assignments.

1. Place the URC4914 remote and your original remote on a flat surface, facing each other, approximately 1-2 inches apart.
2. Press and hold the **SETUP** button (if present, or a combination like **SHIFT + SETUP**) on the URC4914 until the LED blinks twice and then stays lit.
3. Press the button on the URC4914 remote that you wish to program. The LED will blink rapidly.
4. Press and hold the corresponding button on your original remote. The URC4914's LED should blink twice to confirm successful learning.
5. Repeat for other buttons you wish to learn.
6. To exit learning mode, press the **SETUP** button again.

Note: Specific steps for entering learning mode may vary. Refer to the full One For All manual for detailed instructions if the above does not apply.

4. MAINTENANCE

4.1. Battery Replacement

When the remote's performance degrades or it stops responding, it is likely time to replace the batteries. Always replace both AA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4.2. Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh AA batteries.
 - Ensure there are no obstructions between the remote and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's IR receiver.
- **Specific buttons not working:**
 - If you used the learning feature, try re-learning the function for that specific button.

- Ensure your TV model supports the function you are trying to use.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure the remote's infrared emitter is clean and free from dust.


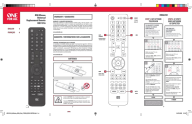
6. SPECIFICATIONS





Feature	Detail
Brand	One For All
Model	URC4914
Compatible Devices	Panasonic Televisions (LCD, LED, Plasma)
Connectivity Technology	Infrared (IR)
Batteries Required	2 x AA Alkaline batteries
Dimensions (L x W x H)	19.5 x 4.4 x 2.5 cm
Item Weight	170 g
Special Features	Universal compatibility for Panasonic TVs, Learning function

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your One For All URC4914 remote control, please refer to the official One For All website or contact their customer service directly. Details are typically provided with the product packaging or on the manufacturer's website.

Related Documents - URC4914

	<p>One For All URC-4914 Remote Control User Manual</p> <p>User manual for the One For All URC-4914 replacement remote control, detailing setup for Panasonic TVs, audio device control, learning functions, and troubleshooting. Available in multiple languages.</p>
	<p>One For All URC 1916 Hisense Universal Replacement Remote Quick Start Guide</p> <p>Learn how to set up and use your One For All URC 1916 universal replacement remote for Hisense TVs. Includes setup instructions, battery replacement, and learning functions.</p>

	<p>One For All URC 4110 Universal Replacement Remote Control User Manual</p> <p>User manual for the One For All URC 4110 Universal Replacement Remote Control, detailing setup, features, programming, troubleshooting, warranty information, and manufacturer codes for various home entertainment devices.</p>
	<p>One For All URC1635 Universal Replacement Remote Codelist</p> <p>Comprehensive codelist for the One For All URC1635 Universal Replacement Remote, detailing codes for controlling TVs, digital media, and audio equipment from numerous brands.</p>
	<p>One For All URC 4810 Samsung Universal Replacement Remote User Manual</p> <p>Comprehensive user manual for the One For All URC 4810 universal replacement remote control for Samsung TVs, covering setup, programming, audio device control, and app shortcuts.</p>
	<p>One For All URC 6810 Universal Remote Setup Guide Learn & Code Programming</p> <p>Comprehensive setup guide for the One For All URC 6810 universal remote. Learn how to program your remote using learning or code methods, control multiple devices, and utilize advanced features.</p>