

## OVENTE OFM2025BR

# OVENTE Air Fryer Toaster Oven Combo

## INSTRUCTION MANUAL - MODEL OFM2025BR

### 1. INTRODUCTION

---

Thank you for choosing the OVENTE Air Fryer Toaster Oven Combo. This versatile appliance combines the functions of a traditional oven with the efficiency of an air fryer, offering 7 distinct cooking modes to meet all your culinary needs. With its powerful 1700W heating system and 26-quart capacity, you can bake, roast, broil, toast, air fry, grill, and dehydrate a wide variety of foods. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

### 2. IMPORTANT SAFETY INSTRUCTIONS

---

**WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.**

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or pot holders when handling hot materials.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact OVENTE Customer Service for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “OFF”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any materials, other than manufacturer’s recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that are not oven-safe.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- This appliance is for household use only.

**Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.**

### 3. PRODUCT OVERVIEW

---

#### 3.1 Components and Accessories

Your OVENTE Air Fryer Toaster Oven Combo comes with several accessories designed to enhance your cooking experience:

- **Main Unit:** The stainless steel oven with clear-view window and interior light.
- **Spit Rod and Handle:** For rotisserie cooking, perfect for whole chickens or roasts.
- **Air Fryer Basket:** Ideal for air frying foods like fries, chicken wings, and vegetables, allowing for even air circulation.
- **Baking Pan:** A versatile pan for baking cookies, roasting vegetables, or heating leftovers.
- **Wire Rack:** For toasting bread, baking pizzas, or supporting other cookware.
- **Removable Drip Tray:** Located at the bottom, this tray collects excess oil and crumbs for easy cleanup.



Image: The OVENTE Air Fryer Toaster Oven Combo shown with its full set of accessories, including the rotisserie rod, air fry basket, wire rack, and baking pan, along with the removable drip tray.

### 3.2 Control Panel

The control panel features four intuitive knobs for easy operation:

- **Power/Timer Knob:** Controls the cooking duration. Turn clockwise to set the timer up to 60 minutes. The oven will automatically turn off when the timer expires.
- **Function Knob:** Selects the desired cooking mode from the 7 available presets: Air Fry, Grill, Toast, Dehydrate, Bake, Roast, Broil.
- **Air Fryer Temp Knob:** Adjusts the temperature specifically for air frying functions, typically ranging from 200°F to 450°F.
- **Oven Temp Knob:** Adjusts the temperature for traditional oven functions (Bake, Roast, Broil), typically ranging from 200°F to 450°F.
- **Lamp Button:** Activates the interior light for easy monitoring of cooking progress.



Image: Front view of the OVENTE Air Fryer Toaster Oven Combo, displaying the four control knobs and the interior with a roasted chicken.

## 4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials, including any protective films or stickers. Ensure all accessories are present.
2. **Placement:** Place the appliance on a stable, heat-resistant, and level surface. Ensure there is at least 4 inches of clearance on all sides and above the oven for proper ventilation. Do not place it directly against a wall or under cabinets.
3. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash all accessories (air fry basket, baking pan, wire rack, spit rod) with warm, soapy water. Rinse thoroughly and dry completely.
4. **Burn-Off Procedure:** To eliminate any manufacturing odors, operate the oven empty for approximately 15-20 minutes. Set the Function knob to 'Bake', the Oven Temp knob to 450°F, and the Timer knob to 20 minutes. A slight odor or smoke may be present during this initial use; this is normal and will dissipate. Ensure the area is well-ventilated.
5. **Cool Down:** Allow the oven to cool completely before storing or using for cooking.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Operation

1. Place food on the appropriate accessory (baking pan, wire rack, or air fry basket) and insert it into the oven.
2. Close the oven door securely.
3. Turn the **Function Knob** to select your desired cooking mode (e.g., Air Fry, Bake, Roast).
4. Adjust the **Air Fryer Temp Knob** or **Oven Temp Knob** to set the desired temperature.
5. Turn the **Power/Timer Knob** clockwise to set the cooking time. The oven will begin heating immediately. The power indicator light will illuminate.
6. To monitor cooking progress, press the **Lamp Button** to turn on the interior light.
7. When the timer reaches zero, the oven will automatically turn off and a bell will sound.
8. Carefully remove cooked food using oven mitts.

### 5.2 Cooking Modes

The OVENTE Air Fryer Toaster Oven Combo offers 7 versatile cooking modes:

- **Air Fry:** Utilizes rapid hot air circulation for crispy results with little to no oil. Ideal for fries, chicken wings, and other fried favorites.
- **Grill:** For grilling meats, vegetables, or sandwiches.
- **Toast:** Perfect for toasting bread, bagels, and waffles.
- **Dehydrate:** Low-temperature cooking for drying fruits, vegetables, and making jerky.
- **Bake:** Standard oven function for cakes, cookies, casseroles, and more.
- **Roast:** For roasting meats and vegetables, providing even cooking and browning.
- **Broil:** High heat from the top element for quick browning, melting cheese, or searing.



Image: A visual representation of the various cooking functions available on the OVENTE Air Fryer Toaster Oven Combo, including Bake, Rotisserie, Air Fry, Toast, Dehydrate, and Broil.

### 5.3 Temperature and Time Settings

Refer to your recipe or food packaging for recommended cooking temperatures and times. The oven's temperature range is 200°F to 450°F. Adjust the respective temperature knob (Air Fryer Temp or Oven Temp) and the Timer knob accordingly. For best results, preheat the oven for 5-10 minutes before placing food inside, especially for baking and roasting.



Image: The OVENTE Air Fryer Toaster Oven Combo with its door open, revealing a baking pan filled with freshly baked cookies, demonstrating its baking capability.

## 6. MAINTENANCE AND CLEANING

**Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.**

- **Interior Cleaning:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Do not use steel wool or abrasive cleaners, as they can damage the non-stick coating.

- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- **Accessories:** The air fry basket, baking pan, wire rack, and spit rod can be washed with warm, soapy water. For baked-on food, soak them in warm water before cleaning. The removable drip tray should be emptied and cleaned after each use to prevent grease buildup.
- **Crumb Tray:** Regularly slide out and empty the crumb tray located at the bottom of the oven. Wash it with warm, soapy water and dry thoroughly before reinserting.
- **Storage:** Ensure the oven is clean and dry before storing. Store it in a cool, dry place.

## 7. TROUBLESHOOTING

| Problem                                 | Possible Cause   | Solution  |
|---|--|---|
| Appliance does not turn on.             | Not plugged in; power outlet malfunction; timer not set. | Ensure the power cord is securely plugged into a working outlet. Set the timer knob to the desired cooking duration.  |
| Uneven cooking.                         | Overcrowding; improper temperature/time; food placement. | Do not overcrowd the oven; cook in smaller batches if necessary. Adjust temperature and time according to recipe. Ensure food is placed centrally on the rack/basket. |
| Smoke or unusual odor during first use. | Residual manufacturing oils.                             | This is normal during initial burn-off. Ensure good ventilation. If smoke persists after initial use, unplug and contact customer service.                            |
| Food not crispy when air frying.        | Too much oil; overcrowding; incorrect temperature.       | Use minimal oil. Do not overcrowd the air fry basket to allow for proper air circulation. Ensure correct air fry temperature is set.                                  |
| Control knob markings fading.           | Wear and tear; harsh cleaning.                           | Clean knobs gently with a soft, damp cloth. Avoid abrasive cleaners.  |

## 8. SPECIFICATIONS

| Feature      | Detail              |
|--------------|---------------------|
| Brand        | OVENTE              |
| Model Name   | OFM2025BR           |
| Capacity     | 25 Liter (26 Quart) |
| Power        | 1700 Watts          |
| Control Type | Knob Control        |

| Feature                        | Detail   |
|--------------------------------|--|
| Temperature Range              | 200 - 450 Degrees Fahrenheit                             |
| Product Dimensions (L x W x H) | 16.88 x 15.88 x 15.5 inches                              |
| Item Weight                    | 22 pounds  |
| Included Components            | Air Fry Basket, Baking Pan, Spit Rod & Handle, Wire Rack |
| Color                          | Silver   |
| Material                       | Stainless Steel  |



Image: A diagram illustrating the physical dimensions of the OVENTE Air Fryer Toaster Oven Combo, with measurements for width, depth, and height.

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

OVENTE warrants that this product shall be free from defects in material and workmanship under normal use and conditions, for **1 year from the original purchase date**. This warranty applies only to the original purchaser and is not transferable.



Image: The OVENTE Air Fryer Toaster Oven Combo displayed in a kitchen setting with prepared food, featuring a prominent '1 Year Warranty' seal.

## 9.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact OVENTE Customer Service. You may also find additional resources and FAQs on the official OVENTE website.

A digital version of this user manual is available for download: [User Manual \(PDF\)](#)