

[Manuals.plus](#) /

› [Kikkaboo](#) /

› Kikkaboo Tirad Alonsy Stroller User Manual

Kikkaboo 3801006021177

Kikkaboo Tirad Alonsy Stroller User Manual

Model: 3801006021177

INTRODUCTION

Thank you for choosing the Kikkaboo Tirad Alonsy Stroller. This manual provides essential information for the safe and proper use, assembly, maintenance, and troubleshooting of your stroller. Please read it thoroughly before use and keep it for future reference.



Figure 1: Kikkaboo Trirad Alonsy Stroller. This image shows the complete stroller from a front-side angle, highlighting its black camouflage canopy, adjustable handle, and three-wheel design with front pedals.

IMPORTANT SAFETY INSTRUCTIONS

- Always use the 3-point safety belt to secure your child. Ensure shoulder pads are correctly positioned.
- Never leave your child unattended in the stroller.
- Ensure all locking devices are engaged before use.
- Do not overload the storage basket or hang bags on the handle, as this may cause the stroller to tip over.
- Keep children clear of moving parts when making adjustments.
- This stroller is designed for one child only.
- Regularly check for loose parts, damaged components, or worn fabric. Discontinue use if any damage is found.

SETUP AND ASSEMBLY

The Kikkaboo Trirad Alonsy Stroller features an innovative system for quick and easy folding and unfolding. Follow these steps for initial setup:

1. Unfolding the Stroller:

Place the folded stroller on a flat surface. Release the folding latch (if present). Grasp the handle and lift upwards until the frame locks into place. Ensure all locking mechanisms are securely engaged with an audible click.

2. Attaching Wheels:

Insert the wheel axles into the designated slots on the stroller frame until they click into place. Pull on the wheels to ensure they are securely attached.

3. Attaching the Canopy:

Slide the canopy attachments onto the frame until they are firmly in place. Extend the canopy for sun protection.

4. Adjusting Handle Height:

Locate the handle height adjustment buttons on either side of the handle. Press these buttons and adjust the handle to one of the 3 available positions. Release the buttons to lock the handle in place.

OPERATING INSTRUCTIONS

- **Securing Your Child:**

Place your child in the seat. Fasten the 3-point safety belt, ensuring the shoulder pads are comfortable and the belt is snug but not too tight. Adjust the straps as needed.

- **Adjusting the Seat:**

The seat can be adjusted to 3 different positions. Locate the recline mechanism (usually a lever or strap at the back of the seat) and adjust to the desired angle. Ensure it locks securely.

- **Adjusting the Backrest:**

The backrest is independently adjustable. Use the mechanism at the rear of the backrest to set it to the desired upright or reclined position.

- **Using the Front Wheel Lock:**

To stop the movement of the front wheel pedals, press the designated button located near the front wheel assembly. This locks the pedals in place, preventing rotation.

- **Folding the Stroller:**

Ensure the seat is in the most upright position. Locate the folding mechanism (often on the handle or frame). Engage the mechanism and push or pull the stroller to fold it. Secure with the folding latch.

CARE AND MAINTENANCE

- **Cleaning:**

Wipe the frame with a damp cloth and mild soap. Do not use abrasive cleaners. Fabric parts can be spot cleaned with a mild detergent. Refer to care labels for specific washing instructions if removable.

- **Lubrication:**

Periodically lubricate moving parts (e.g., wheel axles, folding mechanisms) with a silicone-based lubricant to ensure smooth operation.

- **Storage:**

Store the stroller in a dry, cool place away from direct sunlight and extreme temperatures to prevent material

degradation.

• **Inspections:**

Regularly inspect all components, including wheels, brakes, safety harness, and frame, for wear, damage, or loose fasteners. Tighten any loose screws.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller does not fold/unfold smoothly.	Mechanism is stiff or obstructed.	Ensure seat is in upright position. Check for obstructions. Apply silicone lubricant to moving parts.
Wheels squeak or are difficult to turn.	Dirt/debris in axles, lack of lubrication.	Clean wheels and axles. Apply silicone lubricant.
Safety harness is difficult to buckle/unbuckle.	Buckle is dirty or misaligned.	Clean the buckle mechanism. Ensure straps are not twisted.
Stroller feels unstable.	Loose connections or overloaded.	Check all frame connections and ensure they are locked. Do not exceed weight limits or overload storage.

SPECIFICATIONS

- Model Number:** 3801006021177
- Brand:** Kikkaboo
- Type:** Trirad Alonsy Stroller
- Gender:** Unisex
- Dimensions (L x W x H):** 110 x 49 x 102 cm (approximately 43.3 x 19.3 x 40.2 inches)
- Weight:** 9 kg (approximately 19.8 lbs)
- Safety Features:** 3-point safety belt
- Adjustments:** 3-position adjustable seat, adjustable backrest, 3-position adjustable handle height
- Folding:** Innovative quick and easy folding system

WARRANTY INFORMATION

Kikkaboo products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Kikkaboo website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, spare parts, or technical support, please contact Kikkaboo customer service. Contact details can typically be found on the product packaging or the official Kikkaboo website.

Website: www.kikkaboo.com (Note: This is a placeholder URL. Please refer to official product documentation for the correct website.)



