

Dragon Touch XKS0004-US

Dragon Touch Modern 10 Digital Picture Frame User Manual

Brand: Dragon Touch | Model: XKS0004-US

1. INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your Dragon Touch Modern 10 Digital Picture Frame. Please read this guide thoroughly to ensure optimal performance and a seamless user experience. This device allows you to display and share your cherished photos and videos with family and friends, offering a vibrant 2K touch screen display and versatile connectivity options.

2. PRODUCT FEATURES

- **HD 2K Touch Screen:** Features a 2048 x 1536 resolution display with a 4:3 aspect ratio for quick and simple operation.
- **Multiple Functions:** Supports photo and video playback, alarm settings, calendar, slideshows, and weather forecasts.
- **Wireless Sharing:** Upload photos and videos wirelessly via the "OurPhoto" app, email, or cloud services.
- **Easy Connectivity:** Supports 2.4 GHz Wi-Fi for instant photo and video reception.
- **Large Internal Storage:** Equipped with 16GB of storage, capable of holding over 40,000 photos (based on 300KB per photo).
- **Auto-Rotate Function:** Automatically switches between portrait and landscape orientation for flexible placement.
- **Built-in Rechargeable Battery:** Features a 1000mAh battery for portable use and a magnetic power port for convenient charging.

3. SETUP

3.1 Unboxing and Initial Power On

Carefully remove the digital picture frame and all accessories from the packaging. Connect the magnetic charging cable to the designated port on the back of the frame. Plug the power adapter into a wall outlet to power on the device.



Image: The Dragon Touch Modern 10 Digital Picture Frame charging via its magnetic power port.

3.2 Wi-Fi Connection


Upon first use, the frame will guide you through the initial setup process, including connecting to your Wi-Fi network. Ensure you are connecting to a 2.4 GHz Wi-Fi network, as 5 GHz networks are not supported.

3.3 App Download and Frame Binding

Download the "OurPhoto" app from Google Play Store (for Android devices) or Apple App Store (for iOS devices). Once installed, open the app and follow the on-screen instructions to bind your frame using its unique Frame ID. The Frame ID can be found in the device's settings under 'Device Info'.

EFFORTLESS USE WITH SIMPLE STEPS

APP user-friendly & makes it easy-to-use for all ages.

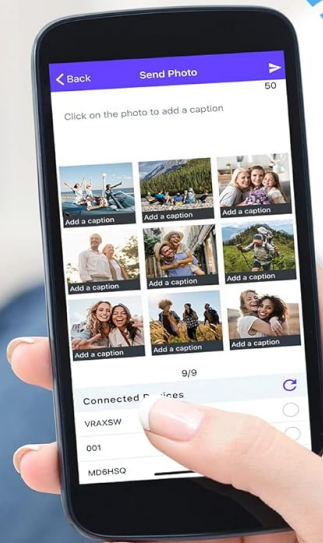

Download OurPhoto



Add Devices by code



Share photos & videos

Image: A smartphone screen showing the 'OurPhoto' app interface with instructions for connecting and sharing photos.

For email setup, send an email with the subject line 'bd+frame ID' (e.g., bd123456) to the frame's dedicated email address (e.g., kipper1frame@ourphoto.cn, as seen in user reviews, please refer to your device's specific email address in settings).

4. OPERATING THE DEVICE

4.1 Touch Screen Navigation

The device features a responsive touch screen for intuitive navigation. Tap on icons to access different functions like photos, videos, settings, alarms, and weather. Swipe left or right to browse through photos in slideshow mode.

LARGE ENOUGH, FOR EVERYTHING

10.1 Inch screen displays many functions.



Wifi



Photo



Video



Slide Show



IPS Touchscreen



Clock



Weather



Calendar

Image: The digital frame's home screen showing various interactive tiles for different features.

4.2 Slideshow and Auto-Rotate

The frame automatically plays a slideshow of your uploaded content. You can customize the slideshow interval and transition effects in the 'Album Settings'. The auto-rotate feature ensures that photos are always displayed in the correct orientation, whether the frame is placed horizontally or vertically.

SWITCH THE ANGLE AS YOU WISH



Automatic rotation makes the photos always be right-side-up.



Image: Two digital frames illustrating the automatic rotation of images when the frame orientation changes.

4.3 Video Playback

The frame supports video playback. Navigate to the 'Video' section on the home screen to view your uploaded video clips. Videos are limited to 30 seconds in length.

Your browser does not support the video tag.

Video: A user demonstrating the features of the Dragon Touch Modern 10 Digital Picture Frame, including its display quality and various functions. This video is provided by a seller.

5. MANAGING CONTENT

5.1 Uploading via OurPhoto App

The

Related Documents - XKS0004-US

	<p>Dragon Touch Classic 10 FHD Wifi Cloud Photo Frame User Manual</p> <p>This user manual provides comprehensive instructions for setting up, connecting, and operating the Dragon Touch Classic 10 FHD Wifi Cloud Photo Frame, including app integration, photo uploading methods, and system settings.</p>
	<p>Dragon Touch Classic 10 Elite Digital Photo Frame User Manual</p> <p>Comprehensive user manual for the Dragon Touch Classic 10 Elite Digital Photo Frame, detailing setup, app integration, photo management, settings, and troubleshooting.</p>
	<p>Dragon Touch Classic 10 Elite Digital Photo Frame User Manual</p> <p>A comprehensive guide to setting up, using, and managing your Dragon Touch Classic 10 Elite Digital Photo Frame, including app integration, photo uploading, and system settings.</p>
	<p>Dragon Touch MODERN 15 Digital Photo Frame User Manual</p> <p>Comprehensive user manual for the Dragon Touch MODERN 15 Digital Photo Frame, covering setup, photo uploading via app, email, USB, and computer, key features like slideshows, multiple functions, general settings, technical specifications, troubleshooting, and FCC warnings.</p>
	<p>Dragon Touch Digital Photo Frame Classic 15 User Manual</p> <p>Comprehensive user manual for the Dragon Touch Digital Photo Frame Classic 15, covering setup, installation, app usage, photo uploading, management, and troubleshooting.</p>
	<p>Dragon Touch Classic 8 Digital Photo Frame User Manual</p> <p>User manual for the Dragon Touch Classic 8 Digital Photo Frame, covering setup, app usage, photo uploading, deletion, settings, and troubleshooting.</p>

