



Manuals.plus /

› ezControl /

› ezControl Remote Control for ONN Roku TV Instruction Manual (Model ONN-V4-NSHV-3621)

## ezControl ONN-V4-NSHV-3621

# ezControl Universal Remote Control for ONN Roku TV

Model: ONN-V4-NSHV-3621

## INTRODUCTION

---

This manual provides instructions for the ezControl Universal Remote Control, designed specifically for use with ONN Roku TVs. This remote is pre-programmed and requires no additional setup or pairing for compatible ONN Roku TV models. It includes dedicated buttons for popular streaming services such as Netflix, Sling, Hulu, and Vudu.

**Important Note:** This remote control is compatible exclusively with ONN Roku TVs. It will **not** function with Roku Streaming Boxes, Roku Sticks, or Roku TVs from other brands. This remote does not feature voice search, pairing buttons, or a headphone jack.

Compatible ONN Roku TV models include, but are not limited to: 100012584, 100012585, 100012586, 100018971, 100018972, 100012589, and 100012590.

## SETUP

---

The ezControl remote is designed for immediate use with compatible ONN Roku TVs. No programming or pairing is required.

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Once batteries are installed, the remote is ready to operate your ONN Roku TV.



Image: Front view of the ezControl remote control, highlighting the button layout.

# OPERATING INSTRUCTIONS

---

This section details the functions of the buttons on your ezControl remote control.

## Button Functions

- **Power** ( ): Turns the TV on or off.
- **Home** (△): Returns to the Roku TV home screen.
- **Back** (←): Returns to the previous screen or menu.
- **Navigation Pad (Up, Down, Left, Right)**: Used to navigate through menus and content.
- **OK**: Selects a highlighted item.
- **Volume Up/Down** ( ): Adjusts the TV volume. Located on the side of the remote.
- **Mute** ( ): Mutes or unmutes the TV audio. Located on the side of the remote.
- **Instant Replay** (◀◀): Jumps back a few seconds during video playback.
- **Rewind** (◀◀): Rewinds video playback.
- **Play/Pause** (▶): Plays or pauses video content.
- **Fast Forward** (▶▶): Fast forwards video playback.
- **Asterisk** (\*): Accesses options or settings within certain apps or menus.
- **Netflix, Sling, Hulu, Vudu**: Dedicated buttons for direct access to these streaming applications.



**With Volume Control & Mute buttons**

Image: Side view of the remote, showing volume and mute buttons.



Image: Front and side views of the remote control.

## MAINTENANCE

---

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.
- **Disposal:** Dispose of used batteries according to local regulations.

## TROUBLESHOOTING

---

If you encounter issues with your remote control, refer to the following common solutions:

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"><li>• Check if the batteries are inserted correctly with the correct polarity.</li><li>• Replace the batteries with fresh AAA batteries.</li><li>• Ensure there is a clear line of sight between the remote and the TV's infrared receiver. Remove any obstructions.</li></ul>
Remote only works intermittently.	<ul style="list-style-type: none"><li>• Batteries may be low. Replace them.</li><li>• Ensure you are within the effective range of the TV's IR receiver.</li></ul>
Remote does not control my non-ONN Roku TV or Roku streaming device.	This remote is designed exclusively for ONN Roku TVs. It is not compatible with Roku Streaming Boxes, Roku Sticks, or Roku TVs from other brands.

## SPECIFICATIONS

---

- **Model Number:** ONN-V4-NSHV-3621
- **Brand:** ezControl
- **Product Dimensions:** 5.5 x 1.5 x 0.5 inches
- **Item Weight:** 2 ounces
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** No Programming Required, Universal (for ONN Roku TVs)
- **Max Number of Supported Devices:** 1
- **Compatible Devices:** Television (specifically ONN Roku TVs)

## WARRANTY AND SUPPORT

---

Specific warranty information and direct support contact details are not provided within this manual. Please refer to the product packaging or the retailer's website for any available warranty terms or customer support options.