

AGARO Elite 750W

AGARO ELITE 750 Watt Sandwich/Panini Maker Instruction Manual

Model: Elite 750W

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Safety Instructions](#) [Product](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the AGARO ELITE 750 Watt Sandwich/Panini Maker. This appliance is designed for preparing delicious sandwiches and paninis with ease. Its non-stick grill plates and automatic thermostat ensure efficient and consistent results. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The AGARO ELITE 750 Watt Sandwich/Panini Maker, showcasing its 2-in-1 design for both toasting and grilling, along with its

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT OVERVIEW

The AGARO ELITE 750 Watt Sandwich/Panini Maker features a compact design with essential components for safe and efficient operation.

- **Non-Stick Grill Plates:** Fixed plates designed for easy food release and cleaning.
- **Cool Touch Handle:** Ensures safe handling during and after operation.
- **Indicator Lights:** Red light for preheating, green light for ready-to-cook.
- **Safety Lock:** Keeps the top cover securely closed during cooking.
- **Anti-Skid Feet:** Provides stability on countertops.
- **Cord Winder:** For convenient storage of the power cord.

EASY TO CLEAN

Non stick grill plates ensures a safe and easy cleaning

AGARO



Image: Detailed view of the sandwich maker highlighting the Cool Touch Handle, the red (preheating) and green (ready for cooking) indicator lights, and the safety lock mechanism.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the sandwich maker from its packaging. Retain the packaging for future storage or transport.
2. **Clean Plates:** Wipe the non-stick grill plates with a damp cloth or sponge. Dry thoroughly.
3. **Position:** Place the appliance on a stable, flat, heat-resistant surface, away from flammable materials.
4. **Power Connection:** Ensure the power cord is fully extended and plug the appliance into a suitable 220V electrical outlet.
5. **Initial Heating (Burn-off):** For the first use, it is recommended to operate the appliance empty for approximately 5-10 minutes to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.
6. **Cool Down:** Unplug the appliance and allow it to cool completely. Wipe the plates again if necessary.

5. OPERATING INSTRUCTIONS

Follow these steps to prepare your sandwiches or paninis:

1. **Prepare Ingredients:** Assemble your sandwich ingredients. For best results, use bread slices that fit the grill plates.
2. **Preheat:** Close the sandwich maker and plug it into the power outlet. The red indicator light will illuminate, indicating that the appliance is preheating.
3. **Ready for Cooking:** Once the appliance reaches the optimal cooking temperature, the green indicator light will illuminate. This indicates the sandwich maker is ready for use.
4. **Place Sandwich:** Carefully open the sandwich maker using the cool-touch handle. Place your prepared sandwich onto the lower grill plate. Do not overfill.
5. **Close and Lock:** Gently close the top cover and engage the safety lock. Do not force the lid shut.

6. **Cook:** Allow the sandwich to cook for approximately 2-5 minutes, or until golden brown and crispy, depending on your preference and ingredients. The green light may cycle on and off during cooking as the thermostat maintains temperature.
7. **Remove Sandwich:** Once cooked, carefully open the sandwich maker. Use a heat-resistant plastic or wooden spatula to remove the sandwich. Do not use metal utensils, as they can damage the non-stick coating.
8. **Repeat:** Close the lid to allow the appliance to reheat for the next sandwich (green light will illuminate again when ready).
9. **Finish:** When finished cooking, unplug the appliance from the power outlet and allow it to cool completely before cleaning.



Image: The AGARO ELITE Sandwich Maker demonstrating its versatility by preparing various grilled items, including barbecue, grilled vegetables, tikka, aloo tikki, and sandwiches.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your appliance.

1. **Unplug and Cool:** Always unplug the sandwich maker from the power outlet and allow it to cool completely before cleaning.
2. **Clean Grill Plates:** Wipe the non-stick grill plates with a soft, damp cloth or sponge. For stubborn food residues, dampen a cloth with a small amount of cooking oil and wipe the plates, then wipe clean with a damp cloth. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not immerse the appliance in water or any other liquid.
4. **Storage:** Once clean and dry, you can store the sandwich maker in a vertical position to save space. Use the cord winder for neat cord storage.

Easy to Use Grill Plates

Just assemble your sandwich and put it inside the preheated sandwich maker. Once done, you'll have grilled toasted sandwich with sealed edges and warm filling



Image: A hand wiping the non-stick grill plates of the AGARO ELITE Sandwich Maker with a cloth, illustrating the ease of cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your AGARO ELITE Sandwich Maker, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in, power outlet malfunction, or appliance fault.	Ensure the appliance is securely plugged into a working power outlet. Test the outlet with another device. If the problem persists, contact customer support.
Red light is on, but green light does not illuminate.	Appliance has not reached operating temperature.	Allow more time for preheating. The green light will illuminate once the optimal temperature is reached.
Sandwiches are not cooking evenly.	Uneven placement of ingredients or insufficient preheating.	Ensure ingredients are spread evenly. Allow the appliance to fully preheat until the green light illuminates. You may also rotate the sandwich halfway through cooking.
Food sticks to the grill plates.	Plates not properly cleaned, or excessive sugar in ingredients.	Ensure plates are clean before use. Lightly brush plates with cooking oil or butter if necessary. Avoid excessive sugar in fillings.
Smoke or unusual odor during operation.	Initial burn-off, food residue, or appliance malfunction.	During first use, this is normal. For subsequent uses, ensure plates are clean of food residue. If smoke is excessive or persistent, unplug immediately and contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model	Elite 750W
Wattage	750 Watts
Voltage	220 Volts
Material	Stainless Steel (exterior)
Plate Type	Non-Stick Die Cast Aluminium, Fixed Plates
Special Features	Cool Touch Handle, Automatic Thermostat, Overheat Safety Protection, Anti-Skid Feet, Top Cover Locking System
Product Dimensions (D x W x H)	24D x 23.6W x 10H Centimeters
Item Weight	1100 Grams
Included Components	Main Unit

Cool Touch Handle



RED: Preheating
GREEN: Ready For Cooking

Safety Lock



Image: Diagram illustrating the dimensions of the AGARO ELITE Sandwich Maker (24 cm D x 23.6 cm W x 10 cm H) and its grill plates (23.6 cm x 13.3 cm).

9. WARRANTY AND CUSTOMER SUPPORT

The AGARO ELITE 750 Watt Sandwich/Panini Maker comes with a **1 Year Manufacturer's Warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical assistance, or any other inquiries, please contact AGARO customer support:

- **Manufacturer:** AGARO
- **Importer Contact Information:** info@uclindia.com
- **Packer Contact Information:** Universal Corporation Ltd. Toll Free Number - 1800-120-7897

Please retain your purchase receipt as proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question