

Manuals.plus /
› [IKEA](#) /
› IKEA ORSALA LED Work Lamp User Manual

IKEA 304.829.07

IKEA ORSALA LED Work Lamp User Manual

Model: **ORSALA (304.829.07)** | Brand: **IKEA**

1. PRODUCT OVERVIEW

The IKEA ORSALA LED Work Lamp is a versatile and dimmable lighting solution designed for various workspaces, including desks and tables. Its sleek white design and adjustable arm provide focused illumination, making it ideal for reading, studying, or crafting. This lamp features integrated LED technology for energy efficiency and long-lasting performance.



Figure 1: The IKEA ORSALA LED Work Lamp in white, showcasing its adjustable arm and stable round base.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the lamp. Retain this manual for future reference.

- **Electrical Safety:** Only connect the lamp to a power outlet that matches the voltage specified on the product label. Do not use if the cord or plug is damaged.
- **Indoor Use Only:** This lamp is designed for indoor use in dry locations. Do not expose to water or high humidity.

- **Heat:** The LED light source generates minimal heat, but avoid covering the lamp head with flammable materials.
- **Cleaning:** Disconnect from power before cleaning. Use a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Disposal:** Dispose of the product responsibly according to local regulations for electronic waste. Do not dispose of with household waste.

3. SETUP

Follow these steps to set up your IKEA ORSALA LED Work Lamp:

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts are present: lamp unit (base, arm, lamp head), and power adapter.
2. **Positioning:** Place the lamp base on a stable, flat surface, such as a desk or table. Ensure there is sufficient space for the adjustable arm to move freely.
3. **Connect Power:** Insert the power adapter plug into the lamp's power input port, located at the back of the base.
4. **Plug In:** Plug the power adapter into a suitable wall outlet.
5. **Adjust:** Gently adjust the lamp arm and head to your desired position. The joints are designed for smooth movement.

4. OPERATING INSTRUCTIONS

The IKEA ORSALA lamp features a simple control for power and dimming.

- **Power On/Off:** Locate the button on the lamp base. Press the button once to turn the lamp on. Press it again to turn the lamp off.
- **Dimming Function:** When the lamp is on, press and hold the button to adjust the brightness. The light will gradually dim or brighten. Release the button when the desired brightness level is reached. The lamp will remember the last brightness setting when turned off and on again.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your lamp.

- **Cleaning:**
 - Always unplug the lamp from the power outlet before cleaning.
 - Wipe the lamp surfaces with a soft, dry cloth.
 - For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.
 - Do not use harsh chemicals, abrasive cleaners, or sprays directly on the lamp.
- **LED Light Source:** The LED light source in this lamp is integrated and not replaceable. Do not attempt to open the lamp head or replace the LEDs.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. If the cord is damaged, the lamp should not be used and should be replaced by qualified personnel.

6. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply. Lamp not plugged in correctly. Faulty outlet.	Ensure the power cord is securely plugged into both the lamp and the wall outlet. Try plugging another device into the outlet to confirm it is working.
Dimming function not working.	Incorrect operation.	Ensure the lamp is on. Press and <i>hold</i> the power button to activate dimming. Releasing the button sets the brightness.
Light flickers or is inconsistent.	Unstable power supply. Internal fault.	Try plugging the lamp into a different outlet. If the problem persists, contact IKEA customer support.

If the problem persists after trying these solutions, please contact IKEA customer support for assistance. Do not attempt to repair the lamp yourself.

7. SPECIFICATIONS

- **Model Name:** ORSALA
- **Model Number:** 304.829.07
- **Brand:** IKEA
- **Light Source Type:** Integrated LED
- **Color:** White
- **Shade Material:** Plastic
- **Dimmable:** Yes
- **Intended Use:** Indoor, dry locations
- **First Available Date on Amazon.co.jp:** 2021/04/23
- **ASIN:** B08PKR7HMH

8. WARRANTY AND SUPPORT

IKEA products are designed with quality and durability in mind. For information regarding warranty coverage, please refer to the warranty documentation provided at the time of purchase or visit the official IKEA website for your region.

For technical support, spare parts, or further assistance, please contact IKEA customer service. You can find contact information on the IKEA website or in your purchase documentation.

When contacting support, please have your model number (304.829.07) and proof of purchase readily available.

© 2023 IKEA. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08PKR7HMH>

More documents and user manuals: <https://manuals.plus/>