

Indesit BTWS72200SPN

Indesit BTWS72200SPN 7kg 1200RPM Top-Load Washing Machine User Manual

Model: BTWS72200SPN

1. INTRODUCTION

Thank you for choosing an Indesit appliance. This user manual provides essential information for the correct and safe use of your new Indesit BTWS72200SPN top-load washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

This washing machine is designed for domestic use only. It features a 7 kg capacity and a spin speed of 1200 RPM, offering efficient and effective laundry care.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use extension cords or multiple adapters. The voltage and frequency must match the specifications (220-230V, 50Hz).
- **Water Connection:** Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction.
- **Installation:** The appliance must be installed by a qualified person in accordance with local regulations. Ensure the machine is level and stable.
- **Maintenance:** Always unplug the appliance before performing any cleaning or maintenance.
- **Usage:** Do not overload the washing machine. Do not wash items that are soiled with flammable substances.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Keep packaging materials out of reach of children. Remove any transport bolts or bracing devices from the rear of the machine before use. Refer to the installation guide for detailed instructions on removing transport bolts.

3.2 Positioning

Place the washing machine on a flat, stable floor. Ensure there is adequate space around the appliance for ventilation and access. The dimensions are approximately 40 cm (Width) x 60 cm (Depth) x 90 cm (Height).

3.3 Leveling

Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level. A level machine reduces vibration and noise during operation.

3.4 Water Connection

Connect the water inlet hose to a cold water tap. Ensure the hose is not kinked or twisted. Connect the drain hose to a suitable drain pipe or place it over a sink, ensuring it is securely fastened to prevent displacement during draining.

3.5 Electrical Connection

Plug the power cord into a grounded electrical outlet. The appliance requires 220-230V AC at 50Hz and a 10A current. The power cable length is 1.2 meters. Do not use adapters or extension cords.



Figure 1: Front view of the Indesit BTWS72200SPN top-load washing machine.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features a rotary knob for program selection, various buttons for additional functions, and a digital display for cycle information and remaining time.



Figure 2: Close-up view of the washing machine's control panel, showing the program selector knob and function buttons.

4.2 Loading Laundry

Open the top lid of the washing machine. Load laundry into the drum, ensuring not to exceed the maximum capacity of 7 kg. Distribute the load evenly to prevent imbalance during spinning.



Figure 3: View of the open drum, ready for loading laundry.

4.3 Adding Detergent

Add the appropriate amount of detergent and fabric softener to the designated compartments in the dispenser drawer. Refer to your detergent packaging for recommended dosages.

4.4 Selecting a Program

Turn the rotary knob to select the desired washing program. The digital display will show the estimated cycle duration.

4.5 Starting and Pausing a Cycle

Press the Start/Pause button to begin the selected program. To pause a running cycle, press the Start/Pause button

again. The 'Add Garment' function allows you to add items during the initial stages of a cycle.

5. WASHING PROGRAMS

Your Indesit washing machine offers a variety of programs tailored for different fabric types and soil levels. Below are descriptions of key programs:

- **Extra Wash:** Ideal for tough, dried-on stains like coffee or chocolate. Select this option with any rapid cycle for enhanced cleaning results.
- **Cotton 60:** Provides excellent washing results for cotton garments at 60°C, completing in approximately 59 minutes.
- **Synthetics 40:** Effectively removes stains from synthetic items using a 40°C cycle, finishing in about 59 minutes.
- **Cotton 40:** Specifically designed for extra care of cotton garments, removing stains at 40°C in approximately 45 minutes.
- **Water Balance Plus:** An innovative program designed to significantly reduce water, energy, and time consumption. For small loads, it can save up to 70% water and 50% energy, with the cycle being 35% faster.
- **Delay:** Allows you to program your wash cycles to start at a later time, offering convenience and flexibility.
- **Turn & Wash:** A dedicated program for cotton and synthetic garments. Simply turn the knob to select 'Turn & Wash' for great results in less than 45 minutes.
- **RapidWash:** A set of 5 quick cycles, each lasting less than 59 minutes. These cycles are designed for various fabric types including cotton, synthetics, and wool, providing high-quality washing in a short time.

General wash programs also include Cold, Eco, Rinse and Spin, and Spin/Drain.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.2 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

6.3 Cleaning the Filter

The washing machine has a filter that collects lint and small objects. Refer to the detailed instructions in the full manual for how to access and clean this filter regularly.

6.4 Care for the Drum

To prevent odors, leave the lid slightly ajar after each wash to allow the drum to air dry. Periodically run a maintenance wash cycle with a washing machine cleaner.

7. TROUBLESHOOTING

Before contacting customer service, check the following common issues:

- **Machine does not start:** Ensure the power cord is plugged in, the door is closed properly, and the Start/Pause button has been pressed. Check if the water supply tap is open.
- **Water not draining:** Check if the drain hose is kinked or blocked. Ensure the filter is clean.
- **Excessive vibration/noise:** Ensure the machine is level and all transport bolts have been removed. Check if the load is balanced inside the drum.
- **Detergent residue:** Ensure you are using the correct amount of detergent and that the dispenser drawer is clean.

If the problem persists after checking these points, please refer to the full troubleshooting guide in the comprehensive manual or contact Indesit customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Indesit
Model	BTWS72200SPN
Type	Top-Load Washing Machine
Installation Type	Freestanding
Capacity	7 kg
Spin Speed	1200 RPM
Energy Efficiency Class	E (Scale A to G)
Energy Consumption (100 cycles)	78 kWh
Water Consumption (per cycle)	45 L
Noise Level (Spin)	78 dB (Class C)
Dimensions (W x D x H)	400 mm x 600 mm x 900 mm
Weight	57 kg
Voltage	220-230 V AC
Frequency	50 Hz
Current	10 A
Connected Load	2100 W
Control Type	Buttons, Rotary Knob
Drum Volume	42 L
Adjustable Feet	Yes
Delayed Start	Yes
Add Garment Function	Yes

LED Program Stage Indicator	Yes
-----------------------------	-----


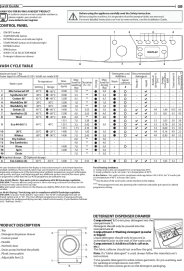 

9. WARRANTY AND SUPPORT


For information regarding warranty terms and conditions, please refer to the warranty card provided with your appliance or visit the official Indesit website. For technical assistance, spare parts, or to report a fault, please contact Indesit customer support in your region. Have your appliance model number (BTWS72200SPN) and serial number ready when contacting support.



© 2024 Indesit. All rights reserved. Information in this manual is subject to change without notice.


Related Documents - BTWS72200SPN

	<p>Indesit TIDW 70110 Top Loading Washer: Instructions & Installation Manual</p> <p>Comprehensive instructions and installation guide for the Indesit TIDW 70110 top loading washing machine, covering safety, setup, operation, maintenance, and troubleshooting.</p>
	<p>Indesit Washer-Dryer Quick Guide: Operation, Care, and Troubleshooting</p> <p>A concise guide to operating your Indesit washer-dryer, covering control panel functions, wash cycles, display indicators, maintenance, and troubleshooting tips. Learn how to use your appliance efficiently and effectively.</p>
	<p>Indesit TIDW 70210 Top Loading Washer: Instructions & Installation Manual</p> <p>Comprehensive guide for the Indesit TIDW 70210 Top Loading Washer, covering installation, operation, safety, maintenance, and troubleshooting. Includes detailed instructions for use and care.</p>

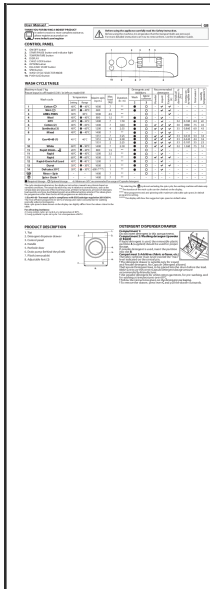 

[Indesit Push&Go Washing Machine User Manual - Operation and Maintenance](#)

 Comprehensive user manual for the Indesit Push&Go washing machine. Learn about wash cycles, control panel functions, daily use, troubleshooting, cleaning, and maintenance for your Indesit appliance.

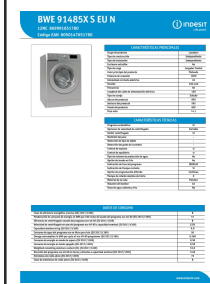

[Indesit BWE 91485X S EU N Washing Machine: Technical Specifications and Energy Data](#)

Detailed technical specifications, features, and energy consumption data for the Indesit BWE 91485X S EU N front-loading washing machine. This document provides information on dimensions, capacity, performance, and energy ratings according to EU 2017/1369 standards.



[Indesit IWDC 6143 Washer-Dryer: User Manual & Instructions for Use](#)

Indesit IWDC 6143 Washer-Dryer User Manual: Get detailed instructions for installation, operation, maintenance, and troubleshooting of your Indesit IWDC 6143 appliance. Ensure safe and efficient use with this comprehensive guide.