

Hape E3766

Hape Train Activity Table E3766 User Manual

Model: E3766

1. INTRODUCTION

This manual provides essential instructions for the assembly, operation, maintenance, and troubleshooting of your Hape Train Activity Table (Model E3766). Please read this manual thoroughly before assembly and use to ensure safe and correct operation of the product.

2. SAFETY INFORMATION

WARNING: Choking hazard - Small parts. Not for children under 3 years. Adult assembly required. Remove all packaging material before giving the toy to a child. Please retain all relevant information for future reference. Decorations and colors may vary.

- Always supervise children during play.
- Ensure all parts are securely assembled before use.
- Do not allow children to climb on the table.
- Keep batteries out of reach of small children.

3. PACKAGE CONTENTS

Carefully unpack all components and verify that all 70 pieces are present. If any parts are missing or damaged, please contact customer support.





The set includes:

- 1 x Activity Table
- 3 x Big Curved Rails
- 16 x Small Curved Rails
- 2 x Straight Rails
- 2 x Small Straight Rails
- 2 x Double-Sided Rails
- 6 x Trees
- 1 x Crane
- 1 x Repair Station
- 1 x Train Station
- 1 x Dump Truck
- 1 x Cargo Block
- 1 x Cargo Trailer
- 2 x S-Shaped Rails
- 2 x Plastic Mountain Shaped Rails
- 2 x Red Bridges
- 3 x Traffic Signs
- 1 x Figurine
- 1 x Intercity Train
- 1 x Battery-Powered Engine

4. SETUP INSTRUCTIONS

4.1 Table Assembly

1. Unfold the table legs and ensure they are locked into place.
2. Place the table top onto the assembled base, aligning any pre-drilled holes.
3. Secure the table top to the base using the provided fasteners. Refer to the included diagram for specific screw placement.

4.2 Track and Accessory Assembly

1. Arrange the track pieces on the table surface according to the suggested layout or create your own design. Ensure all track pieces connect securely.
2. Place the bridges, stations, and other accessories onto the table. Some accessories may have specific slots or connectors.
3. Position the trees, traffic signs, and figurine to complete the railway scene.



Image: Fully assembled Hape Train Activity Table with railway and accessories.

4.3 Battery Installation for Locomotive

The battery-powered engine requires 2 AAA batteries (not included).

1. Locate the battery compartment on the underside of the locomotive.
2. Using a small screwdriver, open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

5. OPERATING INSTRUCTIONS

5.1 Operating the Battery-Powered Locomotive

1. Place the locomotive onto the railway track, ensuring all wheels are properly seated on the rails.
2. Locate the ON/OFF switch on the locomotive (typically on the top or side).
3. Slide the switch to the 'ON' position to start the locomotive. It will begin to move along the track.
4. To stop the locomotive, slide the switch to the 'OFF' position.



Image: Battery-powered locomotive on the track near a station.

5.2 Interactive Play

- Use the crane to load and unload cargo blocks from the cargo trailer.
- Guide the dump truck and other vehicles along the road sections of the table.
- Engage in imaginative play by creating stories and scenarios with the figurine and various accessories.

6. MAINTENANCE

6.1 Cleaning

- Wipe the table and plastic components with a damp cloth and mild soap. Avoid harsh chemicals.
- For wooden components, wipe with a dry or slightly damp cloth. Do not immerse in water.
- Ensure all parts are completely dry before storage.

6.2 Storage

- When not in use, store the activity table in a cool, dry place away from direct sunlight.
- Remove batteries from the locomotive if the toy will not be used for an extended period to prevent leakage.
- The table may have built-in storage compartments for smaller pieces. Utilize these to keep the set organized.

7. TROUBLESHOOTING

7.1 Locomotive Not Moving

- **Check Batteries:** Ensure batteries are correctly installed with proper polarity and are not depleted. Replace with fresh AAA batteries if necessary.
- **ON/OFF Switch:** Verify the ON/OFF switch is in the 'ON' position.
- **Track Connection:** Ensure the locomotive is properly seated on the track and all track pieces are securely connected, providing a smooth path.

7.2 Track Pieces Not Connecting

- **Alignment:** Ensure the male and female connectors of the track pieces are perfectly aligned before pushing them together.
- **Obstructions:** Check for any debris or foreign objects preventing a secure connection.

7.3 Table Instability

- **Leg Locks:** Confirm that all table legs are fully extended and their locking mechanisms are engaged.
- **Fasteners:** Re-check all screws and fasteners used during assembly to ensure they are tightened.

8. SPECIFICATIONS

Feature	Detail
Brand Name	Hape
Model Name	E3766
Item Type Name	Hape Train Activity Table 70 Piece Railway Train & Table Set with Battery Powered Locomotive
Manufacturer Minimum Age	36 Months (3 Years)
Number of Pieces	70
Item Dimensions (L x W x H)	35.83 x 27.56 x 15.75 inches
Item Weight	35 Pounds
Material Type	Wood, Plastic
Power Source	Battery Powered
Battery Requirement	2 AAA batteries (not included)
Assembly Required	Yes
Estimated Assembly Time	1 Hour
Special Features	Storage compartments

9. WARRANTY AND SUPPORT

Hape products are manufactured to high-quality standards. For information regarding warranty coverage or to obtain customer support, please refer to the official Hape website or contact their customer service directly. Please have your model number (E3766) and purchase details ready when contacting support. For further assistance, visit: [Hape Official Store on Amazon](#)