

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [INDESIT](#) /

› Indesit EWC 71252 W SPT N Washing Machine User Manual

INDESIT F161009

Indesit EWC 71252 W SPT N Washing Machine User Manual

Model: F161009

1. PRODUCT OVERVIEW

This manual provides essential information for the safe and efficient operation of your Indesit EWC 71252 W SPT N washing machine. Please read it thoroughly before first use and keep it for future reference.



Figure 1: Indesit EWC 71252 W SPT N Washing Machine

The Indesit EWC 71252 W SPT N is a freestanding, front-loading washing machine designed for household use. It features a 7 kg capacity, multiple wash programs, and a maximum spin speed of 1200 rpm, ensuring efficient and thorough cleaning of your laundry.

Key Features:

- **Capacity:** 7 kg
- **Spin Speed:** Up to 1200 rpm (also supports 1000 rpm)
- **Programs:** 11 distinct wash programs
- **Control Type:** Buttons and rotary dial
- **Energy Class:** E (EU standard)

- **Dimensions (approx.):** 85 cm (H) x 60 cm (W) x 50 cm (D)

2. SAFETY INFORMATION

Always observe the following safety precautions to reduce the risk of fire, electric shock, injury to persons, or damage to the appliance.

General Safety:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not install the appliance in a very damp place or where it may be exposed to water splashes.
- Do not wash items that have been pre-treated with flammable liquids.

Electrical Safety:

- The appliance must be connected to an earthed socket.
- Ensure the voltage and frequency of the power supply match those indicated on the rating plate of the appliance (220-240 V, 50 Hz).
- Do not use extension cords or multiple adapters.
- Do not pull the power cord to unplug the appliance. Always grasp the plug firmly and pull it out of the socket.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

3. SETUP AND INSTALLATION

Unpacking:

- Remove all packaging materials, including the polystyrene base and any inserts from the drum.
- Remove the transport bolts located at the rear of the machine. Keep these bolts for future transport.

Positioning:

- Place the washing machine on a firm, flat floor.
- Ensure there is sufficient space around the appliance for ventilation and maintenance.
- The appliance is designed for freestanding installation or under a worktop.

Leveling:

- Use a spirit level to check if the appliance is perfectly level.
- Adjust the adjustable feet at the bottom of the machine until it is stable and level. This prevents excessive vibration and noise during operation.

Water Connection:

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

Electrical Connection:

- Plug the EU-type power cord into a properly earthed electrical socket.
- Ensure the socket is easily accessible after installation.
- The cable length is approximately 1.2 meters.

4. OPERATING INSTRUCTIONS

Control Panel Overview:

The control panel consists of a rotary dial for program selection and various buttons for additional functions and settings. An integrated display is not present on this model.

Loading Laundry:

- Open the washing machine door.
- Load laundry into the drum, ensuring not to overload the machine. The maximum capacity is 7 kg.
- Close the door firmly until it clicks.

Adding Detergent:

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for dosage recommendations.
- Push the dispenser drawer back in completely.

Program Selection:

- Turn the program selector dial to choose one of the 11 available wash programs.
- Each program is designed for specific fabric types and soil levels. Consult the program chart (usually inside the detergent drawer or on the machine's fascia) for details.

Starting a Wash Cycle:

- After selecting the program, press the Start/Pause button to begin the cycle.
- The machine will automatically proceed through the wash, rinse, and spin phases.

Ending a Cycle:

- The machine will indicate the end of the cycle (e.g., with an audible signal or indicator light).
- Open the door and remove your laundry.
- Leave the door slightly ajar to allow the drum to air dry and prevent odors.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

Cleaning the Detergent Dispenser:

- Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser drawer with a brush.

Cleaning the Filter:

- Locate the filter, usually at the bottom front of the machine.
- Place a shallow container underneath to catch any residual water.
- Carefully unscrew and remove the filter. Clean it of any lint or foreign objects.
- Reinsert and tighten the filter securely.

Drum Cleaning:

- Run a maintenance wash (e.g., a hot cycle with no laundry and a descaling agent or washing machine cleaner) periodically to prevent odors and limescale buildup.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start.	Power cord not plugged in; door not closed properly; no water supply.	Check power connection; ensure door is latched; check water tap.
Water not draining.	Drain hose kinked or blocked; pump filter clogged.	Straighten hose; clean pump filter.
Excessive vibration/noise.	Machine not level; transport bolts not removed; uneven load.	Adjust feet to level machine; remove transport bolts; redistribute laundry.
Detergent residue in dispenser.	Insufficient water pressure; clogged dispenser.	Check water supply; clean dispenser drawer.

7. SPECIFICATIONS

Feature	Detail
Brand	Indesit
Model Number	F161009 (EWC 71252 W SPT N)
Capacity	7 kg
Maximum Spin Speed	1200 rpm (also 1000 rpm option)
Energy Class (EU)	E (formerly A+++)
Annual Energy Consumption	77 kWh / 100 cycles (based on Eco 40-60 program)

Feature	Detail
Annual Water Consumption	46 Liters / cycle (based on Eco 40-60 program)
Noise Level (Spin)	80 dB
Number of Programs	11
Dimensions (H x W x D)	Approx. 85 cm x 59.5 cm x 50 cm
Weight	72 kg
Voltage / Frequency	220-240 V / 50 Hz
Current	10 A
Power Cord Length	1.2 m
Installation Type	Freestanding / Under worktop

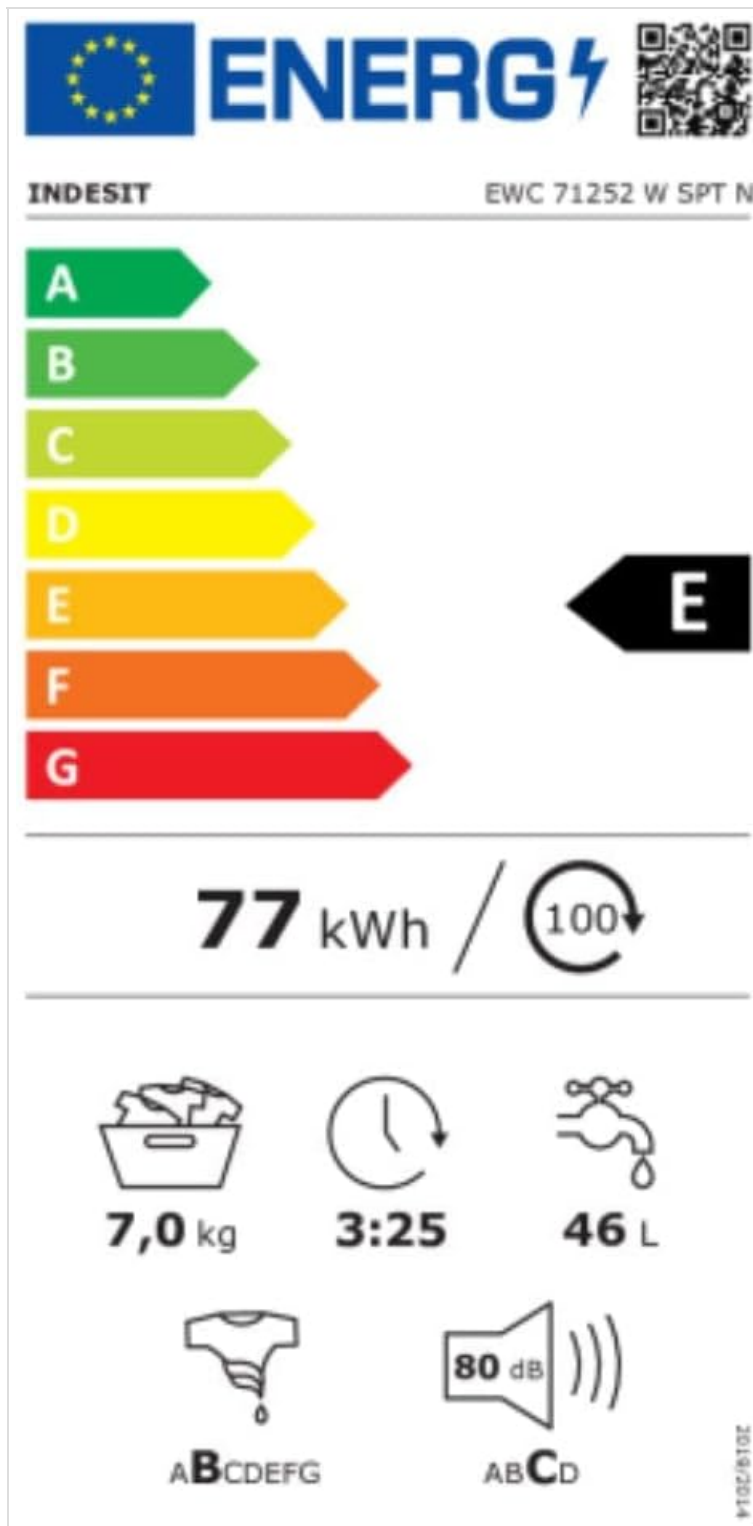


Figure 2: Energy Label for Indesit EWC 71252 W SPT N

The energy label provides detailed information on the energy efficiency, water consumption, and noise levels of the appliance, helping users make informed decisions about its environmental impact and running costs.

8. WARRANTY AND SUPPORT

Your Indesit washing machine is covered by a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions, including the warranty period and coverage details.

Customer Support:

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Contact details can typically be found on the manufacturer's official website or in the documentation supplied with your

product.

When contacting support, please have your appliance's model number (F161009) and serial number ready, as this will help them assist you more efficiently.