

Kichler Kimrose 10-Light Linear Chandelier (Model 52413BNB)

Kichler Kimrose 10-Light Linear Chandelier Instruction Manual

Model: 52413BNB

INTRODUCTION

This instruction manual provides detailed guidance for the safe and proper installation, operation, and maintenance of your Kichler Kimrose 10-Light Linear Chandelier. Designed with clear fluted glass and a brushed natural brass finish, this fixture is intended for indoor use in various room types such as bedrooms, dining rooms, and living rooms. Please read all instructions thoroughly before beginning installation and retain this manual for future reference.



Image: The Kichler Kimrose 10-Light Linear Chandelier, showcasing its clear fluted glass shades and brushed natural brass frame.

SAFETY INFORMATION

- **WARNING:** To avoid electrical shock, ensure power is turned off at the circuit breaker or fuse box before installation, servicing, or changing bulbs.
- All wiring must be in accordance with national and local electrical codes. If you are unsure about wiring, consult a qualified electrician.
- Do not exceed the maximum wattage specified for each bulb (60 watts per bulb).
- Use only the bulb type specified (E12 base).
- This fixture is designed for indoor use only and is not water resistant.
- Always handle glass components with care to prevent breakage.
- Keep flammable materials away from the light fixture when in operation.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact Kichler customer service for assistance.

- Chandelier Fixture Body (1)
- Clear Fluted Glass Shades (10)
- Mounting Hardware Kit (includes mounting plate, screws, wire nuts)
- Instruction Manual (1)

SETUP AND INSTALLATION

Professional installation is recommended for this fixture. Follow these steps carefully:

1. **Turn Off Power:** Locate the circuit breaker or fuse box controlling the power to the installation location and turn off the power.
2. **Prepare Mounting:** Secure the mounting plate to the electrical junction box in the ceiling using the provided screws. Ensure the mounting plate is firmly attached and can support the weight of the fixture.
3. **Adjust Hanging Height:** Determine the desired hanging height for your chandelier. The fixture is stem hung, allowing for adjustable length. Connect the appropriate number of rods to achieve the desired drop.
4. **Wiring:** Carefully connect the fixture's wires to the corresponding household wires. Connect the bare copper ground wire from the fixture to the green or bare copper ground wire from the junction box. Connect the white (neutral) wire from the fixture to the white (neutral) wire from the junction box. Connect the black (hot) wire from the fixture to the black (hot) wire from the junction box. Secure all connections with wire nuts and wrap with electrical tape.
5. **Attach Canopy:** Carefully push the wires into the junction box and secure the fixture's canopy to the mounting plate using the provided screws or nuts.
6. **Install Glass Shades:** Attach each of the 10 clear fluted glass shades to the fixture body according to the design. Ensure they are securely fastened.
7. **Install Bulbs:** Screw 10 incandescent bulbs (E12 base, max 60 watts each) into the sockets. Do not overtighten.
8. **Restore Power:** Once installation is complete, restore power at the circuit breaker or fuse box.

The Star of the Show

Chandeliers adorn your space like jewelry for your room. They sparkle, they accent, and they are designed to be seen.



Image: The Kichler Kimrose Chandelier elegantly installed in a dining room, demonstrating its linear design and light distribution.

OPERATING INSTRUCTIONS

The Kichler Kimrose Chandelier is designed for simple operation. Once properly installed and powered, it can be controlled via a standard wall switch. Some advanced home automation systems may offer app control capabilities, depending on your specific setup and compatible smart bulbs (not included).

- **Power On/Off:** Use the wall switch connected to the fixture to turn the chandelier on or off.
- **Bulb Type:** This fixture uses E12 base incandescent bulbs. For optimal performance and safety, do not use bulbs exceeding 60 watts per socket.
- **Light Color:** The fixture is designed for white light, which will be determined by the bulbs you choose.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your chandelier.

- **Cleaning:** Turn off power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish. For glass shades, a mild glass cleaner can be applied to a cloth, then gently wipe the glass.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. Allow bulbs to cool completely before touching. Unscrew old bulbs and replace with new E12 base, max 60-watt incandescent bulbs.

TROUBLESHOOTING

If your chandelier is not functioning correctly, perform the following basic checks:

- **Light Does Not Turn On:**

- Check that the power is on at the wall switch and the circuit breaker.
- Ensure bulbs are screwed in tightly and are not burnt out. Replace any faulty bulbs.
- Verify that wiring connections are secure. (Consult an electrician if unsure).

• **Lights Flicker:**

- Check for loose bulb connections.
- Ensure the bulbs are compatible with any dimmer switches installed.
- Verify stable power supply.

• **Humming Noise:**

- Some dimmer switches can cause humming. Ensure your dimmer is compatible with incandescent lighting.

If issues persist after performing these checks, contact Kichler customer support or a qualified electrician.

SPECIFICATIONS

Brand	Kichler
Model Name	Kimrose
Part Number	52413BNB
Color	Brushed Natural Brass
Material	Alloy Steel (Fixture), Glass (Shade)
Style	Art Deco
Light Fixture Form	Chandelier
Room Type	Bedroom, Dining Room, Living Room
Product Dimensions	44.75"L x 12.75"W x 17.75"H
Power Source	Corded Electric
Installation Type	Stem Hung
Number of Light Sources	10
Voltage	120 Volts
Wattage	60 watts (per bulb)
Bulb Base	E12
Shade Color	Clear
Item Weight	15 Pounds
Assembly Required	Yes
Indoor/Outdoor Usage	Indoor

UPC

783927002813

WARRANTY

This Kichler Kimrose Chandelier is covered by a **1-year limited manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For full warranty details, please refer to the documentation included with your product or visit the Kichler website.

SUPPORT

For technical assistance, missing parts, or warranty inquiries, please contact Kichler customer service. Have your model number (52413BNB) and proof of purchase ready when contacting support.

Kichler Customer Service: Refer to the contact information provided on the Kichler website or in your product packaging.

ABOUT KICHLER LIGHTING

Kichler Lighting is dedicated to providing high-quality lighting solutions that enhance living spaces. Learn more about the brand's commitment to design and quality through these videos.

Kichler Brand Story

Your browser does not support the video tag.

Description: A short video highlighting the Kichler brand's philosophy and commitment to lighting design and quality.

Duration: 0:30.

Kichler Brand Story Video

Your browser does not support the video tag.

Description: An extended video showcasing Kichler's vision for lighting and its impact on creating special moments in various spaces. Duration: 1:11.