

[Manuals.plus](#) /

› [INTBUYING](#) /

› Intbuying 18"/450mm Hand Wrapping Machine User Manual

INTBUYING BX-450

Intbuying 18"/450mm Hand Wrapping Machine User Manual

Model: BX-450 | Brand: INTBUYING

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation of the Intbuying 18"/450mm Hand Wrapping Machine, Model BX-450. This device is designed for packaging food items such as fruits, vegetables, and trays with stretch film to maintain freshness and hygiene. It is suitable for use in supermarkets, fruit stalls, bakeries, and food processing facilities.



Image 1.1: Overview of the Intbuying 18-inch Hand Wrapping Machine. This image displays the complete unit, highlighting its stainless steel construction and control panel.

The machine helps prevent water evaporation, preserves the taste of food, prevents cross-contamination in cold storage, and extends shelf life. Its simple operation and high efficiency make it an ideal packaging solution.



Image 1.2: Diagram illustrating the benefits of using the food tray wrapper, including preventing water evaporation, keeping food delicious, preventing cold storage changes, and improving long-term stock quality.

2. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before operating the machine. Failure to follow these instructions may result in injury or damage to the equipment.

- Ensure the machine is connected to a grounded 110V AC power outlet.
- Do not operate the machine with wet hands or in wet conditions.
- Keep hands and loose clothing away from moving parts and the heating plate during operation.
- The heating plate operates at temperatures between 100-160°C. Avoid direct contact to prevent burns.
- Always turn off and unplug the machine before cleaning or maintenance.
- Do not use abrasive cleaners or solvents on the machine surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PRODUCT OVERVIEW

3.1 Components

The Intbuying Hand Wrapping Machine consists of the following main components:

- **Film Support Rods:** Holds the roll of stretch film.
- **Control Panel:** Contains power switches for the heating plate and cutter, and a temperature adjustment knob.
- **Heating Plate:** A heated surface used to seal the film.
- **Cutter Bar:** A heated wire or blade for cutting the film.
- **Stainless Steel Body:** Provides durability and ease of cleaning.



Image 3.1: An overall view of the hand wrapping machine, showing the film support, control panel, and heating plate.



Image 3.2: Close-up view of the film support rollers, designed to hold and dispense the stretch film smoothly.



Image 3.3: Detailed view of the control panel, featuring the cutter switch, power indicator, and temperature adjustment knob.



Image 3.4: Close-up of the film cutter bar, which provides a clean cut for the stretch film.

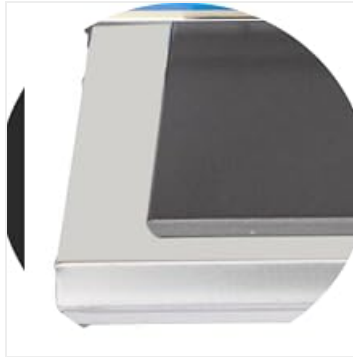


Image 3.5: Close-up of the heating plate, used for sealing the film around the packaged items.

3.2 Key Features

- **Durable Construction:** Made of stainless steel for easy cleaning and long service life.
- **Ample Film Space:** Accommodates films up to 18 inches (450mm) wide.
- **Adjustable Heating:** Heating plate power (250W) and temperature (100-160°C) can be adjusted independently.
- **Efficient Cutting:** Equipped with an 80W cutter for quick and clean film separation.
- **Separate Controls:** Individual switches for the heating plate and cutter for precise operation.

4. SETUP

1. **Unpacking:** Carefully remove the wrapping machine from its packaging. Inspect for any damage during transit.
2. **Placement:** Place the machine on a stable, flat, and heat-resistant surface. Ensure adequate ventilation around the unit.
3. **Power Connection:** Plug the power cord into a standard 110V AC grounded electrical outlet.
4. **Loading Film:**
 - Lift the protective cover/film support.
 - Place a roll of stretch film (up to 450mm / 18 inches wide) onto the film support rods.
 - Pull the leading edge of the film over the top of the machine, ensuring it passes over the cutter bar and heating plate area.
 - Close the protective cover.

Food Tray Wrapper Stretch Film Sealer

◆ 18"(450mm) ◆ 110V



Image 4.1: The hand wrapping machine with its top cover open, illustrating the area where the stretch film roll is to be placed for loading.

5. OPERATING INSTRUCTIONS

1. **Power On:** Turn on the main power switch. The power indicator light should illuminate.
2. **Adjust Temperature:** Use the temperature adjustment knob on the control panel to set the desired heating plate temperature (range 100-160°C). Allow a few minutes for the heating plate to reach the set temperature.
3. **Prepare Item:** Place the food item or tray to be wrapped on the working surface.
4. **Wrap Item:**
 - Pull the stretch film from the roll, covering the item completely.
 - Ensure the film is taut around the item.
5. **Cut Film:**
 - Once the item is wrapped, pull the film across the cutter bar.

- Press the cutter switch to activate the heated cutter, separating the film from the roll.

6. Seal Film:

- Place the wrapped item onto the heated plate.
- Gently press the edges of the film against the heated plate to seal them securely. The heat will shrink and seal the film, creating a tight package.
- Remove the sealed item.

7. **Power Off:** After use, turn off the heating plate and cutter switches, then unplug the machine from the power outlet.

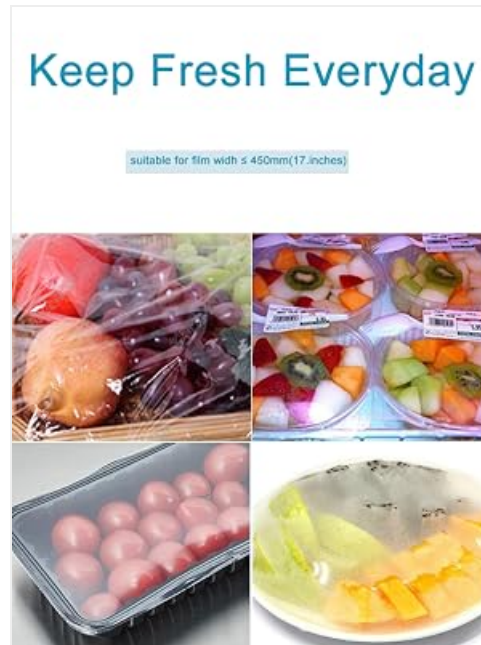


Image 5.1: A user demonstrating the wrapping process, showing how lettuce is covered with stretch film using the machine.



Image 5.2: Various food items such as fruits and vegetables wrapped with film, demonstrating the machine's ability to keep produce fresh.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your wrapping machine.

• Cleaning:

- Always unplug the machine and allow it to cool completely before cleaning.
- Wipe down all stainless steel surfaces with a damp cloth and mild detergent.
- Do not immerse the machine in water.
- Clean the heating plate and cutter bar carefully to remove any film residue.

- Dry all surfaces thoroughly before storage or next use.
- **Storage:** Store the machine in a dry, clean place away from direct sunlight and extreme temperatures.
- **Film Replacement:** Replace the film roll when it runs out. Ensure the new roll is compatible with the machine's maximum film width (450mm / 18 inches).

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not power on.	No power supply; power cord loose; main switch off.	Check power outlet; ensure cord is securely plugged in; turn on main power switch.
Film does not seal properly.	Heating plate not hot enough; insufficient contact with heating plate; incorrect film type.	Increase heating plate temperature; ensure firm and even contact with the heating plate; use appropriate stretch film.
Film does not cut cleanly.	Cutter switch off; cutter wire/blade dirty or damaged.	Turn on cutter switch; clean cutter wire/blade; if damaged, contact support for replacement.
Excessive smoke or odor.	Film residue burning on heating plate; incorrect film type.	Immediately turn off and unplug the machine. Allow to cool and clean thoroughly. Ensure correct film is used.

8. SPECIFICATIONS

Technical specifications for the Intbuying 18"/450mm Hand Wrapping Machine (Model BX-450):

Parameter	Value
Brand	INTBUYING
Model Number	BX-450
Material	Stainless Steel, Metal
Color	Silver
Product Dimensions (L x W x H)	660mm x 550mm x 190mm (approx. 26"L x 22"W x 7.5"H)
Item Weight	3.9 Kilograms (8.58 pounds)
Power Source	AC
Operation Mode	Manual
Voltage	110 Volts
Total Wattage	330 Watts
Heating Plate Power	250 Watts

Parameter	Value
Cutter Power	80 Watts
Max. Film Width	450mm (approx. 18 inches)
Working Temperature (Heating Plate)	100-160°C
UPC	723508848508



Material	Stainless Steel
Max. Film Width	450mm / nearly 18"
Power Supply	110V for North American
Power	330W
Cutter Power	80W
Heating Plate	250 W
Working Temperature	100-160°C
Machine Dimensions (LxWxH)	650 x 550 x 190mm 26" x 22" x 7.5"
Machine Weight	19Lb(8Kg)

Image 8.1: A visual representation of the machine's technical parameters, including material, film width, power supply, and dimensions.

Product Size

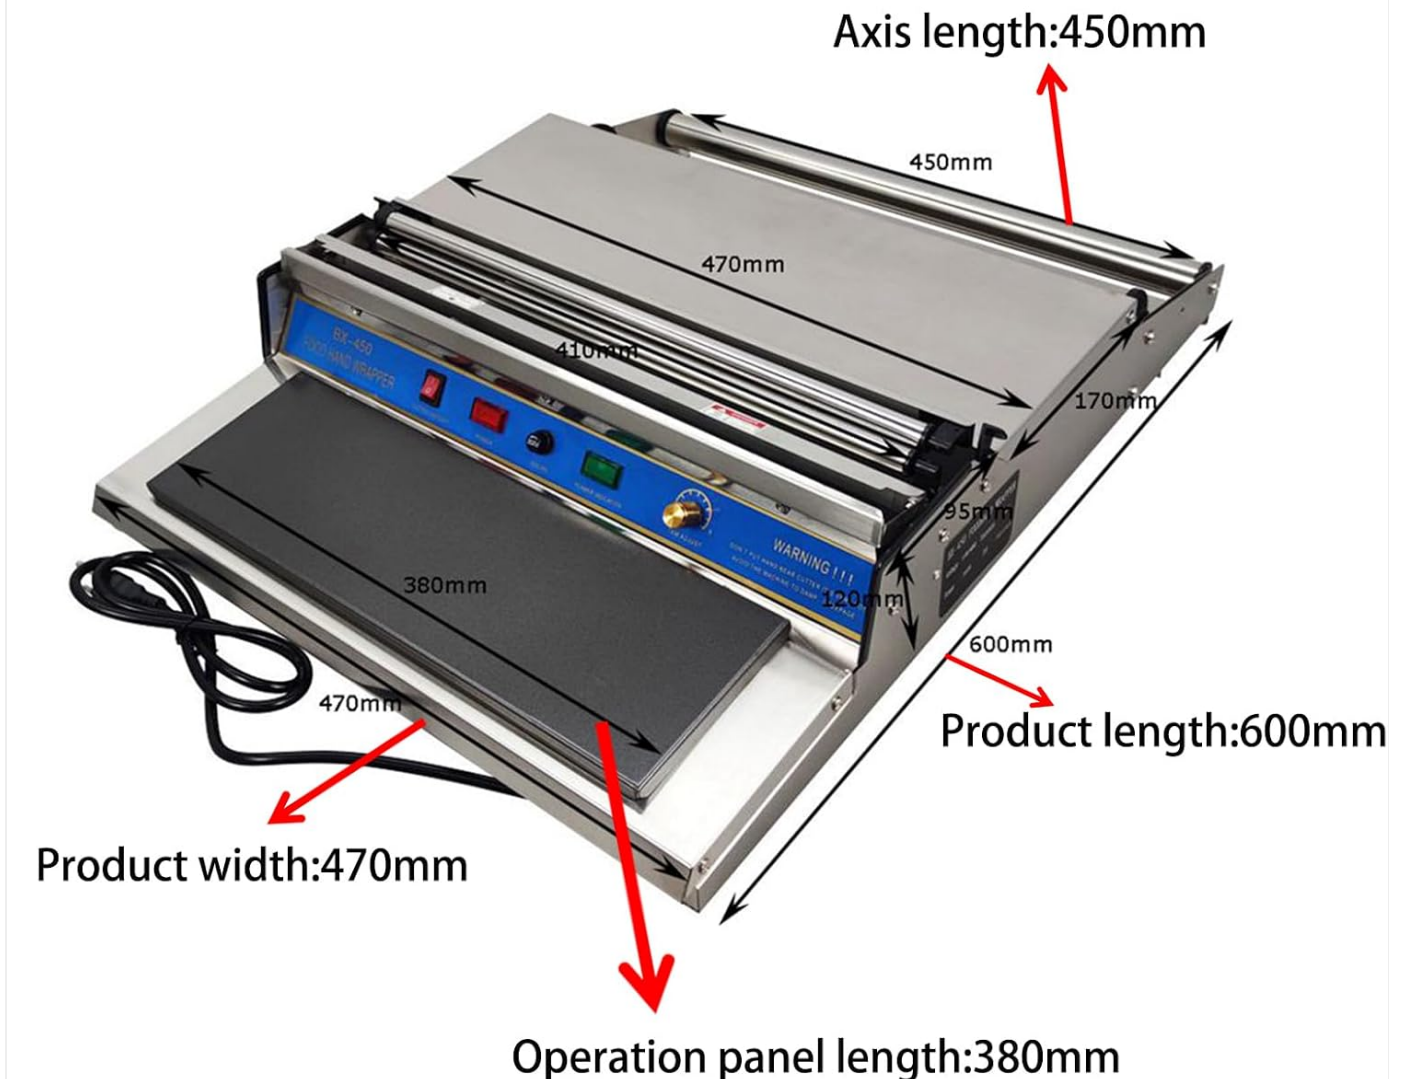


Image 8.2: Diagram showing the detailed dimensions of the hand wrapping machine, including length, width, and height measurements.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact INTBUYING customer service. Refer to your purchase documentation for specific warranty terms and contact details.

When contacting support, please have your model number (BX-450) and purchase date available.

© 2025 INTBUYING. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08PNSBDD9>

More documents and user manuals: <https://manuals.plus/>