

[manuals.plus](#) /› [IRIS OHYAMA](#) /› [IRIS OHYAMA IC-H50-B Cordless Handheld Vacuum Cleaner Instruction Manual](#)

## IRIS OHYAMA IC-H50-B

# IRIS OHYAMA IC-H50-B Cordless Handheld Vacuum Cleaner Instruction Manual

Model: IC-H50-B

## 1. INTRODUCTION

Thank you for purchasing the IRIS OHYAMA IC-H50-B Cordless Handheld Vacuum Cleaner. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The IC-H50-B is designed for quick and easy cleaning tasks, featuring a lightweight and compact design with powerful suction, making it ideal for both home and car interiors.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use the vacuum cleaner near water or wet surfaces.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Unplug from outlet when not in use and before cleaning.
- This appliance is for household use only.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- IRIS OHYAMA IC-H50-B Handheld Vacuum Cleaner Unit
- Crevice Nozzle / Brush Nozzle (2-in-1)
- Sofa Head Attachment
- Charging Stand

- AC Adapter
- Instruction Manual

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your IC-H50-B vacuum cleaner.



Figure 4.1: IRIS OHYAMA IC-H50-B Cordless Handheld Vacuum Cleaner.

### 4.1 Key Features

- **Lightweight Design:** The main unit weighs approximately 500g, making it easy to handle for extended periods.
- **Powerful Suction:** Equipped with a DC brushless motor for strong cleaning performance.
- **Cordless Convenience:** Offers freedom of movement for cleaning various areas, including car interiors.
- **Versatile Attachments:** Includes a crevice nozzle (convertible to a brush nozzle) and a sofa head for different cleaning needs.
- **Easy Charging:** Simply place the unit on its charging stand.
- **Washable Dust Cup:** The dust cup can be easily removed and washed with water for hygienic maintenance.

# 業界最軽量クラス

本体重量わずか  
約500g



※日本国内のハンディタイプ掃除機において(2020年11月 当社調べ)

Figure 4.2: The compact and lightweight design allows for easy storage and handling.

# パワフルな吸引力

コンパクトながら強いパワーを生み出す  
DCブラシレスモーターを採用。  
パワフルな吸引力を実現。

※画像はイメージです

Figure 4.3: Powerful suction effectively picks up dust and debris.

# 選べるアタッチメントで部屋中キレイに

すき間ノズルは、先端を回転させて  
ブラシノズルとして使用することも。



Figure 4.4: Included attachments for versatile cleaning.

## 5. SETUP

### 5.1 Initial Charging

1. Connect the AC adapter to the charging stand.
2. Place the vacuum cleaner unit onto the charging stand. Ensure it is securely seated.
3. Plug the AC adapter into a power outlet. The charging indicator lamp will illuminate.
4. Charge the unit for approximately 2.5 hours for a full charge. The indicator light will change or turn off when fully charged (refer to the indicator section for details).

# 置くだけ充電

充電はスタンドに置くだけ。  
使いたい時にサッと取り出せる。



※1 室温、使用時間などにより充電時間が長くなることがあります。

※2 満充電、バッテリー初期温度20°C

Figure 5.1: Charging the vacuum cleaner on its stand.

## 5.2 Attaching Accessories

To attach an accessory, align it with the suction inlet of the main unit and push firmly until it clicks into place. To remove, pull it off while twisting slightly.

- **Crevice Nozzle:** Ideal for narrow gaps and corners.
- **Brush Nozzle:** Rotate the tip of the crevice nozzle to extend the brush for cleaning delicate surfaces or dislodging stubborn dirt.
- **Sofa Head:** Designed for cleaning upholstery, car seats, and other fabric surfaces.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off

Press the power button once to turn the vacuum cleaner on. Press it again to turn it off.

### 6.2 Suction Mode Selection

The vacuum cleaner typically operates in a standard suction mode. If a strong mode is available, a separate button or a second press of the power button might activate it. Refer to the specific button layout on your unit for mode switching.

- **Standard Mode:** Approximately 23 minutes of continuous use on a full charge.
- **Strong Mode:** Approximately 15 minutes of continuous use on a full charge.

### 6.3 Battery Level Indicator

The unit features an indicator lamp to show the remaining battery level. Monitor this indicator to know when recharging is necessary.

## 7. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 7.1 Emptying the Dust Cup

1. Ensure the vacuum cleaner is turned off.
2. Press the dust cup release button and detach the dust cup from the main unit.
3. Hold the dust cup over a trash bin and open the bottom lid to empty the collected debris.
4. Close the lid and reattach the dust cup to the main unit until it clicks securely.

### 7.2 Cleaning the Dust Cup and Filter

The dust cup and filter are washable for thorough cleaning.

1. After emptying the dust cup, separate the filter assembly from the dust cup.
2. Rinse the dust cup and filter under running water until clean.
3. Allow all parts to air dry completely before reassembling. Ensure they are thoroughly dry to prevent mold or damage to the motor.
4. Reassemble the filter into the dust cup, then attach the dust cup back to the main unit.

## 8. TROUBLESHOOTING

---

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is depleted.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Reduced suction power.	Dust cup is full.	Empty the dust cup.
	Filter is clogged.	Clean the filter as described in the Maintenance section.
	Suction inlet or attachment is blocked.	Remove any obstructions from the suction inlet or attachment.

Problem	Possible Cause	Solution
Short operating time after full charge.	Battery degradation over time.	This is normal for rechargeable batteries. If performance is significantly reduced, consider contacting customer support for battery replacement options.

If the problem persists after trying these solutions, please contact IRIS OHYAMA customer support.

## 9. SPECIFICATIONS

Feature	Specification
Model Number	IC-H50-B
Brand	IRIS OHYAMA
Product Size (W×D×H)	Approx. 5.6 × 5.7 × 40.2 cm
Weight (Main Unit Only)	Approx. 0.5 kg
Dust Collection Capacity	0.1 L
Battery Type	Lithium-ion Secondary Battery
Battery Capacity	2200 mAh (approximate, based on 'Wattage (W)' conversion)
Charging Time	Approx. 2.5 hours
Continuous Use Time (Full Charge, 20°C)	Standard: Approx. 23 minutes Strong: Approx. 15 minutes
Charging Temperature Range	5~35°C
Power Source	Battery Powered
Filter Type	Cloth
Recommended Use	Interior, Car

## 10. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or inquiries regarding your IRIS OHYAMA IC-H50-B vacuum cleaner, please contact IRIS OHYAMA customer service through their official website or the contact information provided in your warranty documentation.

No official product videos are available for this model in the provided data.