



Manuals.plus /

› Ninja /

› Ninja AG300 4-in-1 Indoor Grill and Air Fryer Instruction Manual

Ninja AG300

Ninja AG300 4-in-1 Indoor Grill and Air Fryer Instruction Manual

Model: AG300

INTRODUCTION

Welcome to the instruction manual for your Ninja AG300 4-in-1 Indoor Grill with 4-Quart Air Fryer. This appliance is designed to provide versatile cooking options including grilling, air frying, roasting, and baking, utilizing Cyclonic Grilling Technology for efficient and even cooking. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, serious injury, and/or damage to property.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or main unit housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Ninja AG300 is a versatile indoor cooking system. Familiarize yourself with its components before use.



Figure 1: Front view of the Ninja AG300 Indoor Grill and Air Fryer, showcasing the control panel and sleek design.

Components:

- **Main Unit:** Houses the heating element and control panel.
- **Grill Grate:** High-density grate for char-grilled marks and flavor.
- **Crisper Basket:** Used for air frying and dehydrating.
- **Cooking Pot:** Ceramic-coated, non-stick pot that collects drippings.
- **Splatter Shield:** Prevents grease splatter from reaching the heating element.
- **Cleaning Brush:** For easy cleaning of the grill grate.



Figure 2: All removable components of the Ninja AG300, including the main unit, grill grate, crisper basket, cooking pot, and cleaning brush.

SETUP AND FIRST USE

1. **Unpack:** Remove all packaging materials, stickers, and tags from the unit and accessories.
2. **Clean Components:** Wash the grill grate, crisper basket, cooking pot, and splatter shield in warm, soapy water. Rinse thoroughly and dry completely. The main unit should be wiped clean with a damp cloth.
3. **Assemble:**
 - Place the cooking pot into the main unit.
 - Insert the splatter shield into the main unit, ensuring it sits securely above the heating element.
 - Place either the grill grate or crisper basket into the cooking pot, depending on your desired cooking function.
4. **Placement:** Place the appliance on a clean, dry, level surface. Ensure there is adequate space (at least 6 inches) from walls or other appliances for proper ventilation.
5. **Pre-heat (Optional but Recommended):** For optimal results, especially when grilling, pre-heat the unit for 5-10 minutes before adding food. This helps achieve better searing and cooking performance.

OPERATING INSTRUCTIONS

The Ninja AG300 offers four primary cooking functions: Grill, Air Crisp, Roast, and Bake.

1. Grill Function

Use the Grill function for char-grilled results indoors. The Cyclonic Grilling Technology circulates 500°F air for even cooking and searing.

1. Ensure the cooking pot and grill grate are installed.
2. Close the lid and plug in the unit.
3. Press the **GRILL** button. The default temperature will display.
4. Use the **TEMP** arrows to adjust the temperature (Low, Med, High, Max).
5. Use the **TIME** arrows to set the cooking time.
6. Press the **START/STOP** button to begin preheating. The unit will display "PRE" and a progress bar.
7. Once preheating is complete, the unit will beep and display "ADD FOOD". Open the lid and carefully place your food on the grill grate.
8. Close the lid to resume cooking. The timer will begin counting down.
9. Flip food halfway through cooking for best results.



Figure 3: Steaks being grilled on the Ninja AG300, demonstrating the indoor grilling capability.

2. Air Crisp Function

Achieve crispy results with little to no oil using the Air Crisp function.

1. Ensure the cooking pot and crisper basket are installed.
2. Close the lid and plug in the unit.
3. Press the **AIR CRISP** button. The default temperature and time will display.
4. Use the **TEMP** arrows to adjust the temperature.
5. Use the **TIME** arrows to set the cooking time.
6. Press the **START/STOP** button to begin preheating.
7. Once preheating is complete, the unit will beep and display "ADD FOOD". Open the lid and carefully place your food in the crisper basket.
8. Close the lid to resume cooking. Shake or toss food halfway through for even crisping.



Figure 4: French fries being air-fried in the crisper basket of the Ninja AG300, illustrating the Air Crisp function.

3. Roast Function

Use the Roast function for tender meats and vegetables.

1. Ensure the cooking pot is installed. You may use the crisper basket or place food directly in the pot, depending on the recipe.
2. Close the lid and plug in the unit.
3. Press the **ROAST** button. Adjust temperature and time as needed.
4. Press **START/STOP** to begin.
5. Add food when prompted or after preheating.

4. Bake Function

The Bake function is suitable for preparing baked goods, casseroles, and more.

1. Ensure the cooking pot is installed. You may use a baking pan that fits inside the cooking pot.
2. Close the lid and plug in the unit.
3. Press the **BAKE** button. Adjust temperature and time as needed.
4. Press **START/STOP** to begin.
5. Add food when prompted or after preheating.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Ninja AG300.

- **Always unplug** the unit from the power outlet and allow it to cool completely before cleaning.
- **Cooking Pot, Grill Grate, Crisper Basket, Splatter Shield:** These components are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. For stubborn food residue, soak in warm water before cleaning.
- **Main Unit:** Wipe the main unit clean with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Cleaning Brush:** Use the included cleaning brush to remove food from the grill grate grooves.
- **Non-Stick Coating:** To protect the non-stick coating, avoid using metal utensils or abrasive cleaning tools.

PARRILLA PARA INTERIORES 4 EN 1 NINJA FOODI



Figure 5: Removable components of the Ninja AG300, such as the grill grate and cooking pot, being placed into a dishwasher, highlighting their dishwasher-safe feature.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit not turning on.	Power cord not securely plugged in.	Ensure the power cord is firmly plugged into the outlet and the unit.
Food not cooking evenly.	Overcrowding the cooking area; food not flipped/tossed.	Avoid overcrowding. For Air Crisp, shake or toss food halfway. For Grill, flip food halfway.
Excessive smoke during grilling.	Grease buildup on splatter shield or cooking pot; high-fat foods.	Ensure splatter shield and cooking pot are clean. Trim excess fat from meats. Use recommended oil for grilling.
"ADD FOOD" message not appearing.	Unit has not completed preheating.	Wait for the preheating cycle to complete. The unit will beep and display "ADD FOOD".

SPECIFICATIONS

Feature	Detail
Model Number	AG300
Brand	Ninja
Functions	Grill, Air Crisp, Roast, Bake
Capacity	4 Quarts
Wattage	1500 watts
Voltage	1.5E+3 Volts (1500 Volts)
Material	Plastic (Outer), Ceramic (Cooking Pot Coating)
Non-Stick Coating	Yes
Dishwasher Safe Parts	Cooking Pot, Grill Grate, Crisper Basket, Splatter Shield
Product Dimensions	17.01 x 14.02 x 10.98 inches
Item Weight	2.42 pounds (1.1 Kilograms)
UPC	622356557788

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Ninja website. If you have any questions or require assistance with your Ninja AG300, please contact Ninja Customer Service.

- **Online Support:** Visit the official Ninja website for FAQs, troubleshooting guides, and product registration.
- **Telephone Support:** Refer to your product packaging or the Ninja website for current customer service contact numbers.

Visit [NinjaKitchen.com](https://www.ninjakitchen.com)



