

[Manuals.plus](#) /

› [B.K.Licht](#) /

› B.K.Licht Linear 4 Spots Black Ceiling Light GU10 - Instruction Manual

B.K.Licht BKL1448

B.K.Licht Linear 4 Spots Black Ceiling Light

Model: BKL1448

1. INTRODUCTION

Thank you for choosing the B.K.Licht Linear 4 Spots Black Ceiling Light. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before installation and retain them for future reference.



Image 1.1: B.K.Licht Linear 4 Spots Black Ceiling Light, Model BKL1448.

2. SAFETY INSTRUCTIONS

- **Electrical Safety:** Installation must be performed by a qualified electrician or a person with appropriate electrical knowledge to prevent electric shock or fire hazards.
- **Power Disconnection:** Always disconnect the main power supply before installation, maintenance, or bulb replacement. Ensure the power is off at the circuit breaker.
- **Voltage:** This fixture is designed for 230 Volt AC power supply.
- **Bulb Type:** Use only GU10 LED bulbs with a maximum wattage of 5W per spot. Bulbs are not included.
- **Indoor Use Only:** This product is intended for indoor use in dry environments. Do not expose to moisture or extreme temperatures.
- **Secure Mounting:** Ensure the mounting surface is capable of supporting the weight of the fixture.
- **Avoid Contact:** Do not touch the bulbs immediately after use as they may be hot.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning installation.

- 1x B.K.Licht Linear 4 Spots Black Ceiling Light fixture
- Mounting material (screws, dowels)
- Instruction manual

Note: GU10 bulbs are not included and must be purchased separately.

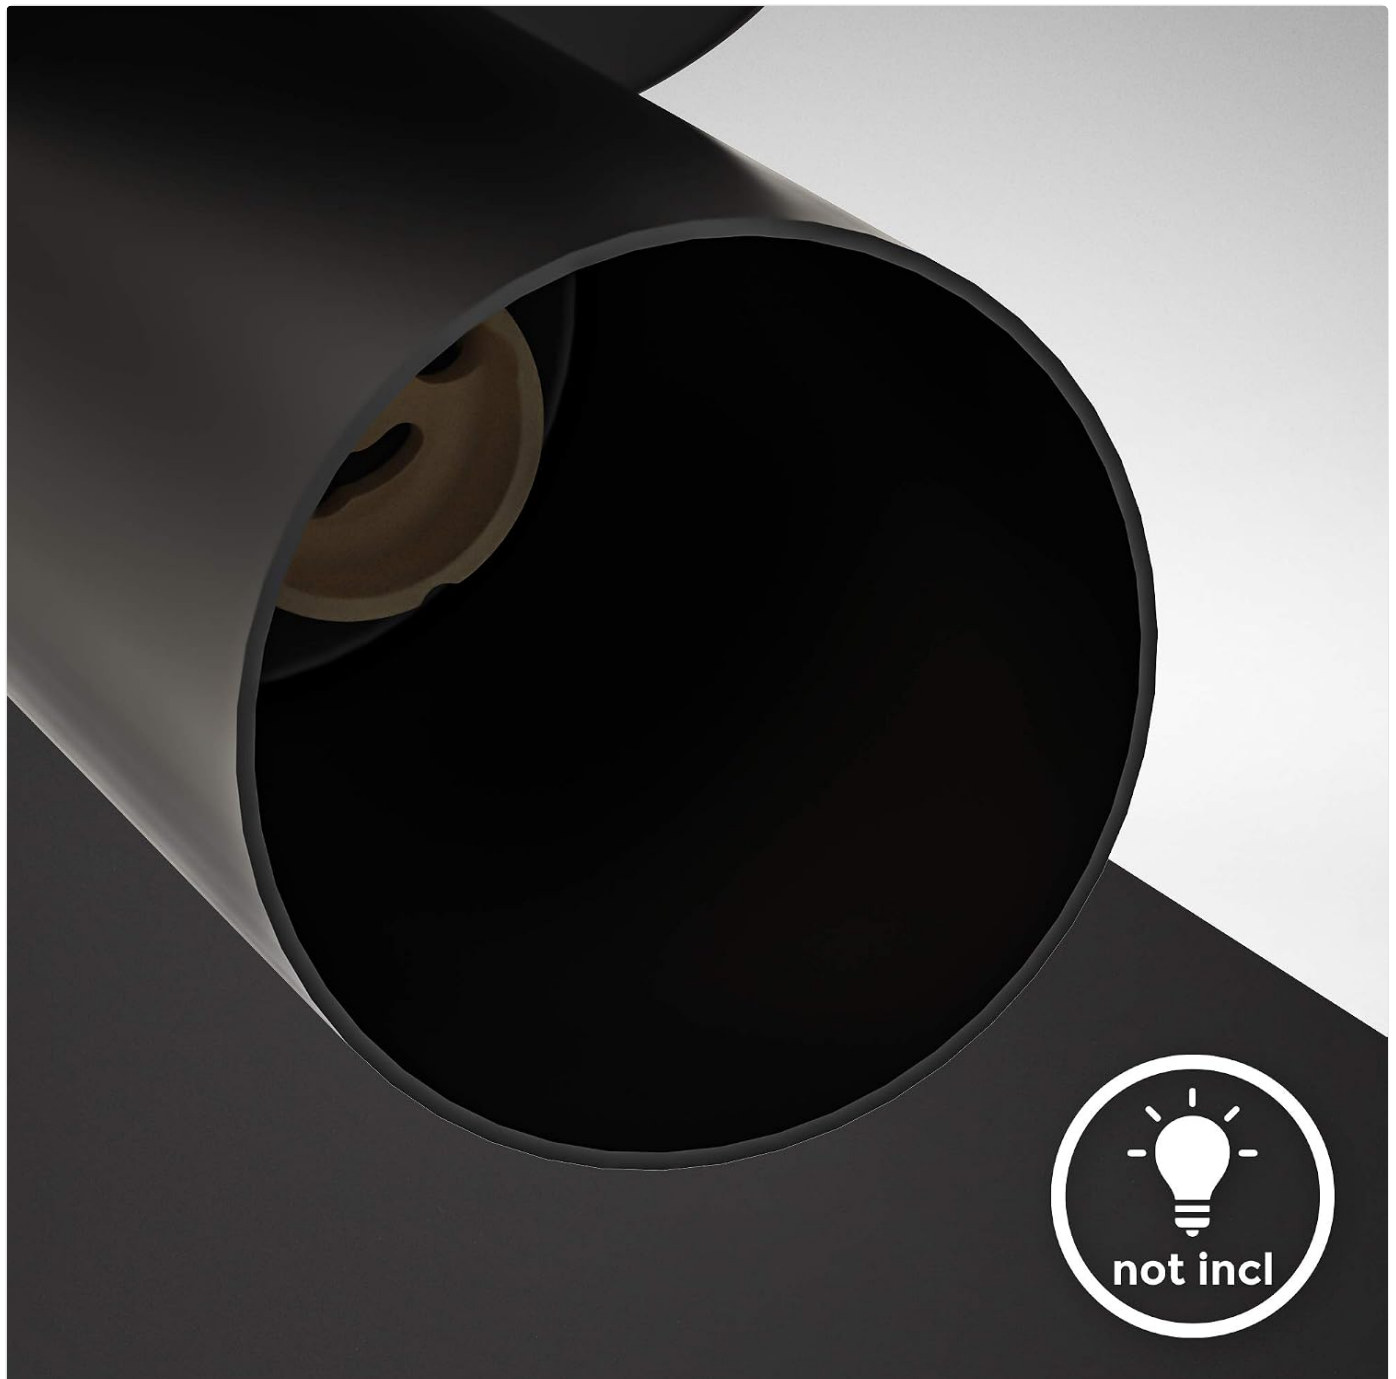


Image 3.1: Close-up view of the GU10 socket, indicating that bulbs are not included.

4. SETUP AND INSTALLATION

Follow these steps carefully for proper installation.

1. Prepare for Installation:

- Switch off the main power supply at the circuit breaker to prevent electric shock.
- Unpack the fixture and check for any damage.

2. Mark Drilling Points:

- Hold the mounting bracket against the ceiling at the desired installation location.
- Mark the drilling points using a pencil. Ensure the marks align with the electrical wiring outlet.

3. Drill Holes and Insert Dowels:

- Drill holes at the marked points using an appropriate drill bit for your ceiling material.
- Insert the provided dowels into the drilled holes.

4. Attach Mounting Bracket:

- Secure the mounting bracket to the ceiling using the provided screws.

5. Wire the Fixture:

- Connect the electrical wires from the ceiling to the terminal block on the fixture. Ensure correct polarity (Live, Neutral, Earth).
- Double-check all connections for security.

6. Mount the Light Fixture:

- Attach the main body of the ceiling light to the mounting bracket, securing it with the provided screws.

7. Insert GU10 Bulbs:

- Carefully insert the GU10 LED bulbs (max. 5W each) into the sockets by pushing and twisting them clockwise until secure.

8. Restore Power:

- Once installation is complete and all connections are secure, restore power at the circuit breaker.



Image 4.1: Example of the ceiling light installed in a hallway, providing illumination.

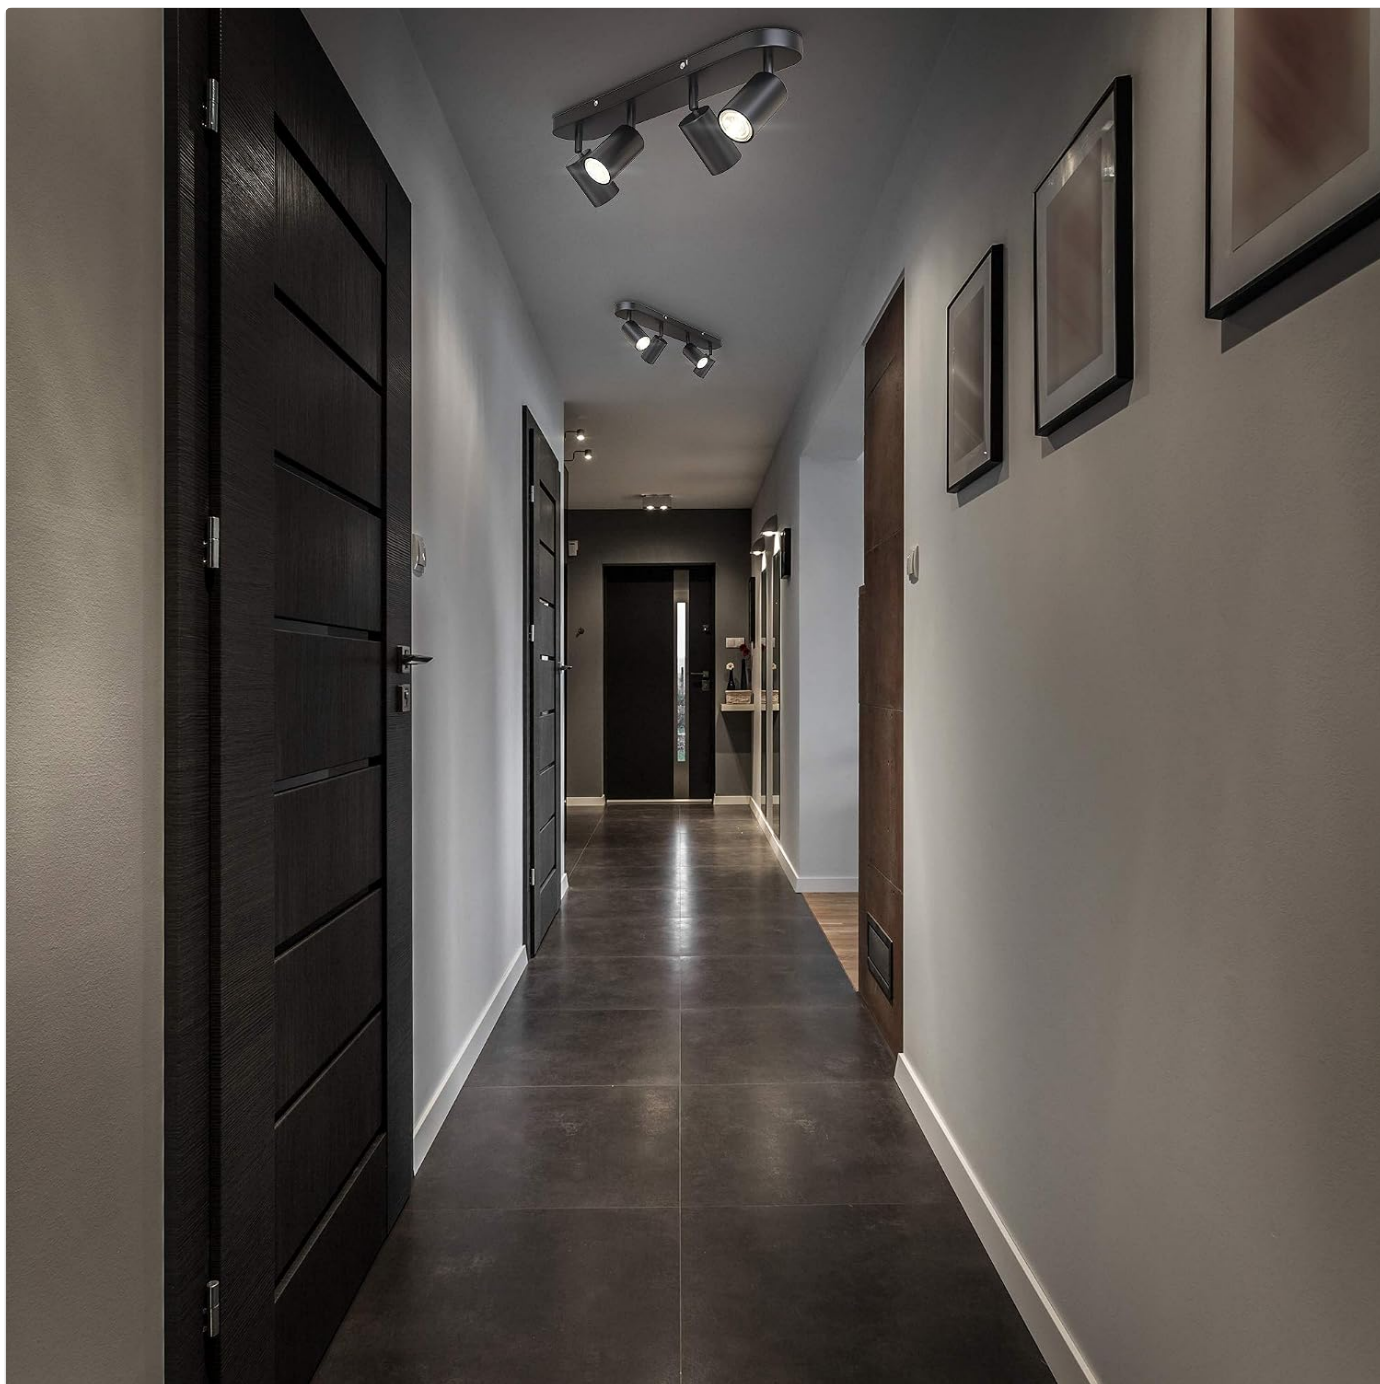


Image 4.2: The ceiling light providing focused illumination in a closet or dressing area.

5. OPERATING INSTRUCTIONS

The B.K.Licht Linear 4 Spots Ceiling Light is designed for simple operation.

- **Turning On/Off:** Operate the light using your standard wall switch.
- **Adjusting Light Direction:** Each spotlight is individually rotatable and tiltable. You can manually adjust the direction of each spot to illuminate specific areas as desired.



Image 5.1: The spotlights can be rotated and tilted to direct light.



Image 5.2: Various angles demonstrating the adjustability of the individual spots.

6. MAINTENANCE

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure power is off and bulbs have cooled down. Gently push and twist the old GU10 bulb counter-clockwise to remove. Insert a new GU10 LED bulb (max. 5W) by pushing and twisting clockwise until secure.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Faulty bulb. Incorrect wiring.	Check circuit breaker. Replace bulb. Verify wiring connections (consult an electrician if unsure).
Light flickers.	Loose bulb. Incompatible dimmer (if applicable). Faulty bulb.	Ensure bulb is securely seated. Use dimmable GU10 bulbs compatible with your dimmer switch. Replace bulb.
Spots cannot be adjusted.	Mechanism stuck.	Gently try to adjust. Do not force. If persistent, contact support.

8. SPECIFICATIONS

Feature	Detail
Brand	B.K.Licht
Model Number	BKL1448
Color	Black
Material	Metal
Dimensions (L x W x H)	55L x 6W x 14.5H cm
Bulb Socket	GU10
Number of Bulbs	4 (not included)
Max. Wattage per Bulb	5 Watt (LED)
Voltage	230 Volt
Features	Swivel, Rotatable
Mounting Type	Ceiling Mount (Semi-flush)
Application Area	Indoor use only

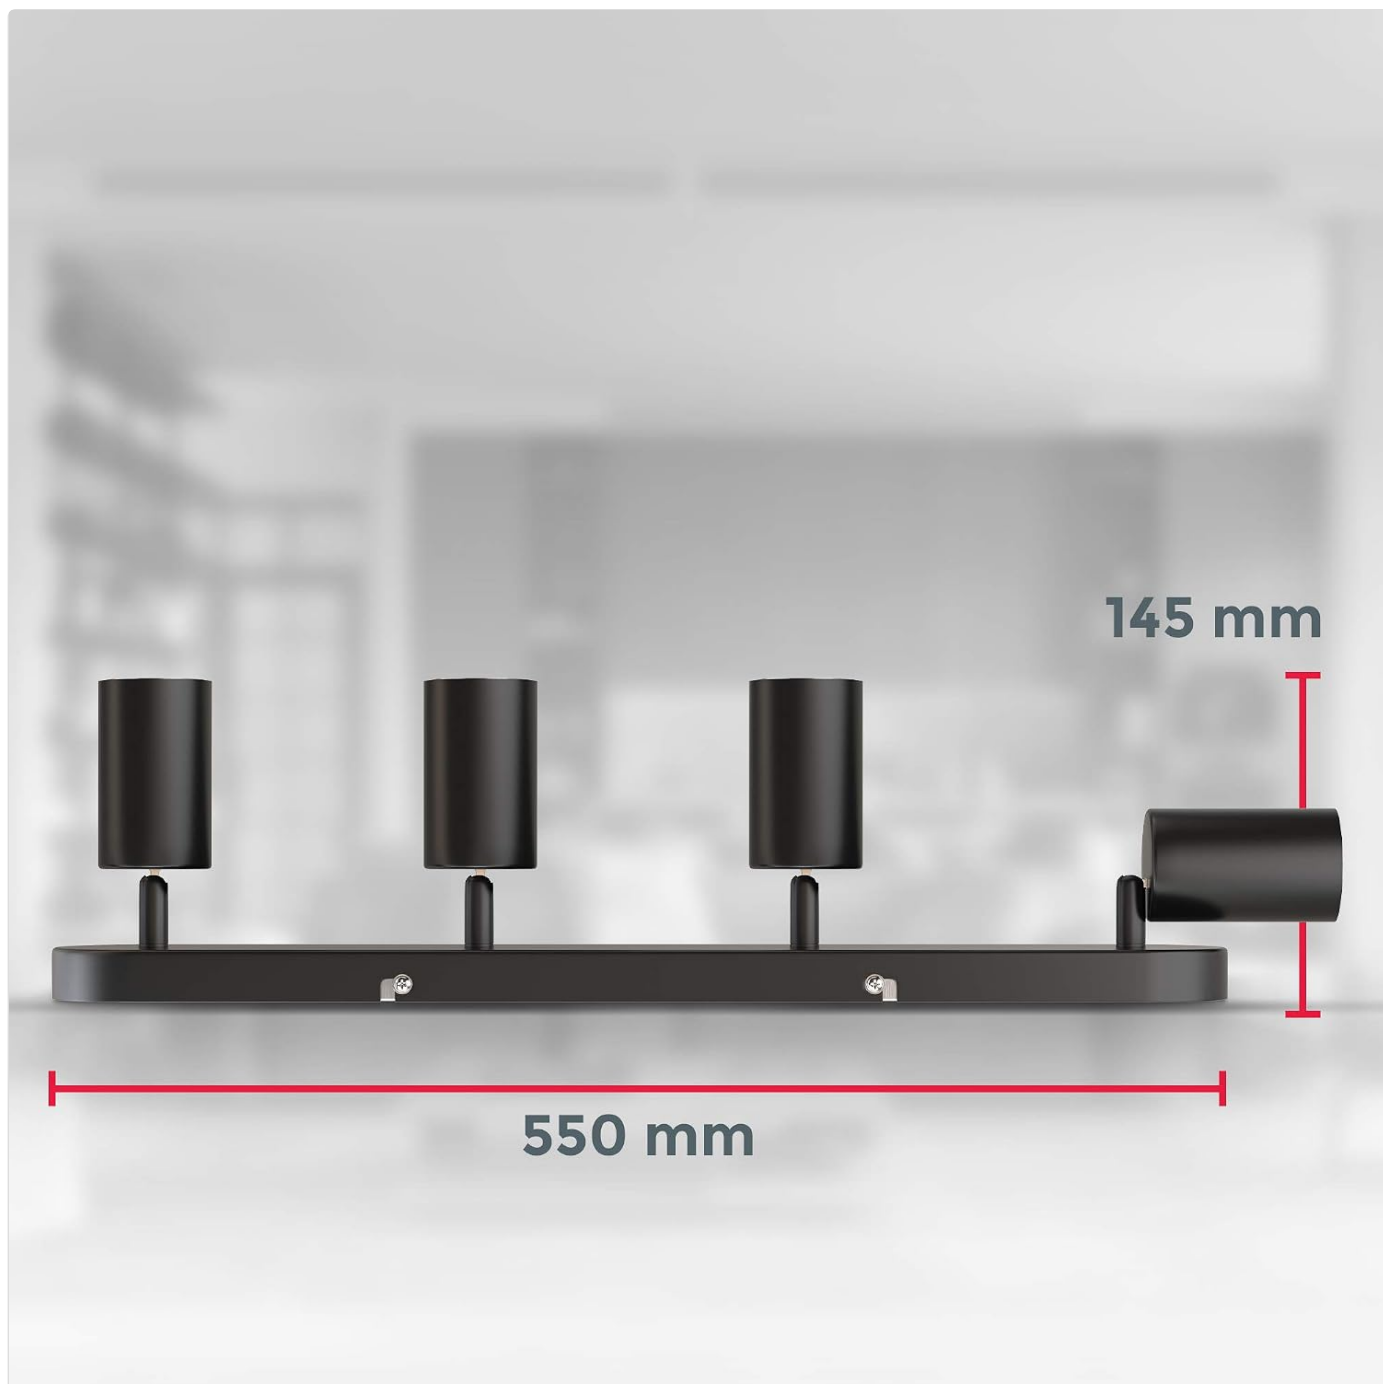


Image 8.1 : Detailed dimensions of the ceiling light fixture (550mm length, 145mm height).

9. WARRANTY AND SUPPORT

This product comes with a limited warranty. For specific warranty details, please refer to the terms provided at the time of purchase or contact your retailer.

For technical support, questions regarding installation, or any other inquiries, please contact B.K.Licht customer service. Our helpful, German-speaking service team is available to assist you.

B.K.Licht GmbH & Co. KG

Munich / Germany

For further information, you may visit the B.K.Licht store on Amazon: [B.K.Licht Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question