

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hisense](#) /

› [Hisense HI620D10X Semi-Integrated Dishwasher User Manual](#)

Hisense HI620D10X

Hisense HI620D10X Semi-Integrated Dishwasher User Manual

Model: HI620D10X

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Hisense HI620D10X semi-integrated dishwasher. Please read these instructions carefully before installation, operation, and maintenance. Keep this manual for future reference.

Safety Information

- Ensure the dishwasher is properly grounded before use.
- Do not allow children to operate or play with the dishwasher.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during operation, especially during the hot wash cycle.
- In case of malfunction, disconnect the appliance from the power supply before attempting any repairs. Contact qualified service personnel.

2. PRODUCT OVERVIEW

The Hisense HI620D10X is a semi-integrated dishwasher designed for efficient cleaning of up to 14 place settings. It features a durable stainless steel interior and advanced functions like TotalDry for automatic door opening and AquaStop for enhanced safety against water leaks.

Key Features

- **Type of Construction:** Semi-integrated
- **Capacity:** 14 place settings
- **Drying System:** TotalDry (Automatic door opening for improved drying)
- **Safety Feature:** AquaStop (Anti-overflow safety)
- **Interior Material:** Stainless steel
- **Control Type:** Frontal control panel

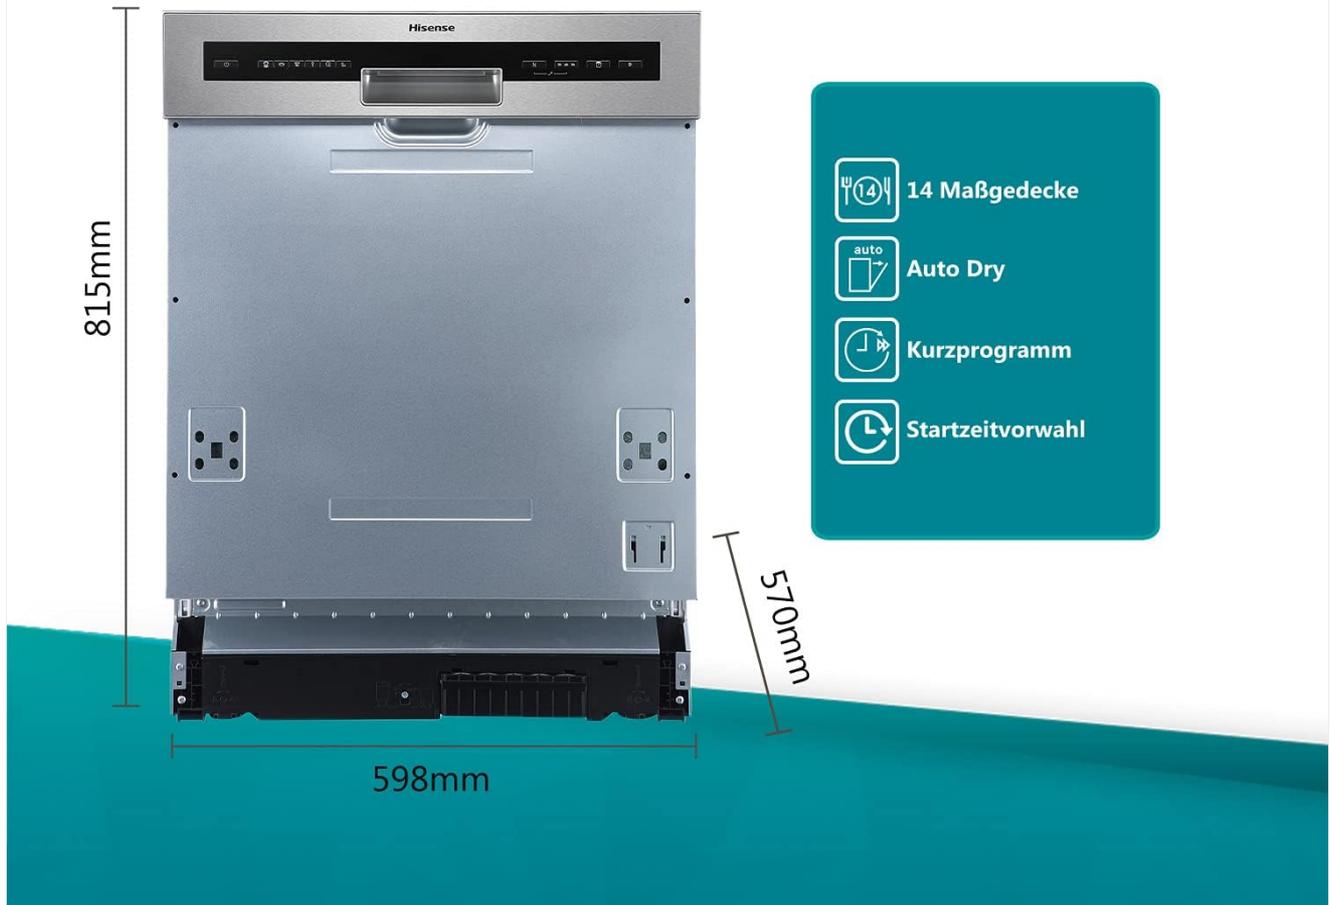


Figure 2.1: Front view of the Hisense HI620D10X semi-integrated dishwasher with key dimensions (Width: 598mm, Height: 815mm, Depth: 570mm).



Figure 2.2: Interior view of the dishwasher showing the upper and lower racks, and cutlery basket.

3. SETUP AND INSTALLATION

The Hisense HI620D10X is designed for semi-integrated installation, meaning it will be partially concealed by a custom cabinet panel. Proper installation is crucial for optimal performance and safety.

Dimensions and Placement

- **Width:** 59.8 cm
- **Height:** 81.5 cm
- **Depth:** 57 cm

- Ensure adequate space for water inlet and outlet hoses, and electrical connections.
- The appliance should be installed on a stable, level surface.



Figure 3.1: Example of the Hisense HI620D10X dishwasher integrated into a kitchen environment.

Electrical and Water Connections

All electrical and plumbing connections must be performed by a qualified technician in accordance with local regulations. The dishwasher operates on 230 Volts.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and available wash programs to achieve optimal cleaning results.

Control Panel



Figure 4.1: Frontal control panel with program selection and function buttons.

Loading the Dishwasher

Proper loading ensures effective cleaning and drying. The dishwasher can accommodate up to 14 place settings.



Figure 4.2: Illustration of how 14 place settings can be arranged within the dishwasher racks.

Wash Programs

The Hisense HI620D10X offers various wash programs to suit different needs:

- **90min Program:** For moderately soiled dishes requiring a quicker wash.
- **Economy Program:** Energy and water-efficient program for normal soiled dishes.
- **Glass/Delicate Program:** Gentle wash for fragile items like glasses.
- **Quick Program:** For lightly soiled dishes that need to be cleaned rapidly.



Figure 4.3: Dishes undergoing a quick wash cycle, demonstrating efficiency for lightly soiled items.

Special Functions

- **TotalDry (Auto Dry):** The dishwasher door automatically opens slightly at the end of the cycle to release steam and improve drying results.

Auto Dry

Kein zusätzliches Trocknen notwendig



Figure 4.4: Illustration of the Auto Dry feature, where the door opens for enhanced drying.

- **Delay Start:** Allows you to set a delayed start time for the wash cycle (e.g., 2h, 4h, 9h).

Startzeitvorwahl

Stets im Einsatz



Figure 4.5: Graphic representation of the Delay Start function, allowing users to schedule wash cycles.

- **Half-Load:** For washing smaller loads, saving water and energy.
- **Extra Drying:** Provides additional drying time for better results on difficult-to-dry items.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning the Filters

The filter system should be checked and cleaned regularly to prevent blockages and ensure efficient washing. Refer to the detailed instructions in the full manual for filter removal and cleaning.

Cleaning the Spray Arms

Periodically check the spray arm nozzles for any blockages caused by food particles. Clean them using a thin brush or toothpick if necessary.

Exterior and Interior Cleaning

Wipe the exterior with a damp cloth. For the interior, a dishwasher cleaner can be used periodically to remove grease and limescale buildup.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect salt/rinse aid dosage.	Reload dishes correctly, clean spray arms, use appropriate detergent, adjust salt and rinse aid settings according to water hardness.
Water not draining	Clogged filter, kinked drain hose, blocked drain pump.	Clean the filter system, check and straighten the drain hose, clear any blockages in the drain pump area.
Dishwasher not starting	Door not closed properly, power supply issue, program not selected.	Ensure the door is fully latched, check power connection and circuit breaker, select a wash program and press start.
Excessive noise	Dishes rattling, foreign object in pump, improper installation.	Rearrange dishes, check for foreign objects, ensure dishwasher is level and securely installed.

7. SPECIFICATIONS

Detailed technical specifications for the Hisense HI620D10X dishwasher.

Feature	Specification
Brand	Hisense
Model Name	HI620D10X
Type of Installation	Semi-integrated
Capacity	14 Place Settings
Dimensions (W x H x D)	59.8 cm x 81.5 cm x 57 cm
Material	Stainless Steel
Color	Aluminium
Noise Level	46 Decibels
Voltage	230 Volts
Special Features	TotalDry (Auto Door Opening), AquaStop, Delay Start, Half-Load, Extra Drying
Wash Programs	90min, Economy, Glass/Delicate, Quick
Weight	34 Kilograms

8. WARRANTY AND SUPPORT

Warranty Information

The Hisense HI620D10X dishwasher comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and faulty materials under normal domestic use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, spare parts, or warranty service, please contact Hisense customer support. Refer to the official Hisense website or your purchase documentation for the most up-to-date contact information.