

HAOVM MediaPad P20

HAOVM MediaPad P20 10-inch Android Tablet User Manual

Model: MediaPad P20 | Brand: HAOVM

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your HAOVM MediaPad P20 10-inch Android Tablet. Please read it thoroughly to ensure proper usage and to maximize your device's performance and longevity.

2. WHAT'S IN THE BOX

Upon unboxing your HAOVM MediaPad P20, you should find the following items:

- HAOVM MediaPad P20 10-inch Tablet
- Charging Cable (USB Type-C)
- Charging Adapter
- User Manual
- Reset Key (for MicroSD card slot)

Powerful Configuration

CPU
Octal Core
Cortex-A55, 1.6GHz

3GB
3GB RAM

64GB
64GB Storage

Dual Wifi
2.4G+5.0G

Bluetooth
5.0 Bluetooth

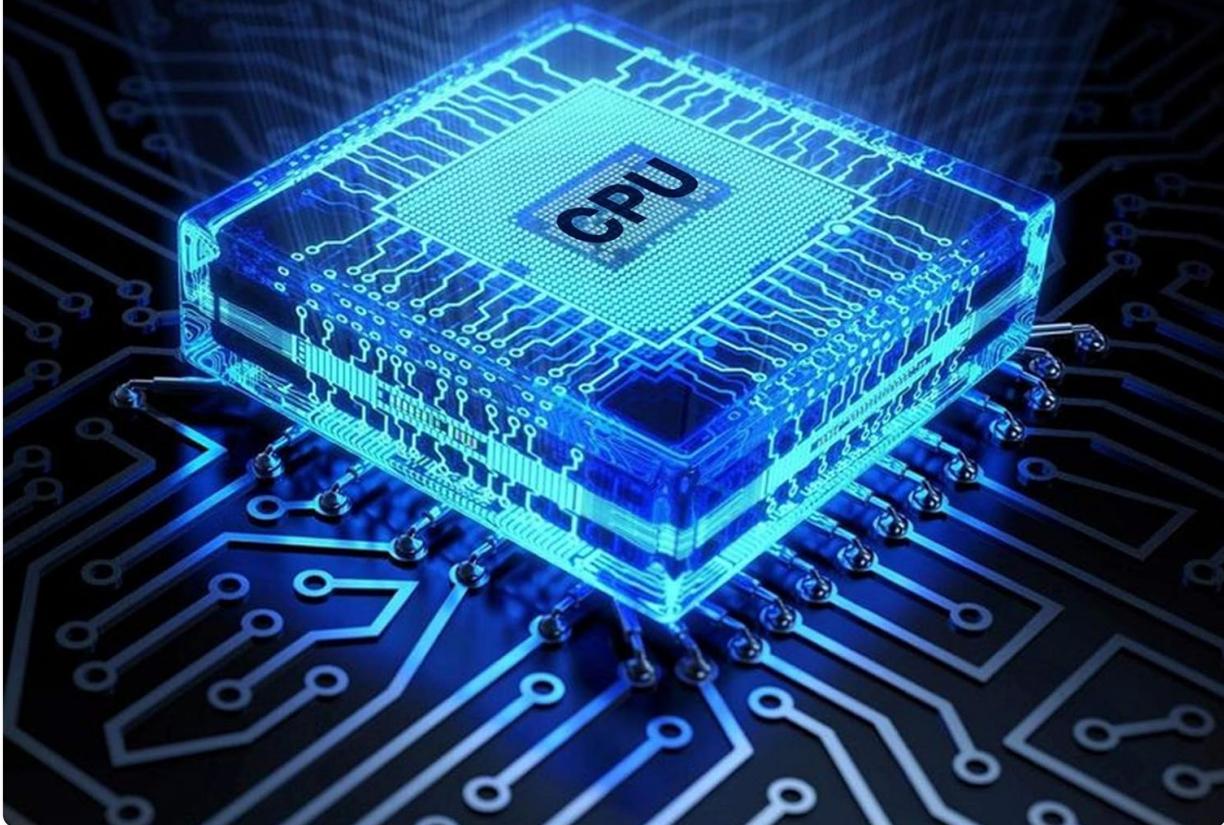


Image: HAOVM MediaPad P20 Tablet and included accessories neatly arranged in its packaging.

3. SETUP GUIDE

3.1 Initial Power On and Charging

1. **Remove Protective Film:** Carefully peel off any protective film from the tablet screen.
2. **First Charge:** If the tablet does not power on immediately, connect the provided USB Type-C charging cable and adapter to the tablet and a power outlet. Charge for at least 30 minutes before attempting to power on again.
3. **Power On:** Press and hold the power button (located on the side) for approximately 5 seconds until the HAOVM logo appears.



Image: The HAOVM MediaPad P20 Tablet displaying the HAOVM logo during startup.

3.2 Language and Network Setup

1. **Select Language:** Follow the on-screen prompts to select your preferred language.
2. **Connect to Wi-Fi:** Choose your Wi-Fi network from the list and enter the password if required.
3. **Google Account:** Sign in with your Google account or create a new one to access the Google Play Store and other services.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

- **Tap:** Touch the screen once to select an item, launch an app, or activate a button.
- **Tap and Hold:** Press and hold an item to access contextual menus or move items on the home screen.
- **Swipe:** Slide your finger across the screen to navigate between home screens, scroll through lists, or open notification panels.
- **Pinch-to-Zoom:** Use two fingers to pinch in or out to zoom on images or web pages.

4.2 Power and Volume Controls

- **Power Button:** Press once to put the tablet to sleep or wake it up. Press and hold to access power options (Power off, Restart).
- **Volume Buttons:** Press to adjust the audio volume up or down.

4.3 Camera Usage

The tablet features a 5MP front camera and a 13MP rear camera.

1. Open the "Camera" application from the home screen or app drawer.
2. Tap the screen to focus.
3. Tap the shutter button to take a photo or start/stop video recording.



Image: A person using the HAOVM MediaPad P20 Tablet for a video call, showcasing the front camera functionality.

5. MAINTENANCE

- **Screen Care:** Use a soft, lint-free cloth to clean the screen. Avoid harsh chemicals.
- **Battery Life:** To prolong battery life, avoid extreme temperatures and fully discharging the battery frequently.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security.

- **Storage Management:** Periodically clear unnecessary files and uninstall unused apps to free up storage space.

6. TROUBLESHOOTING

6.1 Common Issues and Solutions

- **Tablet Not Turning On:** Ensure the tablet is charged. Connect to the charger for at least 30 minutes. If still unresponsive, perform a hard reset by pressing and holding the power button for 10-15 seconds.
- **Wi-Fi Connectivity Issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the network and reconnect.
- **Apps Crashing/Freezing:** Close and restart the app. Clear the app's cache and data in Settings > Apps. Ensure the tablet's software is up to date.
- **Slow Performance:** Close background apps. Clear cache. Restart the tablet. Consider a factory reset if the issue persists (back up your data first).

6.2 Factory Reset

A factory reset will erase all data from your tablet and restore it to its original factory settings. **Back up all important data before proceeding.**

1. Go to Settings > System > Reset options.
2. Select "Erase all data (factory reset)".
3. Confirm your choice and enter your PIN/password if prompted.
4. The tablet will restart and begin the reset process.

7. SPECIFICATIONS

Feature	Detail
Screen Size	10.1 Inches
Screen Resolution	1920 x 1200 Pixels (FHD IPS)
Processor	Cortex-A55, 1.6GHz Octa-Core Processor
RAM	3 GB DDR3_SDRAM
Internal Storage	64 GB (expandable up to 512 GB via MicroSD)
Operating System	Android 11
Battery Capacity	6000mAh (up to 11 hours continuous usage)
Front Camera	5 MP
Rear Camera	13 MP
Connectivity	Dual Wi-Fi (2.4G+5.0G), Bluetooth, Type-C 2.0
Item Weight	1.03 pounds
Product Dimensions	10 x 6.37 x 3.6 inches



Image: Close-up view of the HAOVM MediaPad P20 Tablet highlighting the rear camera, front camera, MicroSD card slot, 3.5mm stereo jack, power button, volume buttons, and Type-C 2.0 port.

8. OFFICIAL PRODUCT VIDEOS

HAOVM Mediapad P10 10.1 inch Tablet, Android 11

Your browser does not support the video tag.

Video Description: An official video from HAOVM Official Store showcasing the HAOVM Mediapad P10 10.1 inch Tablet running Android 11. This video provides an overview of the tablet's features and unboxing experience.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please refer to the contact details provided in your product packaging or visit the official HAOVM website. Keep your purchase receipt for warranty claims.

