

[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool FFS P8 IT Washing Machine User Manual

Whirlpool FFS P8 IT

Whirlpool FFS P8 IT Front Loading Washing Machine User Manual

Model: **FFS P8 IT** | Brand: **Whirlpool**

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your new Whirlpool FFS P8 IT Front Loading Washing Machine. Please read this manual thoroughly before using the appliance for the first time and keep it for future reference. This washing machine features an 8 kg capacity and a maximum spin speed of 1200 RPM, designed for optimal laundry care.



Front view of the Whirlpool FFS P8 IT washing machine, highlighting the FreshCare+ feature for extended freshness.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if it has a damaged cord or plug, or if it is not working properly.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Always unplug the appliance before cleaning or performing maintenance.
- The appliance is designed for domestic use only.
- The child lock feature can be activated to prevent accidental program changes.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. The appliance comes with a

cable, hose, and washers for installation.

3.1 Unpacking and Positioning

Carefully remove all packaging materials. This washing machine is a freestanding unit. Ensure there is adequate space around the appliance for ventilation and access. The product dimensions are 84.51 cm (height) x 59.51 cm (width) x 62.99 cm (depth).



Dimensions of the washing machine, crucial for proper placement and installation.

3.2 Removing Transit Bolts

Before first use, it is essential to remove the transit bolts located at the rear of the machine. Failure to do so will cause excessive vibration and noise during operation and may damage the appliance.

3.3 Levelling the Appliance

Adjust the feet at the bottom of the washing machine to ensure it is perfectly level. A level appliance reduces vibration and noise during spin cycles.

3.4 Water and Electrical Connections

Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Plug the power cord into a grounded electrical outlet. The appliance operates on 2.3E+2 Volts (AC).

4. OPERATING INSTRUCTIONS

Your Whirlpool washing machine is designed for ease of use with intuitive controls and a variety of programs.

4.1 Control Panel Overview



The main control panel with the program selection dial and digital display.



Detailed view of the digital display, showing cycle time, temperature, and active options like FreshCare+.



The program selection dial, allowing users to choose from a range of wash cycles.

4.2 Loading Laundry and Detergent

Open the door and load laundry, ensuring not to overload the 8 kg capacity. For optimal results, distribute items evenly. Pull out the detergent drawer and add appropriate amounts of detergent and fabric softener to the designated compartments.



The detergent dispenser drawer, where detergent and fabric softener are added.

4.3 Program Selection

Turn the program dial to select your desired wash cycle. Available programs include:

- **Cotton:** For normal to heavily soiled cottons.
- **Synthetics:** For synthetic items or mixed fabrics.
- **Delicates:** For delicate garments requiring gentle care.
- **Wool:** Specific program for wool items.
- **Eco 40-60:** Energy-efficient program for cottons and mixed items washable at 40°C or 60°C.
- **Mixed:** For mixed loads of cotton and synthetic fabrics.
- **Jeans:** Dedicated program for denim.
- **Baby:** For baby clothes, ensuring thorough rinsing.
- **Sports:** For sportswear.
- **Duvets:** For washing duvets and padded items.
- **White:** For white cottons.
- **20°C:** Low-temperature wash for lightly soiled items.
- **Quick 30':** A rapid 30-minute wash cycle.
- **Rinse & Spin:** For rinsing and spinning items.
- **Spin & Drain:** For spinning and draining water.
- **Single Drain:** For draining water only.

4.4 Options and Features

Customize your wash cycle using the available options:

- **FreshCare+:** Gently treats clothes with slow basket oscillations and steam jets for up to 6 hours after the cycle ends, keeping them fresh and preventing odors.
- **6th Sense Technology:** Automatically adapts water and energy usage based on the load size, optimizing resources.
- **Pre-wash:** For heavily soiled items.
- **Delay Start:** Postpone the start of the wash cycle.
- **Temperature:** Adjust the wash temperature.
- **Spin:** Adjust the spin speed (up to 1200 RPM).
- **Child Lock:** Locks the control panel to prevent accidental changes.
- **Start/Pause:** To begin or temporarily stop a cycle.

4.5 Starting a Wash Cycle

After selecting the program and options, press the Start/Pause button to begin the cycle. The display will show the remaining time.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

5.1 Cleaning the Exterior

Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.2 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

5.3 Cleaning the Door Seal

Wipe the rubber door seal after each wash to remove any lint or residue and prevent mold growth.

5.4 Cleaning the Pump Filter

Regularly check and clean the pump filter, usually located at the bottom front of the machine, to remove foreign objects and lint.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; program not selected; Start/Pause button not pressed.	Check power supply; ensure door is firmly closed; select a program and press Start/Pause.
Excessive vibration/noise	Transit bolts not removed; machine not level; uneven load.	Remove transit bolts; adjust feet to level machine; redistribute laundry inside the drum.
Water not draining	Drain hose kinked or blocked; pump filter clogged.	Check and straighten drain hose; clean the pump filter.
Detergent residue in dispenser	Insufficient water pressure; detergent drawer clogged.	Check water supply; clean the detergent dispenser drawer.

7. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Whirlpool
Model	FFS P8 IT
Product Dimensions (H x W x D)	84.51 x 59.51 x 62.99 cm
Item Weight	67 kg
Standard Capacity Cycle	8 Kilograms
Maximum Rotational Speed	1200 RPM
Energy Efficiency Class	C
Installation Type	Freestanding
Special Features	Inverter Motor, Child Lock, Delayed Start, FreshCare+
Colour	White
Control Console	Button and Touch

Feature	Detail
Number of Standard Cycles	14
Access Location	Frontal carica (Front Load)
Voltage	2.3E+2 Volts (AC)

8. WARRANTY AND SUPPORT

Your Whirlpool FFS P8 IT washing machine comes with a manufacturer's warranty. The Inverter motor is guaranteed for 10 years, ensuring long-lasting performance and energy savings.

For detailed warranty terms and conditions, please refer to the warranty card included with your appliance or visit the official Whirlpool website. For technical assistance or spare parts, please contact Whirlpool customer support.

You can visit the official Whirlpool Store for more information: [Whirlpool Store on Amazon](#).

