

[Manuals.plus](#) /

› [Carrera](#) /

› Carrera RC Mario Kart Yoshi Quad 370200997X Instruction Manual

Carrera 370200997X

Carrera RC Mario Kart Yoshi Quad 370200997X Instruction Manual

Model: 370200997X

1. INTRODUCTION

The Carrera RC Mario Kart Yoshi Quad (Model 370200997X) is a remote-controlled vehicle designed for users aged 6 and up. This manual provides essential information for the safe and optimal use of your RC Yoshi Quad, ensuring an enjoyable experience. Please read all instructions carefully before operating the product.

2. WHAT'S IN THE BOX

Carefully unpack all components and ensure the following items are included:

- Carrera RC Yoshi Quad Vehicle
- Remote Control
- 3.2V 700 mAh LiFePo4 Battery (for vehicle)
- USB Charging Cable
- Instruction Manual



Image: The Carrera RC Mario Kart Yoshi Quad shown in its original retail packaging, indicating included components.

3. SETUP

3.1. Charging the Vehicle Battery

Before first use, fully charge the vehicle's 3.2V 700 mAh LiFePo4 battery. The charging process typically takes approximately 50 minutes.

1. Connect the USB charging cable to the vehicle's charging port.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, USB wall adapter, power bank).
3. The charging indicator light on the vehicle or cable will show the charging status (refer to specific indicator behavior in the quick start guide if available).
4. Once charging is complete, disconnect the cable.



Image: The Yoshi Quad vehicle, ready for battery charging via its USB cable.

3.2. Remote Control Battery Installation

The remote control requires batteries for operation. Please ensure you use the correct type and polarity.

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert the required batteries (e.g., AA or AAA, typically 2x) according to the polarity markings (+/-).
4. Close the battery compartment cover securely.



Image: The Carrera RC remote control, showing its design and controls.

3.3. Pairing the Vehicle and Remote Control

To establish a connection between the vehicle and the remote control, follow these steps:

1. Ensure both the vehicle and the remote control have fresh or fully charged batteries.
2. Turn on the vehicle using its power switch.
3. Turn on the remote control using its power switch.
4. The vehicle and remote control should automatically pair. A successful connection is usually indicated by a solid light on both devices (refer to your quick start guide for specific light indicators).

Your browser does not support the video tag.

Video: This video demonstrates the unboxing, battery installation, and initial pairing process for the Carrera RC Mario Kart Yoshi Quad.

4. OPERATING INSTRUCTIONS

Once paired, you can begin operating your Carrera RC Yoshi Quad.

1. **Forward/Backward:** Use the throttle trigger or joystick on the remote control to move the vehicle forward or backward.
2. **Steering:** Use the steering wheel or directional controls on the remote control to turn the vehicle left or

right.

3. **Speed:** The Yoshi Quad can reach speeds of up to 9 km/h. Adjust your control input for desired speed.
4. **Range:** Operate the vehicle within the specified range of the remote control to maintain connection and avoid loss of control.

Safety Precautions:

- Always operate in open areas, away from people, pets, and obstacles.
- Do not operate near water or in wet conditions.
- Avoid operating on public roads or near traffic.
- Supervise younger children during operation.

5. MAINTENANCE

5.1. Cleaning

To maintain the appearance and functionality of your RC Yoshi Quad:

- Wipe the vehicle and remote control with a soft, dry cloth after each use.
- Do not use harsh chemicals or solvents, as these can damage the plastic.
- Avoid getting water into electronic components.

5.2. Battery Care and Storage

- Always remove batteries from the remote control if not in use for extended periods.
- Store the vehicle's LiFePo4 battery in a cool, dry place, away from direct sunlight and extreme temperatures.
- Do not overcharge or completely discharge the battery.

6. TROUBLESHOOTING

If you encounter issues with your RC Yoshi Quad, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vehicle does not move.	Low or uncharged vehicle battery. Remote control batteries are dead or incorrectly installed. Vehicle and remote not paired.	Charge vehicle battery. Replace/install remote control batteries correctly. Re-pair vehicle and remote control.
Poor control range or intermittent connection.	Interference from other RC devices or electronics. Operating beyond effective range. Low batteries.	Move to a different location. Operate closer to the vehicle. Charge/replace batteries.
Vehicle moves slowly or erratically.	Low vehicle battery. Obstruction in wheels/axles.	Charge vehicle battery. Check and clear any obstructions.

7. SPECIFICATIONS

Brand	Carrera
Model Name	370200997X
Character	Yoshi
Vehicle Type	Quad
Material	Plastic
Color	Multicolor (predominantly Green)
Age Range (Description)	6+ years
Max Speed	9 Kilometers per hour
Power Source	Battery Powered
Vehicle Battery Type	1 Lithium-ion (3.2V 700 mAh LiFePo4) - included
Charging Time	Approx. 50 minutes
Operating Time	Up to 30 minutes
Remote Control Type	Radio Control (2.4 GHz)
Dimensions (Item)	36.5 x 20.5 x 23 centimeters
Weight (Item)	1.06 Kilograms
Special Feature	Flashing Light
Country of Origin	China

8. WARRANTY AND SUPPORT

8.1. Manufacturer's Warranty

This Carrera RC product is covered by a **2-year manufacturer's warranty**. Please retain your proof of purchase for any warranty claims. The warranty covers defects in materials and workmanship under normal use.

8.2. Customer Support

For technical assistance, spare parts, or warranty inquiries, please contact Carrera customer support. Refer to the contact information provided on the product packaging or the official Carrera website.