

Lights4fun FBA_LL21018

Lights4fun Lion Head LED Wall Light Instruction Manual

Model: FBA_LL21018

INTRODUCTION

Thank you for choosing the Lights4fun Lion Head LED Wall Light. This battery-operated wall light features 36 warm white LEDs, a remote control, and a convenient 6-hour timer function. Designed for indoor use, it provides a gentle illumination suitable for various spaces. Please read this manual carefully before installation and use to ensure proper operation and longevity of your product.

SETUP INSTRUCTIONS

1. Battery Installation

The wall light requires 3 x AAA/LR03 batteries (not included). The remote control requires 1 x CR2025 battery (included). Ensure correct polarity when inserting batteries.

1. Locate the battery compartment on the back of the lion head wall light.
2. Open the battery compartment cover.
3. Insert 3 x AAA/LR03 batteries, observing the polarity markings (+/-).
4. Close the battery compartment cover securely.
5. For the remote control, pull out the plastic tab from the battery slot. If replacing, open the small battery tray and insert a new CR2025 battery with the positive side facing up.



Image: Rear view of the wall light, illustrating the battery compartment for AAA batteries.

2. Wall Mounting

The wall light is designed for easy display on any indoor wall.

1. Choose a suitable indoor location for mounting.
2. Use appropriate wall fixings (not included) for your wall type.
3. Hang the light securely using the designated mounting points on the back.

OPERATING INSTRUCTIONS

The Lights4fun Lion Head LED Wall Light is operated using the included remote control.



Image: The illuminated lion head wall light with its remote control.

Remote Control Functions

- **ON Button:** Press to turn the light on.
- **OFF Button:** Press to turn the light off.
- **TIMER Button:** Press to activate the 6-hour timer function. When activated, the light will stay on for 6 hours, then turn off for 18 hours, and automatically turn on again at the same time the next day.

Using the Timer Function

To set the 6-hour timer:

1. Turn the light ON using the remote control.
2. Press the TIMER button on the remote control. The light will flash once to confirm the timer is activated.
3. The light will now operate on a 6-hour ON / 18-hour OFF cycle.
4. To deactivate the timer, simply press the ON or OFF button again.

MAINTENANCE

Cleaning

To clean the wall light, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.

Battery Replacement

When the light dims or stops functioning, it is time to replace the batteries. Follow the battery installation steps in the Setup section. Always replace all batteries at the same time with new ones of the same type. Remove batteries if the product is not used for an extended period.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Batteries are dead or incorrectly inserted.	Check battery polarity and replace with fresh AAA batteries.
Remote control is not working.	Remote control battery is dead or plastic tab not removed.	Ensure the plastic tab is removed. Replace the CR2025 battery in the remote control. Ensure you are within range of the light.
Timer function is not activating.	Timer button not pressed correctly or light was already off.	Ensure the light is ON before pressing the TIMER button. The light should flash once to confirm activation.
Light dims quickly.	Batteries are low.	Replace all AAA batteries with fresh ones.

PRODUCT SPECIFICATIONS

- **Brand:** Lights4fun
- **Model Number:** FBA_LL21018
- **Dimensions (H x W x D):** 35 cm x 36.5 cm x 3.4 cm
- **Weight:** 950 g
- **Material:** Wood
- **LEDs:** 36 Warm White LEDs
- **Power Source (Light):** 3 x AAA/LR03 Batteries (not included)
- **Power Source (Remote):** 1 x CR2025 Battery (included)
- **Voltage:** 4.5 Volts
- **Power:** 1.62 Watts
- **Special Features:** Remote Control, 6-Hour Timer
- **Usage:** Indoor Only (IP20 Rated)

WARRANTY INFORMATION

For information regarding product warranty, please refer to the purchase documentation or contact Lights4fun customer

service. Keep your proof of purchase for any warranty claims.


SUPPORT

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Lights4fun customer support through their official website or the retailer where the product was purchased. Please have your model number (FBA_LL21018) and purchase details ready.



© 2023 Lights4fun. All rights reserved.

Related Documents - FBA_LL21018



[Lights4fun Wireframe Reindeer Decoration Assembly Guide](#)

Concise assembly instructions for the Lights4fun wireframe reindeer decoration, featuring multilingual guidance and product details.