

Waikil WK-9008

Waikil 3-in-1 Rechargeable Shaver, Hair Clipper, and Nose Trimmer User Manual

Model: WK-9008

INTRODUCTION

Thank you for choosing the Waikil 3-in-1 Rechargeable Grooming Kit. This versatile device combines a professional shaver, hair clipper, and nose trimmer into one compact unit, designed for efficient and comfortable personal grooming. With high-quality materials and a super thin head, it allows for precise trimming without skin damage and reaches difficult areas with ease. Please read this manual carefully before use to ensure proper operation and maintenance.

SAFETY INFORMATION

For your safety and to ensure proper operation, please observe the following precautions:

- This appliance is intended for personal grooming only. Do not use it for any other purpose.
- Keep the device dry. Do not immerse the main body in water or use it in wet environments like showers or bathtubs.
- Do not use the device if the blades are damaged or broken, as this may cause skin irritation or injury.
- Keep out of reach of children. This device is not a toy.
- Only use the provided power adapter for charging. Using an incorrect adapter may damage the device or cause fire.
- Unplug the device before cleaning.
- Do not disassemble or attempt to repair the device yourself. Contact qualified service personnel for repairs.
- Avoid extreme temperatures. Store the device in a cool, dry place.

PRODUCT OVERVIEW AND COMPONENTS



Figure 1: Waikil 3-in-1 Grooming Kit Packaging. This image displays the product box, highlighting the main rechargeable unit and its three primary functions: shaver, hair clipper, and nose trimmer. It also shows the various accessories included.



Figure 2: Waikil 3-in-1 Grooming Kit Components. This image shows the main grooming device along with its interchangeable heads (shaver, hair clipper, nose trimmer), charging cable, cleaning brush, and oil bottle, all neatly arranged in their packaging tray.

Included Accessories:

- Main Grooming Unit (Rechargeable)
- Shaver Head
- Barber Head (Hair Clipper)
- Nose Head (Nose Trimmer)
- Cleaning Brush
- Protective Cover
- Power Adapter
- Oil Bottle
- Haircut Limit Comb (Attachment for hair clipper)

SETUP

1. Initial Charging:

1. Before first use, ensure the device is fully charged.
2. Connect the power adapter to the charging port on the main unit.
3. Plug the adapter into a suitable electrical outlet.
4. Allow the device to charge for approximately 8 hours for the first charge. Subsequent charges may take less time. The charging indicator light (if present) will show charging status.
5. Once fully charged, unplug the adapter from the outlet and the device.

2. Attaching/Detaching Heads:

1. Ensure the device is turned off before attaching or detaching any head.
2. To attach a head (Shaver, Barber, or Nose Trimmer), align the head with the main unit and gently push it down until it clicks into place.
3. To detach a head, firmly grasp the head and pull it upwards away from the main unit.

OPERATING INSTRUCTIONS

General Operation:

- Press the power button to turn the device ON.
- Press the power button again to turn the device OFF.

Using the Shaver Head:

1. Attach the Shaver Head to the main unit.
2. Turn on the device.
3. Hold the shaver at a right angle to your skin and move it gently against the direction of hair growth.
4. Stretch your skin with your free hand to ensure a smooth shave.

Using the Hair Clipper (Barber Head):

1. Attach the Barber Head to the main unit.
2. If desired, attach the haircut limit comb to achieve a specific hair length.
3. Turn on the device.
4. Move the clipper slowly and steadily against the direction of hair growth.
5. For best results, ensure hair is clean and dry.

Using the Nose Trimmer Head:

1. Attach the Nose Head to the main unit.
2. Turn on the device.
3. Gently insert the trimmer tip into your nostril or ear canal.
4. Move the trimmer in a circular motion to trim unwanted hair. Do not insert too deeply.

MAINTENANCE

Cleaning:

1. Always turn off and unplug the device before cleaning.
2. Detach the used head from the main unit.
3. Use the provided cleaning brush to remove hair clippings from the blades and inside the head.
4. The shaver and clipper heads can be rinsed under running water, but ensure the main unit remains dry. Dry thoroughly before reattaching.
5. Wipe the main unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Lubrication:

- After cleaning, apply a small drop of the included oil (or light machine oil) to the blades of the shaver and clipper heads.
- Turn on the device for a few seconds to distribute the oil evenly. This helps maintain blade performance and longevity.

Storage:

- Store the device and all accessories in a cool, dry place, away from direct sunlight and moisture.
- Use the protective cover for the shaver head when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is low or depleted.	Charge the device fully.
Device does not charge.	Power adapter not properly connected or faulty outlet.	Ensure adapter is securely plugged in. Try a different outlet.
Poor trimming/shaving performance.	Blades are dull, clogged with hair, or not lubricated.	Clean the blades thoroughly. Apply a drop of oil to the blades. If performance does not improve, blades may need replacement (contact support).
Device makes unusual noise.	Hair caught in the mechanism or head not properly attached.	Turn off and clean the head. Reattach the head securely.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** WK-9008 (ZME-4328)
- **Brand:** Waikil (Generic)
- **Power Source:** Battery Powered (Rechargeable)
- **Special Features:** Cordless, 3-in-1 functionality (Shaver, Hair Clipper, Nose Trimmer)
- **Recommended Use:** Personal Grooming
- **Manufacturer:** Zamani Generic

- **ASIN:** B08Q84Y3C4
- **First Available:** 10 December 2020

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or spare parts, please refer to the warranty card included with your purchase or contact the retailer/manufacturer directly. Keep your purchase receipt as proof of purchase. No official product videos are available from the seller for this product.

© 2023 Waikil. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question