

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

DEZIN DZ150

DEZIN Hot Pot Electric User Manual

Model: DZ150

INTRODUCTION

Thank you for purchasing the DEZIN Hot Pot Electric. This versatile appliance is designed to simplify your cooking experience, allowing you to prepare a variety of meals with ease. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The DEZIN Hot Pot Electric in pink, shown with a meal of noodles, egg, and vegetables.

SAFETY PRECAUTIONS

- Always ensure the power cord is securely connected and the voltage matches your power supply.
- Do not immerse the main unit (pot with handle and electrical components) in water or other liquids.
- Keep out of reach of children.
- Use only on a stable, heat-resistant surface.
- Do not touch hot surfaces during or immediately after operation. Use the handle.

- Unplug the appliance when not in use and before cleaning.
- Do not operate if the appliance or power cord is damaged. Contact customer support.
- The appliance features **over-heating protection** and **boil dry protection** for safety.

Perfect for Frying



Image: Visual representation of the hot pot's built-in safety features: overheating protection and dry-boil protection.

PRODUCT COMPONENTS

- **Main Pot Unit:** Features a non-stick coating and integrated heating element.
- **Tempered Glass Lid:** Allows for monitoring cooking progress.
- **Power Adjustment Knob:** Controls heating settings (OFF, 250W, 600W).
- **Ergonomic Handle:** For safe handling and portability.
- **Detachable Power Cord:** For easy storage and connection.

Thoughtful Design



BPA-free Non-stick Coating



Visivle Glass Lid



Ergonomic Handle



Detachable Power Cord

Image: A detailed view highlighting the key design elements: the BPA-free non-stick interior, the transparent glass lid, the comfortable ergonomic handle, and the convenient detachable power cord.

SETUP AND FIRST USE

1. Unpack all components and remove any packaging materials.
2. Wipe the interior of the pot and the glass lid with a damp cloth, then dry thoroughly. Do not wash the main unit under running water.
3. Place the hot pot on a flat, stable, and heat-resistant surface.
4. Connect the detachable power cord to the appliance and then plug it into a standard 110V electrical outlet.
5. For first use, it is recommended to boil a small amount of water in the pot for 5 minutes to remove any manufacturing residues. Discard the water and dry the pot.

OPERATING INSTRUCTIONS

Power Settings:

The DEZIN Hot Pot features a power adjustment knob with two heating settings:

- **250W (Low Power):** Ideal for simmering, keeping food warm, or cooking delicate items like eggs, pancakes, and spaghetti.
- **600W (High Power):** Suitable for rapid boiling, sautéing, frying, and cooking dishes like steak, deep-fried items, or hot pot.



Image: The power control knob, illustrating its 250W setting for gentle cooking (eggs, pancakes, spaghetti) and 600W setting for high-heat cooking (steak, deep fry, hot pot).

General Cooking Steps:

1. Add desired ingredients and liquid (if applicable) to the pot. Do not overfill.
2. Place the glass lid on the pot.
3. Turn the power adjustment knob to either 250W or 600W, depending on your cooking needs.

4. Monitor cooking progress through the glass lid. Stir as needed.
5. Once cooking is complete, turn the knob to "OFF" and unplug the appliance from the wall outlet.
6. Carefully serve the food. The pot and its contents will be hot.



Image: Demonstrates the versatility of the hot pot for various cooking methods including frying, steaming, sautéing, and stewing.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your DEZIN Hot Pot.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cleaning the Pot Interior:** The non-stick coating makes cleaning easy. Wipe the interior with a soft sponge or cloth and mild dish soap. Rinse with a damp cloth and dry thoroughly. Do not use abrasive cleaners, metal scrubbers, or sharp objects, as these can damage the non-stick surface.
3. **Cleaning the Exterior:** Wipe the exterior of the pot and handle with a damp cloth. Do not immerse the main unit in water.
4. **Cleaning the Glass Lid:** The glass lid can be washed with warm soapy water and rinsed thoroughly.
5. **Storage:** Ensure the appliance is clean and dry before storing. Store in a cool, dry place.

HEALTHY NONSTICK

Easy to Clean & Toxin-Free



Image: A hand demonstrating the ease of cleaning the healthy non-stick interior of the hot pot using a soft sponge.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; power cord damaged.	Ensure power cord is securely plugged into a working outlet. Check household circuit breaker. If cord is damaged, do not use and contact support.
Food sticks to the pot.	Insufficient oil/liquid; high heat for too long; damaged non-stick coating.	Use adequate oil/liquid. Adjust power setting. Avoid using metal utensils or abrasive cleaners that can damage the coating.

Problem	Possible Cause	Solution
Appliance stops heating during use.	Over-heating protection activated; boil dry protection activated.	Unplug the appliance and let it cool down. Add more liquid if necessary. Resume operation after cooling.
Unusual odor during first use.	Normal for new appliances.	This is normal. Ensure good ventilation. The odor should dissipate after initial uses.

SPECIFICATIONS

Brand: DEZIN

Model: DZ150

Capacity: 1.5 Liters (1.6 Quarts)

Material: Non-stick coating

Color: Pink

Product Dimensions: 13.98"D x 4.02"W x 7.28"H

Wattage: 600 watts (Max)

Voltage: 110 Volts

Item Weight: 1.3 Pounds (approx. 0.6 kg)

Control Method: Touch / Push Button (Rotary Knob)

Dishwasher Safe: No

UPC: 789219697484

1.5L CAPACITY



Image: Visual representation of the hot pot's compact dimensions and 1.5L capacity, indicating it can serve 1-5 bowls of soup.

WARRANTY AND SUPPORT

DEZIN products are manufactured to high-quality standards. For any issues or inquiries regarding your DEZIN Hot Pot Electric, please contact our customer support team.

Please have your model number (DZ150) and purchase information ready when contacting support.

For more information and support, visit the official DEZIN store: [DEZIN Store on Amazon](#)