

[Manuals.plus](#) /

› [Audizio](#) /

› Audizio Prato All-in-One Music System User Manual

Audizio Prato

Audizio Prato All-in-One Music System

USER MANUAL

1. Introduction

Thank you for purchasing the Audizio Prato All-in-One Music System. This versatile device combines a DAB+ radio, FM tuner, CD player, Bluetooth 5.3 connectivity, and USB MP3 playback, offering a complete audio solution for your home. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.



Image 1.1: The Audizio Prato All-in-One Music System shown with its included remote control, highlighting its compact design and various input options.

2. Safety Information

Please read these safety instructions carefully before using the device and retain them for future reference. Incorrect use may result in electric shock, fire, or other hazards.

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure the power cord is not pinched or walked on, especially at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

3. Package Contents

Please check that all items are present and in good condition upon unpacking:

- Audizio Prato All-in-One Music System
- Remote Control
- Power Adapter
- User Manual (this document)

4. Product Overview

4.1 Front Panel Controls and Features



Image 4.1: The Audizio Prato unit positioned on a wooden cabinet, providing a clear view of its front panel, integrated display, and stereo speakers.

The front panel of the Audizio Prato features the main controls and display:

- **LCD Display:** Shows current mode, station information, track details, time, and menu options.

- **CD Slot:** For inserting audio CDs and MP3 CDs.
- **Power/Standby Button:** Turns the unit on or off.
- **Menu Button:** Accesses the system menu.
- **Volume Knob:** Adjusts the audio output level. Press to confirm selections.
- **Function Button:** Cycles through different input modes (DAB, FM, CD, Bluetooth, USB, AUX).
- **Play/Pause Button:** Controls playback for CD, USB, and Bluetooth modes.
- **Skip/Tune Buttons:** Navigates tracks, stations, or menu options.
- **Preset Buttons (1, 2, 3):** Quick access to stored radio presets.
- **Audio In (AUX) Port:** 3.5mm jack for connecting external audio devices.
- **USB Port:** For playing MP3 files from a USB flash drive.
- **Charging Port (USB):** For charging external devices.
- **Headphones Output:** 3.5mm jack for private listening.



INTEGRATED SLOT-LOAD CD PLAYER



Image 4.2: A detailed view of the integrated slot-load CD player on the Audizio Prato, showing a CD being inserted.

CONNECTIONS



AUDIO IN

USB PORT

USB CHARGING

HEADPHONES OUTPUT

audizio

Image 4.3: A diagram illustrating the various connection points on the Audizio Prato, including Audio In, USB Port, USB Charging, and Headphones Output.

The rear panel includes the power input and the telescopic antenna.

- **DC IN:** Power adapter connection port.
- **Telescopic Antenna:** For DAB+ and FM radio reception. Extend fully for best signal.

4.3 Remote Control

COMPACT DESIGN



REMOTE INCLUDED

audizio

Image 4.4: The Audizio Prato unit displayed alongside its remote control, with dimensions indicated for the main unit.

The included remote control allows convenient operation of all functions from a distance. Ensure batteries are correctly inserted.

5. Setup

5.1 Unpacking and Placement

Carefully remove the unit from its packaging. Place the unit on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.

5.2 Connecting Power

1. Connect the power adapter to the DC IN port on the rear of the unit.
2. Plug the power adapter into a wall socket.

5.3 Antenna Adjustment

Extend the telescopic antenna fully for optimal DAB+ and FM radio reception. Adjust its position for the best signal quality.

5.4 Initial Power On

Press the Power/Standby button on the unit or remote control. The display will light up, and the unit will typically enter DAB+ mode and perform an initial scan for stations.

6. Operating Instructions

6.1 Basic Operation

- **Power On/Off:** Press the Power/Standby button.
- **Volume Control:** Rotate the Volume knob or use the VOL+/- buttons on the remote.
- **Mode Selection:** Press the Function button repeatedly to cycle through DAB, FM, CD, Bluetooth, USB, and AUX modes.
- **Menu Navigation:** Press the Menu button to enter the menu. Use the Skip/Tune buttons to navigate and the Volume knob (press) or OK button on the remote to confirm.

6.2 DAB/DAB+ Radio Operation

In DAB mode, the unit will automatically scan for available stations upon first use. If no stations are found or you wish to rescan:

1. Press the Function button to select DAB mode.
2. Press the Menu button.
3. Select "Full Scan" and press OK. The unit will scan for all available DAB+ stations.
4. Once the scan is complete, use the Skip/Tune buttons to browse the station list.
5. **Storing Presets:** Tune to your desired station. Press and hold a Preset button (1, 2, or 3) until "Preset Stored" appears.
6. **Recalling Presets:** Briefly press a Preset button (1, 2, or 3) to recall a stored station.

SUPERIOR AUDIO QUALITY



FRONT FACING FULL-RANGE SPEAKERS

 audizio

Image 6.1: A close-up view of the Audizio Prato, emphasizing its front-facing full-range stereo speakers, designed for superior audio quality.

6.3 FM Radio Operation

1. Press the Function button to select FM mode.
2. **Auto Scan:** Press and hold the Play/Pause button to automatically scan and store available FM stations.
3. **Manual Tuning:** Briefly press the Skip/Tune buttons to fine-tune the frequency.
4. **Storing Presets:** Tune to your desired station. Press and hold a Preset button (1, 2, or 3) until "Preset Stored" appears.
5. **Recalling Presets:** Briefly press a Preset button (1, 2, or 3) to recall a stored station.

6.4 CD Playback

1. Press the Function button to select CD mode.
2. Gently insert an audio CD or MP3 CD into the CD slot with the label side facing up. The unit will automatically load the CD and begin playback.

3. **Play/Pause:** Press the Play/Pause button.
4. **Skip Track:** Press the Skip/Tune buttons to go to the next or previous track.
5. **Fast Forward/Rewind:** Press and hold the Skip/Tune buttons.
6. **Repeat/Random:** Use the dedicated buttons on the remote control for these functions.

6.5 Bluetooth Operation



Image 6.2: The Audizio Prato shown in a living room setting with a smartphone, demonstrating its capability for Bluetooth audio streaming and USB media playback.

1. Press the Function button to select Bluetooth mode. The display will show "Bluetooth Pairing" or "Waiting for Connection".
2. On your smartphone, tablet, or other Bluetooth device, enable Bluetooth and search for "Audizio Prato".
3. Select "Audizio Prato" from the list of available devices to pair. Once connected, the display will show "Bluetooth Connected".
4. You can now play audio from your device through the Audizio Prato. Use the unit's or remote's Play/Pause and Skip

buttons to control playback.

6.6 USB Playback

1. Insert a USB flash drive (formatted to FAT32) containing MP3 files into the USB port on the front panel.
2. Press the Function button to select USB mode. The unit will automatically detect the USB drive and begin playing the first compatible audio file.
3. Use the Skip/Tune buttons to navigate between tracks.
4. Use the Play/Pause button to control playback.

6.7 AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the "Audio In" (AUX) port on the front panel using a 3.5mm audio cable (not included).
2. Press the Function button to select AUX mode.
3. Control playback directly from your connected external device.

6.8 Clock and Alarm Functions

WAKE UP WITH AUDIZIO



ALARM & SNOOZE FUNCTION

LCD DISPLAY WITH DIMMER

 audizio

Image 6.3: The Audizio Prato unit displayed on a shelf, highlighting its alarm and snooze functions, and its LCD display with dimmer capability.

The Audizio Prato features a clock with alarm and sleep timer functions.

- **Setting Time:** The time is usually set automatically via DAB+ signal. If not, access the "System Settings" menu to manually set the time and date.
- **Setting Alarms:** Navigate to the "Alarm" option in the menu. You can set two independent alarms, choosing the source (Buzzer, DAB, FM), volume, and frequency (daily, once, weekends, weekdays).
- **Sleep Timer:** Access the "Sleep" option in the menu to set a timer (e.g., 15, 30, 45, 60 minutes) after which the unit will automatically switch to standby.

7. Maintenance

7.1 Cleaning

To clean the unit, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as these may damage the surface. For the CD slot, use a specialized CD lens cleaner if necessary.

8. Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty socket.	Check power connections. Try a different power outlet.
No sound	Volume too low; wrong input mode; headphones connected.	Increase volume. Select correct input mode. Disconnect headphones.
Poor radio reception	Antenna not extended; weak signal; interference.	Extend and adjust antenna. Try repositioning the unit. Perform a full scan.
CD not playing	CD inserted incorrectly; dirty/scratched CD; unsupported format.	Ensure CD is inserted correctly (label up). Clean or try another CD. Ensure it's an audio CD or MP3 CD.
Bluetooth pairing issues	Device not in pairing mode; "Audizio Prato" not found; too far from unit.	Ensure unit is in Bluetooth mode. Restart Bluetooth on your device. Move closer to the unit.
USB not recognized	Unsupported USB format; no compatible files; faulty USB drive.	Ensure USB is FAT32 format. Check for MP3 files. Try another USB drive.

9. Specifications

- **Brand:** Audizio
- **Model:** Prato
- **Connectivity Technology:** Bluetooth 5.3, USB, AUX
- **Colour:** Black
- **Speaker Type:** Stereo, Full-range
- **Dimensions (L x W x H):** 44.3 x 26 x 19 centimetres
- **Radio Tuner:** DAB+, FM
- **CD Player:** Slot-load, supports Audio CD, CD-R/RW, MP3 CD
- **Power Supply:** AC 100-240V ~ 50/60Hz (via included adapter)

10. Warranty and Support

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or spare parts, please contact your retailer or visit the official Audizio website for contact information.

Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08Q87B7DP>

More documents and user manuals: <https://manuals.plus/>