



[Manuals.plus](#) /

> [Best Choice Products](#) /

> Best Choice Products 3-Seat Outdoor Canopy Swing Glider (Model SKY5936) User Manual

Best Choice Products SKY5936

Best Choice Products 3-Seat Outdoor Canopy Swing Glider User Manual

Model: SKY5936

INTRODUCTION

Thank you for choosing the Best Choice Products 3-Seat Outdoor Canopy Swing Glider. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor swing. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

- Always ensure the swing is assembled on a flat, stable surface.
- Do not exceed the maximum weight capacity of 750 lbs (approximately 3 adults).
- Keep children and pets away from the assembly area during setup.
- Regularly inspect all bolts and connections to ensure they are tight and secure.
- Do not use the swing in extreme weather conditions, such as strong winds or heavy rain. Secure or remove the canopy during high winds.
- Ensure adequate clearance around the swing to prevent collisions.
- Do not stand on the swing or use it for purposes other than its intended design.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Steel Frame Components (various poles and connectors)
- Canopy Fabric
- Seat Cushions (3 individual plush cushions)

- Hardware Pack (bolts, nuts, washers, tools)
- Assembly Instructions Manual

SETUP AND ASSEMBLY

Assembly typically requires two people and approximately one hour. Follow the step-by-step instructions provided in the included manual. Ensure all connections are tightened securely before use.



Image: Overall dimensions of the swing glider, showing length, width, and height measurements.

Video: Official product video demonstrating the assembly and features of the 3-Seat Canopy Swing Glider.

OPERATING INSTRUCTIONS

2-in-1 Converting Seat

The swing features a versatile 2-in-1 design, allowing it to convert from a bench seat to a flatbed. To convert, locate the lock and release system on the back of the seat. Engage the mechanism to recline the backrest fully, transforming the bench into a comfortable flatbed for lounging. To return to the seated position, reverse the process, ensuring the backrest locks securely into place.



Image: The swing glider configured as a flatbed, demonstrating its 2-in-1 functionality. Note: Burgundy color shown.

Adjusting the Canopy

The built-in tilt system allows you to adjust the angle of the canopy up to 45 degrees. This feature helps block sunlight throughout the day. To adjust, loosen the knobs on each side of the canopy frame, position the canopy to your desired angle, and then tighten the knobs to secure it in place.

ADJUSTABLE CANOPY

A built-in tilt system lets you freely adjust the canopy to block sunlight



Image: Visual representation of the adjustable canopy, highlighting its 45-degree tilt capability.

CARE AND MAINTENANCE

- **Cleaning:** The weather-resistant polyester canopy and cushion covers can be cleaned with mild soap and water. Rinse thoroughly and allow to air dry completely.
- **Frame Care:** The powder-coated steel frame should be wiped down periodically with a damp cloth to remove dirt and debris. Avoid abrasive cleaners that may damage the finish.
- **Storage:** During off-season or prolonged periods of non-use, it is recommended to store the swing in a dry, protected area to extend its lifespan. If storing outdoors, use a weather-resistant cover.
- **Inspection:** Regularly check all nuts, bolts, and moving parts for tightness and wear. Tighten any loose fasteners and replace worn components as needed.

QUALITY & COMFORT

A weather-resistant polyester canopy and steel frame are built to last



Heavy-Duty Steel Spring Lock



Powder-Coated Frame



UV-Resistant Polyester



Image: Details of the swing's construction, emphasizing durable materials like powder-coated steel and UV-resistant polyester.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose bolts or uneven assembly surface.	Ensure all bolts are tightened. Move the swing to a level surface.
Canopy does not stay in position.	Canopy adjustment knobs are loose.	Tighten the adjustment knobs firmly after positioning the canopy.
Seat conversion mechanism is stiff.	Mechanism may require lubrication or is obstructed.	Apply a silicone-based lubricant to moving parts. Check for any obstructions.
Cushions slide off the seat.	Lack of securing ties or non-slip backing.	Consider adding non-slip mats under the cushions or securing them with ties if available.

SPECIFICATIONS

- **Brand:** Best Choice Products
- **Model Number:** SKY5936
- **Color:** Navy
- **Material:** Polyester, Alloy Steel
- **Finish Type:** Powder Coated
- **Overall Dimensions (L x W x H):** 75" x 47" x 69"
- **Item Weight:** 82 Pounds
- **Maximum Weight Recommendation:** 750 Pounds
- **Maximum Compatible Number of Seats:** 3
- **Seat Depth:** 21 inches
- **Assembly Required:** Yes
- **UPC:** 842957123605

WARRANTY AND SUPPORT

This product is offered with a 30-day easy returns policy for refund or replacement. For customer support or to inquire about warranty details beyond the return period, please contact Best Choice Products Inc directly. Refer to your purchase documentation for specific contact information.

For additional information or assistance, please visit the [product page on Amazon](#).