

[Manuals.plus](#) /

› [Accutime](#) /

› Teenage Mutant Ninja Turtles Kids Smart Watch User Manual

Accutime TMR4093AZ

Teenage Mutant Ninja Turtles Kids Smart Watch User Manual

Model: TMR4093AZ | Brand: Accutime

INTRODUCTION

This manual provides essential information for the safe and effective use of your Teenage Mutant Ninja Turtles Kids Smart Watch. Please read it thoroughly before operating the device and retain it for future reference.

The Accutime Teenage Mutant Ninja Turtles Kids Smart Watch is an interactive device designed for young users, featuring a range of entertainment and practical functions. It includes customizable watch faces, built-in games, a selfie camera, a voice recorder, and tools such as an alarm, timer, stopwatch, calculator, step tracker, and calorie counter.

PACKAGE CONTENTS

- Teenage Mutant Ninja Turtles Kids Smart Watch
- USB Charging Cable
- User Manual

SETUP

Charging the Smart Watch

Before first use, fully charge the smart watch. Connect the included USB charging cable to the watch's charging port and plug the other end into a standard USB power adapter (not included) or a computer's USB port. The charging indicator will show the battery status. A full charge typically takes approximately 2-3 hours.



Figure 1: Front view of the Teenage Mutant Ninja Turtles Kids Smart Watch, showing the display with a time and date interface.

Powering On/Off

- To power on: Press and hold the power button located on the side of the watch until the screen illuminates.
- To power off: Press and hold the power button until the power-off prompt appears on the screen, then confirm.

Initial Setup

Upon first power-on or after a factory reset, you may be prompted to set the date and time. Follow the on-screen instructions to adjust these settings. The watch features a touch screen for easy navigation.

OPERATING THE SMART WATCH

The smart watch features a touchscreen interface. Swipe left or right to navigate between applications and tap an icon to open it.

Main Features Overview



Figure 2: Packaging view highlighting various features of the smart watch, including camera, video, games, calculator, voice recorder, clock dials, alarm, settings, and pedometer.

- **Watch Faces:** Customize the watch display with 10 different Teenage Mutant Ninja Turtles themed watch faces. Access this feature from the main screen by tapping the "Clock Dials" icon or by long-pressing the watch face.



Figure 3: A visual representation of the 10 changeable watch faces available on the smart watch, featuring different TMNT characters and designs.

- **Selfie Camera:** Open the camera application to take photos. Images are saved directly to the watch's internal memory.
- **Video Recorder:** Record short video clips. Videos are also stored on the watch.
- **Games:** The watch includes three interactive games for entertainment. Select the "Games" icon to access them.
- **Stopwatch:** Use the stopwatch function for timing activities.
- **Alarm:** Set multiple alarms for reminders or wake-up calls.
- **Calculator:** Perform basic arithmetic calculations.
- **Voice Recorder:** Record short audio messages.
- **Step Tracker (Pedometer):** Monitors daily steps taken.
- **Calorie Counter:** Estimates calories burned based on activity.

Video Demonstration

Your browser does not support the video tag.

Video 1: An official product video demonstrating the Nickelodeon Touchscreen Smart Watch, model TMR4093AZ, showcasing its features and interface.

MAINTENANCE

Cleaning

Wipe the watch clean with a soft, dry cloth. Do not use abrasive cleaners or solvents. The watch is not waterproof; avoid submerging it in water or exposing it to excessive moisture.

Battery Care

The watch contains a non-removable Lithium Polymer battery. To prolong battery life, avoid extreme temperatures and store the watch in a cool, dry place when not in use for extended periods. Recharge the battery regularly, even if the watch is not used frequently.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch does not turn on.	Battery is depleted.	Charge the watch for at least 30 minutes using the provided USB cable.
Screen is unresponsive.	Temporary software glitch.	Perform a soft reset by holding the power button for 10-15 seconds until the watch restarts.
Cannot save photos/videos.	Internal memory is full.	Delete some existing photos or videos to free up space.
Date/Time is incorrect.	Settings need adjustment.	Go to "Settings" on the watch and manually adjust the date and time.

SPECIFICATIONS

Feature	Detail
Model Number	TMR4093AZ

Feature	Detail
Brand	Accutime
Battery Type	1 Lithium Polymer battery (included)
Wrist Fit Range	5.5" to 8"
Dimensions	5.79 x 3.58 x 3.31 inches
Weight	1.4 ounces
Manufacturer	Accutime Watch Corp.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact Accutime Watch Corp. directly. Refer to the product packaging or the manufacturer's official website for the most current contact details.

Keep your purchase receipt as proof of purchase for any warranty claims.

© 2025 Accutime Watch Corp. All rights reserved. Teenage Mutant Ninja Turtles © 2020 Viacom International Inc.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08QBM7F7C>

More documents and user manuals: <https://manuals.plus/>