

[manuals.plus](#) /

› [iTouchless](#) /

› [iTouchless 4 Gallon Side Lid Open with AbsorbX Odor Control, 15 Liter Stainless Steel Automatic Trash Can Slim Garbage Bin, Silver 4 Gal Right Sensor Brushed Silver User Manual](#)

iTouchless SG04SSR-5

iTouchless 4 Gallon Side Lid Open Automatic Trash Can User Manual

Model: SG04SSR-5

Brand: iTouchless

INTRODUCTION

Thank you for choosing the iTouchless 4 Gallon Side Lid Open Automatic Trash Can. This innovative product is designed to provide a hygienic, convenient, and odor-controlled waste disposal experience for your home or office. Please read this manual thoroughly before setup and operation to ensure proper use and maintenance.



Image: The iTouchless 4 Gallon Side Lid Open Automatic Trash Can in brushed silver.

WHAT'S IN THE BOX

Upon unpacking, please ensure all the following components are present:

- 1 Trash Can Body
- 1 Lid
- 1 Trash Bag Ring
- 1 AbsorbX Odor Filter
- 1 Filter Gate
- User Manual

SETUP

1. Battery Installation

The trash can requires 4 C size batteries (not included) for operation. These batteries can last up to two years with intelligent energy use.

1. Locate the battery compartment on the underside of the lid.

2. Open the battery compartment cover.
3. Insert 4 C size batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: An icon representing a C size battery.

2. AbsorbX Odor Filter Installation

The included AbsorbX Natural Carbon Odor Filter helps absorb and neutralize trash odors.

1. Open the lid of the trash can.
2. Locate the filter gate on the underside of the lid.
3. Insert the AbsorbX Odor Filter into the filter gate.
4. Close the filter gate securely.

Video: This video demonstrates the installation of the AbsorbX Odor Filter into the trash can lid, showing how to place the filter into its designated slot for odor control.

3. Trash Bag Installation

Proper installation of the trash bag ensures a neat fit and prevents slippage.

1. Remove the trash bag ring from the trash can body.
2. Place your trash bag inside the trash can body.
3. Fold the top edge of the trash bag over the trash bag ring.
4. Carefully lower the trash bag ring with the bag into the trash can body, ensuring the bag is securely held in place.
5. Replace the lid onto the trash can body.

Video: This video demonstrates the process of installing a trash bag into the iTouchless trash can, including how to use the bag ring to secure the bag neatly.

4. Placement

The slim, space-saving design allows for flexible placement.

- The bi-directional lid design allows it to fit perfectly next to the left or right side of a toilet or sink.
- Ensure there is enough clearance for the lid to open fully without obstruction.



Image: The slim iTouchless trash can positioned conveniently between a toilet and a bathroom vanity.

Right Side Lid Opening



See Other Model For Left Side Open

Image: A diagram illustrating the right-side lid opening mechanism of the trash can, showing its suitability for tight spaces.

OPERATING INSTRUCTIONS

Touchless Sensor Operation

The trash can features 100% touchless operation for hygiene and convenience.

- To open the lid, simply place your hand or an object within the sensor's range (typically a few inches above the sensor).
- The lid will open automatically.
- The VisioSense technology signals the lid to remain open for longer clean-ups.
- The Reflux Technology prevents the lid from closing on your hand.
- The lid will close automatically after a few seconds of inactivity.

100% Automatic Lid



Image: A hand hovering over the sensor of the trash can, demonstrating the automatic lid opening feature.

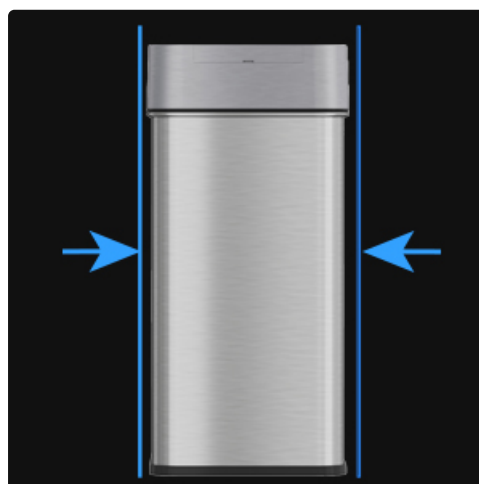


Image: A diagram illustrating the touchless sensor operation, showing how a hand motion triggers the lid to open.

Manual Open and Close

For extended use or specific situations, the lid can also be operated manually.

- To open the lid manually, gently lift it.

- To close the lid manually, gently push it down.

MAINTENANCE

Cleaning

The stainless steel surface is fingerprint-proof and easy to clean.

- Wipe the exterior with a soft, damp cloth and a mild detergent if necessary.
- Avoid abrasive cleaners or scouring pads, as they may damage the finish.
- Do not submerge the lid in water, as it contains electronic components.



Image: An icon depicting a fingerprint being wiped away, symbolizing the fingerprint-proof surface and ease of cleaning.

AbsorbX Odor Filter Replacement

The AbsorbX filter should be replaced periodically to maintain optimal odor control.

- Replace the filter every 3 months or as needed, depending on usage and odor levels.
- Replacement filters can be purchased from authorized iTouchless retailers or the official website.



Image: A detailed diagram illustrating how the AbsorbX Odor Filter system works to eliminate odors from rotting food, household waste, and VOCs.

Battery Replacement

When the sensor light dims or the lid operation becomes sluggish, it's time to replace the batteries.

- Follow the battery installation steps outlined in the Setup section.
- Always replace all 4 C size batteries at the same time with new ones.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid does not open or close automatically.	Dead or low batteries. Incorrect battery installation. Sensor obstructed or dirty.	Replace all batteries with new C size batteries, ensuring correct polarity. Clean the sensor window with a soft cloth. Ensure no objects are blocking the sensor.

Problem	Possible Cause	Solution
Lid opens unexpectedly.	Sensor too sensitive or in a high-traffic area.	Relocate the trash can to an area with less foot traffic or direct light. Ensure no objects are constantly within the sensor's range.
Odor is still present.	AbsorbX filter needs replacement.	Replace the AbsorbX Odor Filter. Ensure the filter is correctly installed.
Trash bag does not fit properly.	Incorrect bag size. Bag not secured by the ring.	Use appropriate size trash bags (e.g., 4-gallon or larger if needed for overhang). Ensure the trash bag ring is properly used to secure the bag.

SPECIFICATIONS

- **Product Dimensions:** 14 x 6 x 14 inches
- **Item Weight:** 5.4 Pounds
- **Model Number:** SG04SSR-5
- **Capacity:** 4 Gallons (15 Liters)
- **Color:** Brushed Silver
- **Opening Mechanism:** Motion-Sensor
- **Material:** Stainless Steel
- **Power:** 4 C size batteries (not included)
- **Special Features:** Sensor Activate, Touchless, Manual Open/Close, AbsorbX Odor Filter System, Fingerprint-Proof Surface, Slim Design
- **Room Type:** Kitchen, Bathroom, Dining, Bedroom, Lobby, Cubicle, Office, Recycling, Garage, Commercial Building



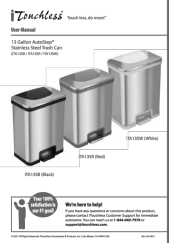





Image: A diagram showing the precise dimensions of the iTouchless trash can, including height, width, and depth, for accurate placement.

WARRANTY AND SUPPORT

Your iTouchless product is backed by an Unconditional Promise, ensuring your 100% satisfaction. This includes a Full-Service Manufacturer's Promise for two years from the date of purchase.

- **Manufacturer's Promise:** Covers defects in materials and workmanship for two years.
- **Dedicated Customer Support:** For any questions, issues, or warranty claims, please refer to the contact information provided in the original user manual PDF or visit the iTouchless official website.

For a comprehensive guide and additional support, you can also refer to the official User Manual PDF: [Download User Manual \(PDF\)](#)

	<p>iTouchless 13 Gallon AutoStep Stainless Steel Trash Can User Manual</p> <p>Comprehensive user manual for the iTouchless 13 Gallon AutoStep Stainless Steel Trash Can (models ITA13SB, ITA13SR, ITA13SW). Learn about its features including the automatic sensor lid, odor control system, battery and AC power options, proper operation, care and maintenance, troubleshooting, and warranty information.</p>
	<p>iTouchless Sensor Trash Can User Manual MT02SS MT02SW MT04SS MT04SW</p> <p>User manual for iTouchless MT02SS, MT02SW, MT04SS, MT04SW sensor trash cans. Covers features, setup, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>iTouchless WS13RSL / WS18RSL Wings Open Lid Sensor Trash Can User Manual</p> <p>User manual for the iTouchless WS13RSL and WS18RSL 13/18 Gallon Wings Open Lid Sensor Trash Can, detailing features, operation, troubleshooting, and warranty.</p>
	<p>iTouchless 13 Gallon Stainless Steel Sensor Trash Can User Manual</p> <p>User manual for the iTouchless 13 Gallon Stainless Steel Sensor Trash Can (Model DZT13P). Learn about its features, operation, troubleshooting, and warranty.</p>
	<p>iTouchless Prime 13.2 Gallon Sensor Trash Can User Manual</p> <p>User manual for the iTouchless Prime 13.2 Gallon Plastic Sensor Kitchen Trash Can (models SP13BB, SP13GG, SP13WW). Includes setup, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>iTouchless Touchless Trash Can DZT13 Plus User Manual</p> <p>User manual for the iTouchless Touchless Trash Can, model DZT13 Plus, detailing setup, operation, filter replacement, troubleshooting, and warranty information.</p>