

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jensen](#) /

› [Jensen JEP-650R Emergency Weather Radio User Manual](#)

Jensen JEP-650R

Jensen JEP-650R Emergency Weather Radio User Manual

Model: JEP-650R

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective operation of your Jensen JEP-650R Emergency Weather Radio. Designed for preparedness, this device offers AM/FM radio, NOAA weather alerts, an LED flashlight, a siren, and a power bank function for charging mobile devices. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Do not expose the unit to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the unit to strong impacts.
- Keep the unit away from water and other liquids.
- Do not attempt to disassemble or modify the unit. This will void the warranty.
- Use only specified power sources for charging.
- Dispose of batteries according to local regulations.

PACKAGE CONTENTS

- Jensen JEP-650R Emergency Weather Radio
- Carabiner Clip
- Carrying Strap
- Instruction Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your JEP-650R radio.



Figure 1: Front view of the Jensen JEP-650R Emergency Weather Radio. Key features visible include the extendable antenna, flashlight on the left, siren on the right, dual speakers on the front, and a central display showing WB (Weather Band) and frequency (162.400 MHz). Controls include ON/OFF switches for Light and Siren, Volume Up/Down, Tune Up/Down, Time Set, Mode, and Power buttons. A battery selector switch for Li-ion or AA batteries is also present.

1. **Extendable Antenna:** For improved radio reception.
2. **Flashlight:** Located on the left side of the unit.
3. **Light ON/OFF Switch:** Activates/deactivates the flashlight.
4. **Siren ON/OFF Switch:** Activates/deactivates the emergency siren.
5. **Speakers:** Two red grilles on the front for audio output.
6. **LCD Display:** Shows current mode (WB, AM, FM), frequency, volume level, and time.
7. **Volume Up (VOL+):** Increases audio volume.
8. **Volume Down (VOL-):** Decreases audio volume.
9. **Tune Up (TUNE+):** Scans or adjusts frequency upwards.
10. **Tune Down (TUNE-):** Scans or adjusts frequency downwards.
11. **Mode Button:** Switches between AM, FM, and WB (Weather Band) modes.
12. **Time Set Button:** Used to set the clock.
13. **Power Button:** Turns the radio ON/OFF.
14. **Battery Selector Switch:** Selects between internal Li-ion battery or external AA batteries.
15. **Charge Indicator:** LED light indicating charging status.
16. **Alert Indicator:** LED light indicating a weather alert.
17. **USB Output Port:** For charging external devices.
18. **Micro USB Input Port:** For charging the internal Li-ion battery.
19. **Hand Crank:** For manual power generation.
20. **Solar Panel:** For solar charging.

SETUP: POWERING THE DEVICE

The JEP-650R offers multiple power options:

1. Internal Li-ion Battery (2000mAh)

The radio contains a built-in rechargeable Li-ion battery. Ensure the Battery Selector Switch is set to "LI-ION".

- **USB Charging:** Connect a standard Micro USB cable (not included) to the Micro USB Input Port on the radio and to a USB power adapter (not included) or computer USB port. The CHARGE indicator will illuminate during charging.
- **Solar Charging:** Place the radio with the solar panel facing direct sunlight. This method is primarily for maintaining charge or slow charging in emergencies. The CHARGE indicator will illuminate.
- **Hand Crank Charging:** Rotate the hand crank clockwise or counter-clockwise at a steady pace (approximately 120-150 RPM) for 3-5 minutes to generate power. The CHARGE indicator will illuminate.

Note: For initial use, it is recommended to fully charge the internal battery via USB.

2. AA Batteries

For an alternative power source, you can use 3 AA batteries (not included).

1. Locate the battery compartment on the back of the unit.
2. Open the compartment and insert 3 AA batteries, observing the correct polarity (+/-).
3. Close the battery compartment securely.
4. Set the Battery Selector Switch to "AA".

Important: Do not attempt to charge AA batteries using the radio's charging methods. Remove AA batteries if the unit will not be used for an extended period.

OPERATING INSTRUCTIONS

1. Basic Radio Operation (AM/FM)

1. Extend the telescopic antenna for optimal reception.
2. Press the **Power Button** to turn the radio ON.
3. Press the **MODE Button** to select AM or FM band. The selected band will appear on the LCD display.
4. Use the **TUNE+** or **TUNE-** buttons to manually tune to a desired station. Press and hold these buttons for automatic scanning to the next available station.
5. Adjust the volume using the **VOL+** or **VOL-** buttons.
6. To turn the radio OFF, press the **Power Button** again.

2. NOAA Weather Radio Operation

The JEP-650R can receive all 7 NOAA weather band channels.

1. Press the **Power Button** to turn the radio ON.
2. Press the **MODE Button** repeatedly until "WB" (Weather Band) appears on the LCD display.
3. Use the **TUNE+** or **TUNE-** buttons to select one of the 7 NOAA weather channels (162.400, 162.425, 162.450, 162.475, 162.500, 162.525, 162.550 MHz). Select the channel with the clearest reception in your area.

4. **Weather Alert Function:** When in WB mode, the radio can be set to alert you to severe weather. Once a NOAA channel is selected, the radio will monitor for alerts. If an alert is broadcast, the radio will emit an audible alarm and the ALERT indicator will flash.

3. Flashlight Operation

Slide the **LIGHT ON/OFF Switch** to "ON" to activate the LED flashlight. Slide it to "OFF" to turn it off.

4. Siren Operation

Slide the **SIREN ON/OFF Switch** to "ON" to activate the emergency siren. Slide it to "OFF" to turn it off. Use this feature responsibly in emergency situations only.

5. USB Power Bank Function

The JEP-650R can charge external USB-powered devices using its internal Li-ion battery.

1. Ensure the internal Li-ion battery is sufficiently charged.
2. Connect your mobile device's USB charging cable to the **USB Output Port** on the radio.
3. The radio will begin charging your device. The radio does not need to be powered on for this function.

Note: Charging an external device will deplete the radio's internal battery. This feature is intended for emergency use.

6. Setting the Time

Press and hold the **TIME SET Button** until the time display flashes. Use the **TUNE+** or **TUNE-** buttons to adjust the hour, then press **TIME SET** again to move to minutes and adjust. Press **TIME SET** one more time to confirm.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** If using the internal Li-ion battery, recharge it periodically, even if not in use, to maintain battery health. If using AA batteries, remove them if the radio will be stored for extended periods to prevent leakage.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Radio does not turn on.	Ensure the selected battery source (Li-ion or AA) is charged/fresh. Check the Battery Selector Switch is in the correct position.
Poor radio reception.	Extend the telescopic antenna fully. Adjust the radio's position for better signal. Move away from sources of interference (e.g., other electronics).
Cannot charge external device.	Ensure the internal Li-ion battery is sufficiently charged. Check the USB cable connection.

Problem	Possible Cause / Solution
Hand crank or solar charging not working.	Ensure the Battery Selector Switch is set to "LI-ION". For solar, ensure direct sunlight. For hand crank, ensure consistent rotation.

SPECIFICATIONS

- **Model:** JEP-650R
- **Power Source:** Internal 2000mAh Li-ion Battery, 3 x AA Batteries (not included)
- **Charging Methods:** Micro USB, Solar Panel, Hand Crank
- **Radio Bands:** AM, FM, NOAA Weather Band (WB)
- **NOAA Frequencies:** 162.400 MHz, 162.425 MHz, 162.450 MHz, 162.475 MHz, 162.500 MHz, 162.525 MHz, 162.550 MHz
- **Flashlight:** LED
- **USB Output:** For charging external devices
- **Dimensions:** Approximately 8.5 x 4.84 x 3.54 inches
- **Weight:** Approximately 1.52 pounds

WARRANTY AND SUPPORT

This Jensen JEP-650R Emergency Weather Radio is covered by a manufacturer's 90-day limited warranty. For warranty claims or technical support, please refer to the contact information provided with your purchase documentation or visit the official Jensen website.