

[Manuals.plus](#) /

› [Epson](#) /

› Epson M2110 Monochrome All-in-One InkTank Printer User Manual

Epson M2110

Epson M2110 Monochrome All-in-One InkTank Printer

User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Epson M2110 Monochrome All-in-One InkTank Printer. Please read this manual thoroughly before using the product and keep it for future reference. The Epson M2110 is designed for home and small office environments, offering print, scan, and copy functionalities with an integrated ink tank system.



Figure 1: Front view of the Epson M2110 printer.

PRODUCT FEATURES

- **Printer Type:** Ink Tank
- **Functionality:** All-in-One (Print, Scan, Copy)
- **Printer Output:** Black & White (Monochrome)
- **Scanner Type:** Flatbed
- **Connectivity:** Wi-Fi, USB
- **Control Method:** Application (App)
- **Duplex Print:** Manual
- **High Page Yield:** Designed for cost-effective printing.

- **Heat-Free Technology:** Contributes to lower power consumption.



Figure 2: The Epson M2110 offers Print, Scan, and Copy functionalities.

SETUP GUIDE

1. Unpacking the Printer

Carefully remove the printer from its packaging. Ensure all protective tapes and materials are removed from the exterior and interior of the printer. Keep the packaging materials for potential future transport or servicing.

2. What's in the Box

Verify that all components are present:

- Epson M2110 Printer
- CD DVD Tray (if applicable for specific models)
- Power Cable
- USB Cable
- Ink Bottles (Black)

3. Installing Ink

1. Open the ink tank cover located on the side of the printer.
2. Uncap the black ink bottle.
3. Insert the ink bottle into the corresponding ink tank opening. The bottle is designed to prevent incorrect insertion.
4. Allow the ink to fill the tank completely. Do not squeeze the bottle.
5. Once the tank is full, remove the bottle and securely close the ink tank cover.



Figure 3: Illustration of the ink filling process, highlighting the smart design for spill-free refills.

4. Connecting Power and Initializing

1. Connect the power cable to the printer and then to a power outlet.
2. Press the power button to turn on the printer.
3. Follow the on-screen instructions on the printer's LCD panel to complete the initial setup, including language selection and ink initialization. This process may take several minutes.

5. Software Installation and Connectivity

1. **USB Connection:** Connect the printer to your computer using the provided USB cable. Install the printer drivers from the Epson website or the included CD (if applicable).
2. **Wi-Fi Connection:** On the printer's control panel, navigate to the Wi-Fi setup menu. Select your network and enter the password. Alternatively, use the Epson Smart Panel app on your smartphone for guided setup.
3. **Mobile Device Setup:** Download the Epson Smart Panel app from your device's app store to print and scan directly from your smartphone or tablet.

OPERATING INSTRUCTIONS

1. Loading Paper

Open the paper tray and adjust the paper guides to fit the size of your paper. Load paper with the print side facing down (or as indicated by the printer's guides). The printer supports various paper sizes including A4, A5, A6, B5, C6, and DL.

2. Printing Documents

1. Ensure the printer is powered on and connected to your device.
2. Open the document you wish to print on your computer or mobile device.
3. Select the print option from your application.
4. Choose the Epson M2110 as your printer.
5. Adjust print settings such as paper size, quality, and number of copies. For manual duplex printing, follow the on-screen prompts to re-insert paper.
6. Click 'Print'.



Figure 4: The Epson M2110 printer in operation, delivering printed documents.

3. Scanning Documents

1. Lift the scanner lid and place the document face down on the scanner glass, aligning it with the corner mark.
2. Close the scanner lid.
3. From your computer, open the Epson Scan software or use the scan function from the Epson Smart Panel app.
4. Select scan settings such as document type, resolution, and destination folder.
5. Initiate the scan.



Figure 5: The scanner unit of the Epson M2110 with the lid open, ready for document placement.

4. Copying Documents

1. Place the document on the scanner glass as described in the scanning section.
2. On the printer's control panel, select the 'Copy' function.
3. Adjust settings such as number of copies, paper size, and quality if necessary.
4. Press the 'Start' button to begin copying.

MAINTENANCE

1. Refilling Ink Tanks

Monitor the ink levels through the transparent ink tanks or the printer's display. When an ink tank is low, follow the ink installation steps (Section 3.3) to refill it with genuine Epson ink bottles. Using non-genuine ink may affect print quality and printer performance.

2. Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, damp cloth. Avoid using abrasive cleaners or solvents.
- **Scanner Glass:** Clean the scanner glass with a soft, lint-free cloth moistened with a small amount of glass cleaner. Do not spray cleaner directly onto the glass.
- **Print Head Cleaning:** If print quality declines (e.g., missing lines, streaking), perform a print head cleaning cycle through the printer's control panel or the printer driver software.

3. Firmware Updates

Periodically check the Epson support website for firmware updates for your printer model. Firmware updates can improve performance, add new features, or resolve issues.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Epson M2110 printer.

1. Printer Not Responding

- Ensure the printer is powered on and the power cable is securely connected.
- Check the USB or Wi-Fi connection. For Wi-Fi, ensure the printer is connected to the correct network and the signal is strong.
- Restart both the printer and your computer/mobile device.
- Verify that the correct printer driver is installed and selected on your device.

2. Poor Print Quality

- Check ink levels and refill if necessary.
- Perform a print head cleaning and nozzle check from the printer's maintenance menu or driver software.
- Ensure you are using appropriate paper for your print settings.
- Check print settings in your application to ensure they are not set to draft or economy mode.

3. Paper Jams

- Turn off the printer and unplug the power cable.
- Carefully open all covers and remove any jammed paper, pulling gently to avoid tearing.
- Ensure paper is loaded correctly and not creased or curled.
- Close all covers, plug in the power cable, and turn on the printer.

SPECIFICATIONS

Feature	Specification
Product Dimensions	27D x 43.5W x 39H Centimeters
Item Weight	6 kg 450 g
Printer Type	Ink Tank
Functionality	All-in-One (Print, Scan, Copy)
Printer Output	Monochrome (Black & White)

Feature	Specification
Scanner Type	Flatbed
Connectivity Technology	Wi-Fi, USB
Control Method	App
Max Print Speed Monochrome	32 ppm
Max Copy Speed (Black and White)	32 ppm
Maximum Black and White Print Resolution	1440*720 dpi
Maximum Colour Print Resolution	1440x720 dpi (for reference, though monochrome printer)
Duplex Printing	Manual
Supported Page Sizes	A4, A5, A6, B5, C6, DL
Print Media	Paper (plain)
Compatible Devices	Smartphones, Computers
Model Name	M2110
Manufacturer	EPSON INDIA PVT LTD

WARRANTY AND SUPPORT

1. Warranty Information

The Epson M2110 printer typically comes with a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures repair or replacement of faulty parts. Please retain your purchase receipt as proof of purchase for warranty claims. Specific terms and conditions may apply; refer to the warranty card included with your product or the official Epson website for full details.



Figure 6: The Epson M2110 is backed by a 3-year warranty.

2. Customer Support

For further assistance, technical support, or to locate authorized service centers, please visit the official Epson India website or contact their customer service helpline. You may need your printer's model number (M2110) and serial

number when contacting support.

© 2023 Epson. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08QCZVR8S>

More documents and user manuals: <https://manuals.plus/>