

[Manuals.plus](#) /

› [EAGLE PEAK](#) /

› EAGLE PEAK 13x13 Pop Up Gazebo with Mesh Netting Instruction Manual

EAGLE PEAK E169MN

EAGLE PEAK 13x13 Pop Up Gazebo with Mesh Netting Instruction Manual

Model: E169MN

INTRODUCTION

This manual provides essential instructions for the safe and efficient setup, operation, and maintenance of your EAGLE PEAK 13x13 Pop Up Gazebo with Mesh Netting. Please read all instructions carefully before assembly and retain this manual for future reference.

SAFETY INFORMATION

- Always ensure the gazebo is securely anchored to the ground using stakes and guy ropes to prevent wind damage.
- Do not use the gazebo in extreme weather conditions, including heavy rain, strong winds, or snow.
- Keep all flame and heat sources away from the gazebo fabric. The fabric meets CPAI-84 flame resistance standards but is not fireproof.
- Ensure all moving parts are clear of obstructions during setup and takedown to prevent injury.
- Supervise children around the gazebo.
- Avoid hanging heavy objects from the frame.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

PACKAGE INCLUDED



The package typically includes:

- Pop-up Gazebo Frame
- Canopy Top
- Mesh Netting (with zippers)
- Carry Bag
- Stakes (x8)
- Guy Ropes (x4)

SETUP INSTRUCTIONS

The EAGLE PEAK Pop Up Gazebo features a patented Peak Push system for quick and easy assembly.

STEP 01

Open the canopy frame



STEP 02

Push up on the **Easy Peak Center-Push** mechanism to raise and lock the canopy frame

STEP 03

Adjust the height or angle for preferred shade coverage



STEP 04

Attach the mosquito netting



1. **Step 1: Open the Canopy Frame.** Place the folded frame in the desired location. With a partner, gently pull the outer legs of the frame outwards until it begins to expand.
2. **Step 2: Attach the Canopy Top.** Drape the canopy top over the partially opened frame. Secure the corners of the canopy to the frame.
3. **Step 3: Engage the Peak Push System.** Stand inside the gazebo. Push up on the patented center lock mechanism located at the center of the frame until it clicks into place, fully extending the canopy. This can often be done by one person.



A **PATENTED** CANOPY CENTER LOCK

The Peak Push system, a patented canopy center lock, allows one or more people to easily open and close the canopy from the center without the hassle of locking and unlocking the canopy leg sliders. One simple, pinch-free push and you're ready to go!



4. **Step 4: Extend the Legs and Adjust Height.** Extend each leg by pressing the release button and sliding the inner leg section downwards until it locks into the desired height setting.



5. **Step 5: Attach the Mesh Netting.** Secure the mesh netting to the gazebo frame using the integrated ties or hooks. Ensure all zippers are functional.
6. **Step 6: Secure the Gazebo.** Use the provided stakes to anchor each leg to the ground. For added stability, attach

guy ropes to the canopy corners and stake them into the ground at an angle.

Setup Video Guide

Your browser does not support the video tag.

This video demonstrates the setup process for the EAGLE PEAK 13x13 Pop Up Gazebo with Mosquito Netting, including frame expansion, canopy attachment, and securing the netting.

OPERATING INSTRUCTIONS

Your EAGLE PEAK Gazebo is designed for versatile outdoor use.

DETAILS

1 Custom Vented Top



2 Water Resistance



3 Drainage Hole



4 Mosquito Netting




- **Mesh Netting:** The gazebo features zippered mesh netting to provide an enclosed space. The netting can be zipped closed to deter insects or tied back to the legs when not in use, allowing for an open-air experience.
- **Extended Eaves:** The extended eaves are designed to open automatically with the frame, providing maximum shade coverage.
- **Vented Top:** The custom vented top promotes airflow, reducing heat buildup and increasing stability in light

breezes.

- **Adjustable Height:** The legs can be adjusted to different height settings to optimize shade coverage or adapt to uneven terrain.

MAINTENANCE

- **Cleaning:** Clean the canopy fabric and mesh netting with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow all components to dry completely before storage.
- **Storage:** When not in use for extended periods or during adverse weather, disassemble the gazebo and store it in its carry bag in a dry, protected area. The folding design allows for compact storage.

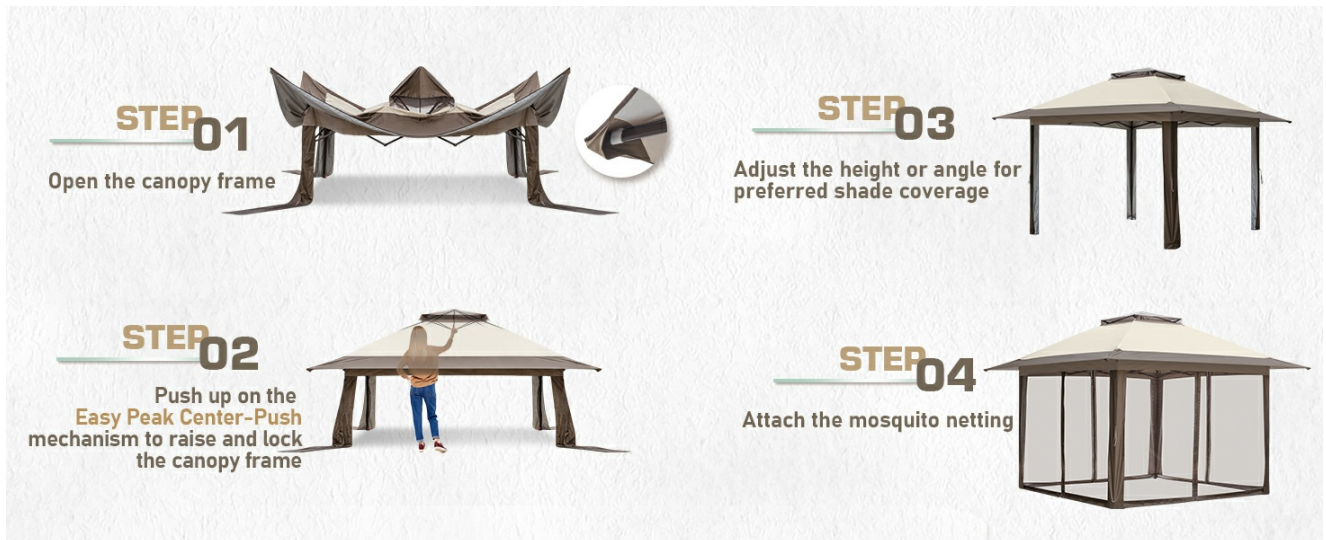

- **Frame Care:** Inspect the alloy steel frame periodically for any signs of damage or corrosion. Clean any dirt or debris from the frame.
- **Water Resistance & UV Protection:** The 150D oxford gazebo top is water-resistant and offers UPF 50+ UV sun protection. While designed to withstand light rain and sun, prolonged exposure to harsh elements can reduce its lifespan.



TROUBLESHOOTING

- **Gazebo is unstable or sways in wind:** Ensure all legs are fully extended and locked. Verify that all stakes are firmly driven into the ground and guy ropes are taut and properly secured. Consider using additional weight bags

(not included) on the legs for extra stability in windy conditions.

- **Canopy not fitting correctly:** Ensure the frame is fully expanded and the center lock mechanism is engaged. Check that the canopy is oriented correctly and attached to all corners of the frame.
- **Zipper issues on netting:** Check for any fabric caught in the zipper. Apply a silicone-based lubricant if the zipper is stiff.

SPECIFICATIONS

EAGLE PEAK

13 FT x 13 FT

Straight Leg Canopy with Mosquito Netting

9.8ft

9.5ft

9.2ft

6.7ft

6.4ft

6.1ft

13ft

13ft

10ft

10ft



CPAI-84
Flame Resistant



Easy
Set Up



Water
Resistant



UV
Protection

Feature	Detail
Brand	EAGLE PEAK
Model Number	E169MN
Product Dimensions	156"L x 156"W x 117.6"H (13'L x 13'W x 9.8'H)

Floor Area	169 Square Feet
Material	Alloy Steel (Frame), 150D Oxford Polyester (Canopy)
Item Weight	19.85 Kilograms
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	UPF 50+
Assembly Required	No (Pop-up design)
Occupancy	8-10 people

WARRANTY AND SUPPORT

EAGLE PEAK offers a **1-year limited after-sale protection** from the original date of purchase. This warranty covers the frame, canopies, and carry bags. If you encounter any issues or have questions regarding your product, please contact the EAGLE PEAK professional service team for assistance.

For further support, please refer to the contact information provided with your purchase documentation or visit the official EAGLE PEAK website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

