

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ortizan](#) /
- › [Ortizan X10 Wireless Portable Bluetooth Speaker User Manual](#)

Ortizan X10

Ortizan X10 Wireless Portable Bluetooth Speaker User Manual

Model: X10

1. INTRODUCTION

Thank you for choosing the Ortizan X10 Wireless Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. The Ortizan X10 is designed for robust outdoor and indoor use, featuring IPX7 waterproofing, powerful 24W sound, extended battery life, and dynamic party lights.

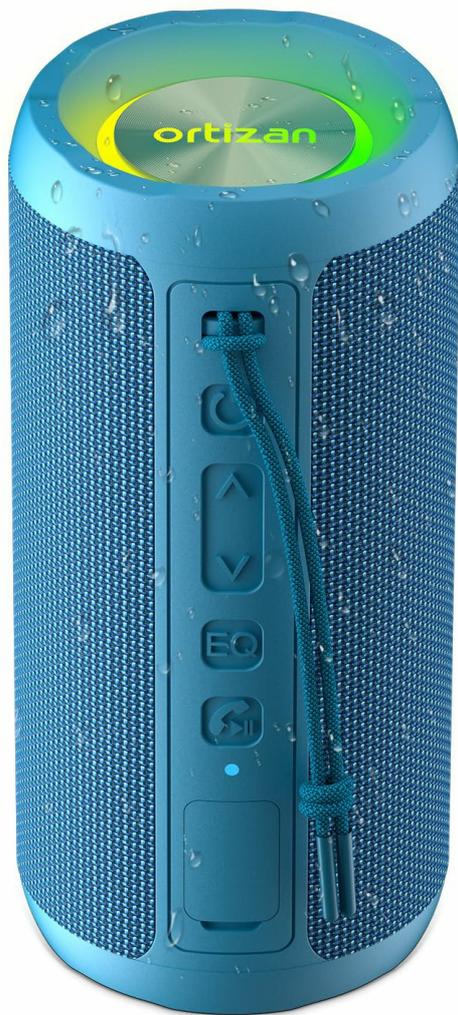


Image 1.1: Ortizan X10 Wireless Portable Bluetooth Speaker in Blue.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Ortizan X10 Bluetooth Speaker
- 1 x USB-C Charging Cable
- 1 x AUX Cable
- 1 x Carabiner Strap
- 1 x User Manual (this document)

3. PRODUCT OVERVIEW

3.1 Controls and Ports

Familiarize yourself with the buttons and ports on your Ortizan X10 speaker:

- **Power Button:** Press and hold to power on/off.
- **Volume Down / Previous Track Button (-):** Short press for volume down, long press for previous track.
- **Play/Pause Button (▶):** Press to play or pause music.
- **Volume Up / Next Track Button (+):** Short press for volume up, long press for next track.
- **EQ Button:** Press to cycle through sound equalization modes (Vocal, 3D Deep Bass, Extra Bass). Double-click to turn on/off light effect.
- **Light Mode Button (*):** Press to change light modes.
- **Call / TWS Button (☎):** Press to answer/end calls. Long press to activate TWS pairing.
- **USB-C Charging Port:** For charging the speaker.
- **AUX-in Port:** For wired audio connection.
- **TF Card Slot:** For playing music directly from a Micro SD card (up to 32GB).

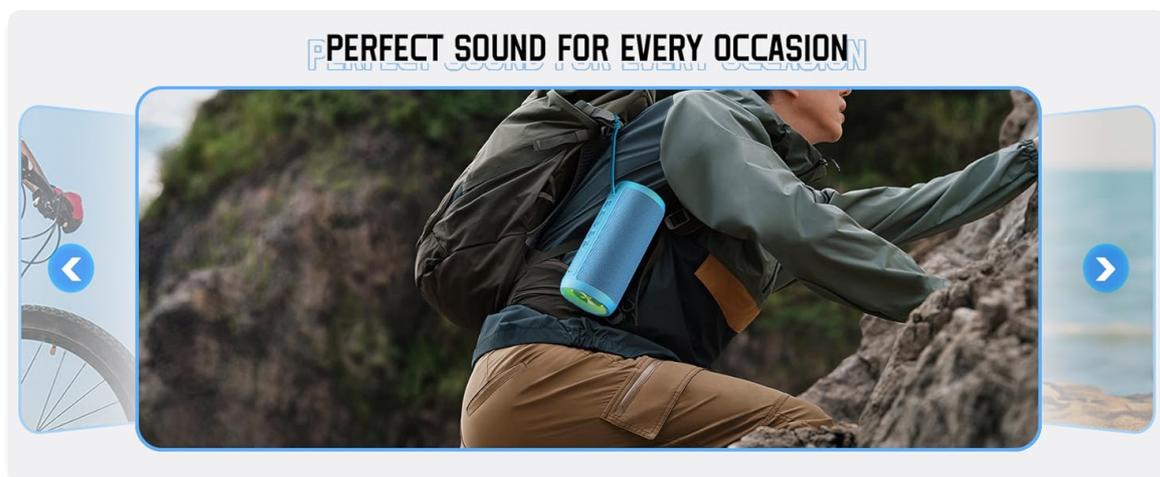


Image 3.1: Overview of speaker controls and connectivity options.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C cable to the speaker's charging port and a compatible USB power adapter (not included). The charging indicator light will show charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button () for 2-3 seconds. You will hear an audible prompt, and the indicator light will flash.
- **To Power Off:** Press and hold the Power button () for 2-3 seconds. You will hear an audible prompt, and the indicator light will turn off.

4.3 Bluetooth Pairing

To connect your Ortizan X10 speaker to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the indicator light will be flashing blue).

2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Ortizan X10" from the list.
4. Once connected, the speaker will emit an audible confirmation, and the indicator light will turn solid blue.

4.4 True Wireless Stereo (TWS) Pairing

For an immersive stereo experience, you can pair two Ortizan X10 speakers together:

1. Ensure both Ortizan X10 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker, long press the Call / TWS button (📞). This speaker will become the primary unit.
3. The primary speaker will automatically search for the secondary speaker. Once connected, both speakers will emit an audible confirmation.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 4.3. Audio will play in stereo through both speakers.



Image 4.1: Two Ortizan X10 speakers configured for True Wireless Stereo (TWS) pairing.

5. OPERATING INSTRUCTIONS

5.1 Basic Music Playback

- **Play/Pause:** Press the Play/Pause button (▶).
- **Volume Up:** Short press the Volume Up button (+).
- **Volume Down:** Short press the Volume Down button (-).
- **Next Track:** Long press the Volume Up button (+).
- **Previous Track:** Long press the Volume Down button (-).

5.2 EQ Modes

The Ortizan X10 offers three equalization modes to optimize your listening experience:

- Press the EQ button to cycle through:
- **Vocal Mode:** Enhances clarity for vocals.
- **3D Deep Bass Mode:** Provides a rich, deep bass experience.

- **Extra Bass Mode:** Delivers powerful, boosted bass.



Image 5.1: The EQ button allows switching between different sound modes.

5.3 Party Lights

The speaker features dynamic RGB lights that can sync with your music:

- **Change Light Mode:** Press the Light Mode button (*) to cycle through various light effects.
- **Turn Lights On/Off:** Double-click the EQ button to toggle the light effect on or off.



Image 5.2: The Ortizan X10 features vibrant RGB lighting.

5.4 Hands-free Calling

When connected via Bluetooth, you can use the speaker for hands-free calls:

- **Answer Call:** Press the Call / TWS button (☎).
- **End Call:** Press the Call / TWS button (☎).
- **Reject Call:** Long press the Call / TWS button (☎).

5.5 Using AUX Input

Connect an audio device directly to the speaker using the provided 3.5mm AUX cable. The speaker will automatically switch to AUX mode.

5.6 Using TF Card

Insert a Micro SD (TF) card (up to 32GB) with MP3 audio files into the TF card slot. The speaker will automatically detect the card and begin playing music.

6. MAINTENANCE

6.1 Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure all ports are sealed before cleaning with water.

6.2 Waterproof Care (IPX7)

The Ortizan X10 is IPX7 waterproof, meaning it can be submerged in water up to 1 meter (3.3 feet) for 30 minutes. To maintain its waterproof integrity:

- Ensure the rubber flap covering the charging and AUX ports is securely closed before exposing the speaker to water.
- Do not expose the speaker to saltwater or other corrosive liquids.
- After exposure to water, especially chlorinated or saltwater, rinse the speaker with fresh water and dry thoroughly before charging or opening the port cover.



Image 6.1: The Ortizan X10 is designed with IPX7 waterproof protection.

6.3 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to approximately 50% every few months to preserve battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Low battery	Charge the speaker fully.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth	Speaker not in pairing mode / Device Bluetooth off / Too far from device	Ensure speaker is in pairing mode. Turn on Bluetooth on your device. Move speaker closer to device (within 66ft/20m).
No sound	Volume too low / Incorrect input mode / Device not playing	Increase speaker and device volume. Check if AUX or TF card is inserted. Ensure music is playing on your device.
TWS pairing fails	Speakers already connected to other devices / Too far apart	Disconnect both speakers from any other Bluetooth devices. Ensure speakers are close to each other during TWS pairing.
Lights not working	Lights turned off	Double-click the EQ button to turn lights on.

8. SPECIFICATIONS

Feature	Detail
Model Name	X10
Brand	Ortizan
Speaker Type	Outdoor
Connectivity Technology	Bluetooth, Wireless, AUX, TF Card
Wireless Communication Technology	Bluetooth 5.3
Speaker Maximum Output Power	30 Watts (24W RMS)
Battery Capacity	2600 mAh
Playtime	Up to 30 hours (at 30% volume)
Water Resistance Level	IPX7 Waterproof
Bluetooth Range	66 Feet (20 meters)
Product Dimensions	3.11"D x 3.11"W x 6.69"H
Item Weight	0.45 Kilograms (15.8 ounces)

Feature	Detail
Special Features	Bass Boost, AUX, Hi-Res Audio, 3 EQ Modes, TF Card Port, Dual Passive Radiators, Hands-free, True Wireless Stereo, Shockproof, Stereo pairing

8.1 Sound Features

The Ortizan X10 features dual neodymium drivers and a bass radiator, delivering 24W RMS power for clear vocals and deep 60Hz bass with minimal distortion.



Image 8.1: Internal view highlighting the dual speakers and bass membrane for enhanced sound.

8.2 Battery Life

Equipped with a 2600mAh battery and smart power management, the speaker provides up to 30 hours of playtime at 30% volume. USB-C fast charging allows use while charging.



Image 8.2: Visual representation of the speaker's 30-hour battery life.

9. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 9.1: Official product video demonstrating the Ortizan X10 speaker's features and outdoor use.

10. WARRANTY AND SUPPORT

The Ortizan X10 Wireless Portable Bluetooth Speaker comes with a limited warranty. For detailed warranty information, product support, or technical assistance, please refer to the official Ortizan website or contact their customer service. Keep your purchase receipt for warranty claims.

Manufacturer: Ortizan