

AMAIRYCA 759462582776

AMAIRYCA Universal Remote Control for Smart TVs - Instruction Manual

Brand: AMAIRYCA

Model: 759462582776

1. INTRODUCTION

This manual provides comprehensive instructions for setting up and operating your AMAIRYCA Universal Remote Control. This remote is designed to control various Smart TV brands, offering a convenient solution for managing your entertainment system.

Compatible TV Brands: JVC, Samsung, LG, Sony, Vizio, Philips, Toshiba, Hitachi, Vestel, Haier, Panasonic, Sanyo, Sharp, Insignia, Magnavox, RCA, Westinghouse, TCL.

Please note that this remote is only compatible with the TV brands explicitly listed on the product or in this manual. Models without these brands may not be compatible.

2. SAFETY INFORMATION AND BATTERY INSTALLATION

2.1 Battery Installation

The remote control requires two AAA batteries (not included). To install:

1. Open the battery compartment cover on the back of the remote.
2. Insert two AAA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

2.2 Important Battery Notes

- Do not mix old batteries with new ones or different types of batteries.
- If the remote does not function, check battery installation or replace batteries.
- If the remote control is not sensitive, please renew the batteries.

3. SETUP AND PROGRAMMING

Your AMAIRYCA Universal Remote Control can be programmed to your TV using two main methods: Manual Code Setting or Simple Brand Search. It is recommended to try the Simple Brand Setting first.

UNIVERSAL REMOTE CONTROL LCD/LED TV REMOTE CONTROLLER

Operating Instruction

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Note on batteries

- ! Do not mix old batteries with ones or mix different types of batteries together.
- ! If the remote doesn't work in using process, please reinstall the batteries.
- ! When the remote control is not sensitive, please renew the batteries.

How TO SET UP YOUR REMOTE:

A. SET UP BY CODE

Step.1 Press [MUTE] + [POWER] buttons together for 3 sec until led light is lit, then release it.



Step.2 Input your 3 digit TV CODE from code list. If the code is right, the LED light will go off. If the code is wrong, the LED light will still be on. If this happens, try to enter the code again as there may have been an error the first time. (If the TV not

BRAND	CODE LIST	TV
LG	023,001,024,025,026,027	
SAMSUNG	028,002,030,029,031,032	
SONY	033,003,034	
PHILIPS	005,004,038,039,040,041,035,036,037	
Panasonic	006,042,043,044	
SHARP	045,007,046,047,048,049,050,058,057,056,055,054,053,052,051	
TOSHIBA	059,008,060,061,062,063,064,065,066	
HITACHI	009,067	
VIZIO	068,010,069,070,071,072	
TCL	011,073,075,074,076	

BRAND	CODE LIST	TV
JVC	012,077,078,078,080,081	
HISENSE	013,014,048,050,058,057,056,055,054,053,052,051	
VESTEL	015	
SEIKI	016	
SANYO	017	
INSIGNIA	018	
MAGNAVOX	021,035,036,037	
RCA	019	
Haier	020	
WESTINGHOUSE	022	

Step.3 Please check the function of Remote . If it doesn't work well, please you can try one of the other codes and repeat the process from step 1.

NOTE: During setting process, if no key is pressed in 10 seconds it will exit automatically.

B. Brand Search



1). Turn on TV. Press the button of the corresponding brand for 5 sec, the LED flashes three times, then the setting is completed



Default Mode:

- Under the default setting, RC-G008 can directly control many brands, include LG/SAMSUNG/SONY/PHILIPS/PANASONIC/SHARP TV.
- Restore to the initial setting, please and hold the [OK] + [0] buttons about 3sec, the LED light will be blink four times, now it is in initial setting.

Image: Overview of the instruction manual page, detailing setup procedures and TV brand codes.

3.1 Method 1: Simple Brand Search (Recommended)

This method is for quick setup with TVs from major brands.

1. Turn on your TV.
2. Press and hold the button corresponding to your TV's brand (e.g., LG, SAMSUNG, SONY, PHILIPS, PANASONIC) for 5 seconds.
3. The LED indicator on the remote will flash three times, and the setting is complete.

In the default settings, this product can directly control multiple brands, including LG / SAMSUNG / SONY / PHILIPS / PANASONIC / Sharp TV.



Image: The AMAIRIYCA Universal Remote Control, showing the layout of brand-specific buttons for quick setup.

3.2 Method 2: Manual Code Setting

If Method 1 does not work, or your TV brand is not listed with a dedicated button, use this method with a 3-digit code.

1. Turn on your TV.
2. Press and hold the **[MUTE]** button and the **[POWER]** button simultaneously for 3 seconds until the LED light illuminates.
3. Input the 3-digit code for your TV brand from the "TV Brand Codes" table below. The LED light will turn off if the code is correct. If the LED light remains on, it indicates an incorrect code or an error.
4. If the remote does not work after entering a code, try another code from the list for your brand, or repeat the process from Step 1 with a different code.

Note: During the setting process, if no key is pressed in 10 seconds, the remote will exit automatically.

3.3 TV Brand Codes

Use the following table to find the 3-digit codes for your TV brand for Manual Code Setting.

Universal Remote Control Codes by Brand

Brand	Code List	Brand	Code List
LG	023,000,004,005,006,027	JVC	012,017,077,078,080,081
SAMSUNG	020,002,020,029,031,032	HISENSE	013,014,046,050,058,057,066,055,054,0
SONY	033,003,034	VESTEL	015
PHILIPS	035,038,039,040,041,036,038,097	SEIKI	016
PANASONIC	006,042,043,044	SANYO	017
SHARP	045,007,048,047,048,049,050,058,057,056,055,054,053,052,051	INSIGNIA	018
TOSHIBA	059,008,060,061,062,063,064,065,066	MAGNAVOX	021,035,086,037

Brand	Code List	Brand	Code List
HITACHI	009,067	RCA	019
VIZIO	068,010,069,070,071,072	Haier	020
TCL	011,073,075,076,074	WESTINGHOUSE	022

3.4 Restoring Default Settings

To restore the remote to its default settings:

1. Press and hold the **[OK]** button and the **[0]** button simultaneously for about 3 seconds.
2. The LED light will blink four times, indicating that the remote has been reset to its initial configuration.

4. OPERATING INSTRUCTIONS

Once programmed, your universal remote control functions similarly to your original TV remote. Below are some key functions:



Image: A hand demonstrating the comfortable grip and button accessibility of the AMAIRIYCA Universal Remote Control.

- **Power Button ():** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Volume Up/Down (Vol +/-):** Adjusts the TV volume.
- **Channel Up/Down (Ch +/-):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.

- **Navigation Buttons (Arrows & OK):** Used to navigate menus and confirm selections.
- **Number Pad (0-9):** Direct channel entry.
- **Smart TV Buttons (Netflix, 3D, APPS):** Direct access to smart TV features and applications, if supported by your TV.
- **Color Buttons (A, B, C, D):** Function as context-sensitive buttons within TV menus or smart apps.

5. TROUBLESHOOTING

If you encounter issues with your universal remote, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the right polarity.
 - Replace old or weak batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote and the TV's infrared receiver.
- **Remote Does Not Control TV:**
 - Re-attempt the programming steps (Method 1 or Method 2) carefully.
 - If using Method 2, try all available codes for your TV brand.
 - Confirm your TV brand is explicitly listed as compatible with this remote. Some brands, even if similar, may not work.
 - If your TV is a JVC model, please be aware that some JVC TVs may not be compatible despite the remote being advertised for JVC. If you experience issues, consider contacting support.
- **Specific Buttons Not Working:**
 - Some advanced functions (e.g., Netflix, 3D, APPS) may only work if your TV supports these features and the remote has successfully mapped them during programming.
 - Perform a factory reset (Section 3.4) and reprogram the remote.

If problems persist, please refer to the support information in Section 7.

6. SPECIFICATIONS

- **Product Dimensions:** 7 x 1 x 0.01 inches
- **Item Weight:** 1.94 ounces
- **Model Number:** 759462582776
- **Batteries:** 2 AAA batteries required (not included)
- **Max Number of Supported Devices:** 1
- **Compatible Devices:** Television
- **Color:** Black
- **Special Feature:** Universal

7. WARRANTY AND SUPPORT

AMAIRIYCA offers lifetime maintenance for this high-quality universal remote control. If you encounter any issues with the product or require assistance, please do not hesitate to contact us. Our customer support team is available to help you with troubleshooting and ensure your satisfaction.

For support, please refer to the contact information provided with your purchase or on the AMAIRIYCA official website.