

OVLUX LX-9905

OVLUX Professional Cordless Hair Clippers

MODEL: LX-9905 - USER MANUAL

Introduction

Thank you for choosing the OVLUX Professional Cordless Hair Clippers. This manual provides essential information for the safe and effective use, maintenance, and care of your new grooming device. Please read these instructions thoroughly before first use and retain them for future reference.

Important Safety Information

To ensure safe operation and prevent injury or damage, please observe the following:

- Always keep the hair trimmer away from water sources. Do not use it near bathtubs, showers, basins, or other vessels containing water.
- Ensure the device is properly charged before use to maintain optimal performance and prevent unexpected power loss during operation.
- Regularly oil the blades as instructed to ensure smooth operation and prevent overheating or skin irritation.
- The stainless steel material and smooth surface are designed to minimize irritation, but always use the clippers with care and appropriate guide combs.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel for any repairs.
- Keep out of reach of children.

Package Contents

Your OVLUX Professional Cordless Hair Clippers package includes the following items:

- OVLUX Professional Cordless Hair Clipper (Model LX-9905)
- 10 High-quality metal base guide combs (1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm, 16mm, 19mm, 22mm, 25mm)
- Left (L) and Right (R) ear taper combs
- Blade guard

- Cleaning brush
- Lubricating oil
- Power adapter with 6-foot (2-meter) cable cord
- 2 Travel bags for storage



Image: The OVLUX Professional Cordless Hair Clippers shown with its full set of guide combs and accessories, including the charging cable and cleaning tools.

Setup and Charging

Initial Charge

Before first use, fully charge your hair clippers. The built-in 2500mAh rechargeable battery provides 3-5 hours of continuous operation when fully charged.

1. Connect the power adapter to the charging port on the clipper.

2. Plug the adapter into a suitable electrical outlet (110-220V compatible).
3. The LED display will indicate the charging status. Allow the clipper to charge until the display shows 100% or a full charge indicator.

POWERFUL BATTERY



Image: The OVLUX hair clipper highlighting its powerful battery, capable of providing up to 5 hours of use on a single charge.

BODY GROOMING

FOR ALL OVER, HYGIENIC BODY USE



Image: The OVLUX hair clipper illustrating its dual charging compatibility for both 110V (USA) and 220V (Europe) electrical systems.

Operating Instructions

Attaching Guide Combs

The OVLUX clippers come with 10 guide combs and L/R ear taper combs to achieve various cutting lengths.

1. Select the desired guide comb based on the hair length you wish to achieve. The combs are labeled with their respective lengths (e.g., 1.5mm, 3mm, 6mm).
2. Align the comb with the clipper blade and push it firmly until it clicks into place. Ensure it is securely attached before use.
3. To remove, gently pull the comb away from the blade.



Image: The OVLUX hair clipper demonstrating its 16 adjustment lengths and the range of guide combs available for different cutting preferences.

PREMIUM QUALITY NOZZLE WITH METAL TONGUE



Image: A detailed view of an OVLUX guide comb, highlighting its premium quality nozzle with a durable metal tongue for secure attachment.

Adjusting Cutting Length

The clipper features a cutting length adjustment lever that varies from 0.8mm to 2.0mm. This allows for fine-tuning of the cutting length without changing guide combs.

1. Move the lever up or down to select the desired blade length.
2. Ensure the lever is securely set before beginning to trim.

General Operation

1. Press the power button to turn the clipper on. The LED display will illuminate, showing battery level and oiling reminders.
2. Hold the clipper firmly and move it against the direction of hair growth for an even cut.
3. The ergonomic design and full metal body provide a comfortable grip and durability.

4. The clipper can be used cordlessly or while plugged in and charging, thanks to its 6-foot long cable cord.

Maintenance

Cleaning the Blades

Regular cleaning ensures optimal performance and extends the life of your clippers.

1. After each use, turn off the clipper and detach any guide comb.
2. Use the provided cleaning brush to remove loose hairs from the blades and the clipper body.
3. Do not rinse the clipper under water unless specifically stated as waterproof (this model is not specified as waterproof, so avoid water).

Oiling the Blades

The LED display will indicate when the cordless hair clippers need to be oiled. Regular oiling keeps the blades sharp and moving smoothly.

1. Apply a few drops of the provided lubricating oil across the top of the blades.
2. Turn the clipper on for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

Storage

Store the clipper and its accessories in one of the provided travel bags in a cool, dry place, away from direct sunlight and moisture.

Troubleshooting

If you encounter any issues with your OVLUX Professional Cordless Hair Clippers, please refer to the following common solutions:

- **Clipper not turning on:** Ensure the battery is charged. Connect the clipper to the power adapter and allow it to charge.
- **Reduced cutting performance or pulling hair:** The blades may be dull, dirty, or require oiling. Clean the blades thoroughly with the brush, apply lubricating oil, and ensure no hair is trapped.
- **Clipper making unusual noise:** This could indicate a need for oiling or cleaning. If the noise persists after cleaning and oiling, contact customer support.
- **LED display not working:** Ensure the clipper is charged. If the issue persists, contact customer support.

For issues not covered here, please contact OVLUX customer support.

Specifications

Feature	Detail
Model Number	LX-9905
Brand	OVLUX
Power Source	Battery Powered

Feature	Detail
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	2500mAh (approx. 3-5 hours operational capacity)
Cutting Length Adjustment	0.8mm to 2.0mm (lever)
Guide Combs Included	10 metal base combs (1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm, 16mm, 19mm, 22mm, 25mm) + L & R ear taper combs
Material	Full Metal (Stainless Steel)
Color	Silver
Item Weight	1.04 Kilograms (approx. 2.29 Pounds)
Package Dimensions	9.45 x 6.22 x 3.19 inches
Recommended Uses	Beard trimming, barber salon, barbershop, cordless hair clipping

Warranty and Support

OVLUX is committed to providing high-quality products and excellent customer service.

- **1 Year Extended Warranty:** Your OVLUX Professional Cordless Hair Clippers come with a 1-year extended warranty. This warranty covers manufacturing defects and ensures your satisfaction with the product.
- **Customer Support:** For any questions, concerns, or warranty claims, please contact OVLUX customer support. Refer to the product packaging or the official OVLUX website for contact details.

© 2025 OVLUX. All rights reserved.

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question