

Moni 108049

Moni Alma Stroller User Manual

Model: 108049

INTRODUCTION

The Moni Alma Stroller is a versatile and lightweight aluminum frame stroller designed for children from birth up to 15 kg. It features a convertible bassinet that transforms into a sport seat, a reversible seating unit, and various adjustable components for comfort and convenience. This manual provides essential information for the safe and proper use, assembly, and maintenance of your Moni Alma Stroller.



Figure 1: The Moni Alma Stroller in its full configuration, showcasing the bassinet mode, lightweight aluminum frame, and stylish design.

SAFETY INFORMATION

Please read all instructions carefully before using the stroller. Failure to follow these instructions could result in serious injury to your child.

- **Maximum Weight Capacity:** Do not exceed the maximum weight limit of 15 kg (approximately 36 months of age).
- **Harness System:** Always secure your child with the 5-point safety harness, ensuring the shoulder pads are correctly positioned and the harness is snug.
- **Brakes:** Always engage the connection brake on the rear wheels when the stroller is stationary.
- **Supervision:** Never leave your child unattended in the stroller.
- **Folding/Unfolding:** Ensure children are clear of moving parts when folding or unfolding the stroller to prevent injury.
- **Accessories:** Only use accessories and spare parts approved by Moni.
- **Shopping Basket:** Do not overload the shopping basket; its maximum capacity is 3 kg.

COMPONENTS OVERVIEW

Familiarize yourself with the main components of your Moni Alma Stroller:

1. Lightweight Aluminum Frame
2. Convertible Bassinet/Sport Seat Unit
3. Adjustable Sun Canopy with Additional Visor
4. 5-Point Safety Harness with Soft Shoulder Pads
5. Removable Front Bar
6. Adjustable Backrest and Footrest
7. Front Swiveling/Lockable Wheels
8. Rear Wheels with Connection Brake
9. Large Shopping Basket
10. Diaper Bag
11. Foot Cover
12. Handle and Front Bar with Eco-Leather Covering



Figure 2: Side view of the stroller, showing the robust aluminum frame and wheel design.

SETUP AND ASSEMBLY

1. Unfolding the Frame

1. Place the folded stroller on a flat surface.
2. Release the folding latch (if present).

3. Lift the handle upwards until the frame locks into place with an audible click. Ensure all locking mechanisms are engaged.

2. Attaching the Wheels

- Insert the front wheels into their respective slots until they click securely.
- Attach the rear wheels by pushing them onto the axle until they lock.
- Verify all wheels are firmly attached by pulling on them.

3. Installing the Seat Unit (Bassinet/Sport Seat)

- Align the connectors on the seat unit with the corresponding slots on the frame.
- Push down firmly until the seat unit clicks into place.
- To reverse the seat direction, press the release buttons on both sides of the seat unit and lift it off, then reattach facing the desired direction.





Figure 3: The stroller configured with the bassinet (left) and the sport seat (right).

OPERATING INSTRUCTIONS

1. Adjusting the Seat Unit

- **Backrest:** Use the strap system at the back of the seat to adjust the backrest to one of three positions: upright, semi-reclined, or fully reclined.
- **Footrest:** The footrest can be adjusted using the buttons on either side to provide comfort for your child.
- **Converting Bassinet to Sport Seat:** The bassinet can be converted into a sport seat using the integrated strap system. Follow the instructions provided in the separate conversion guide (if applicable).

2. Harness System

- To secure your child, bring the two buckle clips together and insert them into the central buckle until they click.
- Adjust the straps to ensure a snug fit around your child's shoulders and waist.
- To release, press the button on the central buckle.



Figure 4: Detail of the 5-point safety harness, emphasizing the soft shoulder pads for child comfort.

3. Brakes

- To engage the brake, press down firmly on the connection bar located between the rear wheels.
- To release the brake, lift the connection bar upwards.
- Always ensure the brake is fully engaged when the stroller is stationary.

4. Folding the Stroller

- Ensure the seat unit is facing forward and in the upright position (or removed, depending on the model's folding mechanism).
- Locate the folding mechanisms on the frame (refer to specific diagrams if available).
- Follow the steps to collapse the stroller into a compact size. Ensure all parts are securely folded.



Figure 5: The Moni Alma Stroller in its compact folded state, ideal for storage and transport.

MAINTENANCE

- **Cleaning:**
 - Fabric parts can be cleaned with a damp cloth and mild soap. Do not machine wash or tumble dry.
 - The frame can be wiped clean with a soft, damp cloth.
 - Avoid using abrasive cleaners or solvents.
- **Wheels:** Regularly check wheels for debris and ensure they rotate freely. Lubricate axles if necessary.
- **Moving Parts:** Periodically check all moving parts, locks, and fasteners to ensure they are secure and functioning correctly.
- **Storage:** Store the stroller in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller does not fold/unfold smoothly.	Locking mechanisms are stuck or dirty.	Clean and lubricate moving parts. Ensure all release levers are fully engaged.
Wheels squeak or do not turn freely.	Dirt/debris in axles, lack of lubrication.	Remove debris from wheels and axles. Apply a silicone-based lubricant.
Brake is not engaging or releasing properly.	Mechanism is dirty or misaligned.	Clean the brake mechanism. Check for any obstructions. If issue persists, contact customer support.
Seat unit is difficult to attach/detach.	Connectors are not aligned or are obstructed.	Ensure connectors are clean and properly aligned with the frame slots. Apply gentle pressure.

SPECIFICATIONS

Feature	Detail
Brand	Moni
Model Number	108049
Recommended Age	0-36 months
Maximum Weight Capacity	15 kg (33 lbs)
Product Weight	10.5 kg (23.1 lbs)
Dimensions (L x W x H)	90 x 60 x 120 cm (35.4 x 23.6 x 47.2 inches)
Folded Dimensions (L x W x H)	70 x 60 x 40 cm (27.6 x 23.6 x 15.7 inches)
Frame Material	Aluminum
Fabric Material	100% Polyester
Harness Type	5-point

WARRANTY INFORMATION

Moni products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Moni website. Typically, the warranty covers manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Moni Alma Stroller, please contact our customer support team.

Website: www.moni.bg (Please note: This is a general placeholder. Refer to your product packaging for specific regional contact information.)

Email: support@moni.com (Placeholder)

Phone: +1-XXX-XXX-XXXX (Placeholder)

When contacting support, please have your model number (108049) and purchase date ready.

Related Documents - 108049

[illegible]



[Moni i-Maxx LSA05AB i-Size Baby Car Seat \(40-150 cm\)](#)

Information on the Moni i-Maxx LSA05AB i-Size baby car seat, approved under ECE R129/03 for children 0-36 kg and 40-150 cm height. Features ISOFIX and midnight black color.