

[manuals.plus](#) /› [Ausarox](#) /› [Ausarox Handheld Sewing Machine Instruction Manual](#)**Ausarox B08QGVBSDM**

Ausarox Handheld Sewing Machine Instruction Manual

Your portable solution for quick repairs and creative projects.

1. INTRODUCTION

The Ausarox Handheld Sewing Machine is a compact, portable, and cordless device designed for convenience and efficiency. It is ideal for adults, beginners, and professionals alike, offering a quick solution for mending clothes, performing minor alterations, and engaging in various DIY creative projects. This manual provides detailed instructions to help you get the most out of your sewing machine and accompanying 153-piece sewing kit.

2. PACKAGE CONTENTS

Your Ausarox Handheld Sewing Machine comes with a comprehensive 153-piece sewing kit, neatly organized in an elegant wooden storage box. Please verify that all items listed below are included in your package:

- 1 x Elegant Wooden Storage Box
- 1 x Handheld Sewing Machine
- 1 x Power Adapter (6V)
- 1 x Fabric Scissors
- 1 x Yarn Thread Cutter
- 1 x Sewing Seam Ripper
- 1 x Pin Cushion
- 22 x Rolls of Polyester Sewing Threads
- 12 x Metal Bobbins with Sewing Threads
- 40 x Straight Sewing Pins
- 30 x Assorted Hand Sewing Needles
- 26 x Buttons
- 10 x Safety Pins
- 2 x Sewing Thimbles
- 2 x Needle Threaders
- 1 x Soft Tape Measure

- 1 x Spare Needle



Sewing Box

The Kit Is Complete

Image: The Ausarox Handheld Sewing Machine and the elegant wooden sewing box, showcasing a variety of included sewing accessories.



**Convenient And Convenient To Use, No Need To Sew By Hand,
Fully Automatic**



Two Way Of Power Supply



Put It In The Cabinet

To Save Space

Image: A detailed view of the comprehensive 153-piece sewing kit, featuring various colored threads, needles, buttons, thimbles, and other essential tools.

3. PRODUCT FEATURES

- Mini Portable Design:** Compact and lightweight, making it easy to carry and store for on-the-go repairs or small projects.
- Comprehensive Kit:** Includes 153 essential sewing supplies, ensuring you have everything needed for various tasks.
- Versatile Fabric Compatibility:** Suitable for a wide range of fabrics, including denim, silk, cotton, nylon cloth, and leather.
- Multi-purpose Use:** Perfect for mending clothes, jeans, shopping bags, pet clothing, and engaging in DIY creative projects.
- Multiple Power Options:** Can be powered by a 6V power adapter (included), 4 AA batteries (not included), or a USB cable (not included).

**“Sharp And Durable
No Rust”**



Image: The handheld sewing machine in action, demonstrating its capability to sew through different fabric types such as denim, silk, cotton, and leather.



Image: Visual examples of the handheld sewing machine's applications, such as repairing pillows, sheets, shopping bags, jeans, aprons, and dolls.

4. SETUP

4.1 Power Supply

The Ausarox Handheld Sewing Machine offers three methods for power supply:

1. **6V Power Adapter:** The included power adapter provides stable and fast current, resulting in tighter stitches. This is the recommended power source for consistent performance.
2. **4 AA Batteries:** For cordless operation and portability, insert 4 AA batteries (not included) into the battery compartment.
3. **USB Cable:** A USB cable (not included) can also be used, but it may not provide stable current output compared to the power adapter.



Image: The handheld sewing machine illustrating the battery compartment for 4 AA batteries and the connection point for the 6V power adapter.

4.2 Threading the Machine

Follow these steps to thread your handheld sewing machine:

1. Ensure the machine is turned off and disconnected from any power source.
2. Lift the presser foot.
3. Place a bobbin with thread onto the spindle.
4. Guide the thread through the tension control disc.
5. Pass the thread through the needle eye using a needle threader if necessary.
6. Pull a few inches of thread through the needle.



Image: A step-by-step visual guide demonstrating how to install batteries, place the bobbin, thread the needle, and connect the power adapter to the sewing machine.

5. OPERATING INSTRUCTIONS

Before operating, ensure the machine is properly threaded and powered. The thickness of the fabric should not exceed 5/64 inches. This machine is not suitable for overly large, hard, or elastic fabrics.

- 1. Prepare Fabric:** Place the fabric under the presser foot.
- 2. Start Sewing:** Slide the power switch to the ON position or press the power button. The machine will begin sewing automatically.
- 3. Guide Fabric:** Gently guide the fabric with one hand, ensuring it moves smoothly under the needle. Do not force the fabric.
- 4. Adjust Tension:** Use the tension control knob to adjust stitch tightness as needed.
- 5. Finish Sewing:** Once sewing is complete, turn off the machine. Lift the presser foot and carefully remove the fabric.
- 6. Secure Stitch:** It is essential to tie off the thread manually after sewing to prevent stitches from unraveling.



Image: A detailed diagram highlighting the various parts of the handheld sewing machine, including the lock/unlock switch, power switch, adapter input, tension control, set screw, sewing mechanism, battery compartment, rotary wheel, bobbin, and fastening plate.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your sewing machine:

- **Cleaning:** Regularly clean lint and dust from the needle area and bobbin case using a small brush.
- **Needle Replacement:** Replace the needle if it becomes bent, dull, or breaks. Use the spare needle provided in your kit.
- **Storage:** Store the machine and accessories in the provided wooden box in a dry, cool place when not in use.

7. TROUBLESHOOTING

If you encounter issues with your sewing machine, consider the following:

- **Stitches Unraveling:** Ensure you manually tie the thread after completing your sewing to prevent stitches from falling out.

- **Machine Not Powering On:** Check battery installation or ensure the power adapter is securely connected and functioning.
- **Skipped Stitches or Uneven Stitching:** Verify that the machine is correctly threaded and the tension control is appropriately adjusted for your fabric type.
- **Fabric Not Moving Smoothly:** Ensure the fabric thickness is within the recommended limit (not exceeding 5/64 inches) and that the presser foot is down.

Note: A test cloth is equipped on the handheld sewing machine upon arrival, which is not an indication of prior use.

8. SPECIFICATIONS

Specification	Value
Product Dimensions	6.3 x 9.8 x 4.4 inches
Item Weight	3 pounds
Manufacturer	Ausarox
ASIN	B08QGVBSDM
Item Model Number	B08QGVBSDM
Brand	Ausarox
Color	White
Material	Wooden (for the box)
Power Source	AC/DC (Adapter/Batteries)
Is Electric	Yes
UPC	759663768504

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Ausarox Handheld Sewing Machine, please refer to the contact information provided with your purchase or visit the official Ausarox website. Keep your proof of purchase for warranty claims.