

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Armor3](#) /
- › [Armor3 "Nuchamp" Wireless Game Controller User Manual](#)

Armor3 M07467-BK

Armor3 "Nuchamp" Wireless Game Controller User Manual

MODEL: M07467-BK

1. PRODUCT OVERVIEW

The Armor3 "Nuchamp" Wireless Game Controller is designed for use with Nintendo Switch and Nintendo Switch Lite consoles. It offers a comfortable gaming experience with advanced features such as motion controls, force feedback, and a turbo function. The controller also includes remappable Pro paddle buttons on the back for enhanced customization.

Key Features:

- Wireless Bluetooth connectivity for seamless gameplay.
- Integrated motion controls for immersive gaming.
- Responsive force feedback for tactile sensations.
- Convenient turbo function for rapid button presses.
- User-remappable Pro paddle buttons for personalized control schemes.
- Long-lasting rechargeable battery providing 8-10 hours of playtime.



Image: Front-left view of the Armor3 Nuchamp Wireless Game Controller, showcasing its ergonomic design and button layout.

2. SETUP AND CONNECTION

2.1 Initial Charging

Before first use, fully charge the controller. Connect the included USB charging cable to the controller's charging port and the other end to a USB power source (e.g., Nintendo Switch dock, USB wall adapter, computer USB port). The charging indicator light will show the charging status and turn off or change color when fully charged.

2.2 Pairing with Nintendo Switch/Lite

1. On your Nintendo Switch/Lite, navigate to the HOME Menu.
2. Select **Controllers**, then **Change Grip/Order**.
3. Press and hold the **Sync Button** on the top of the Armor3 Nuchamp controller for a few seconds until the

player indicator lights begin to flash.

4. Once the controller is successfully paired, the player indicator light(s) will remain solid.
5. If pairing fails, ensure the controller is charged and try again. You may need to restart your Nintendo Switch console.



Image: Front view of the Armor3 Nuchamp Wireless Game Controller, highlighting the main buttons and joysticks.

3. OPERATING THE CONTROLLER

3.1 Button Layout and Functions

The Armor3 Nuchamp controller features a standard layout with additional remappable paddles.

- **Left Analog Stick:** Movement and camera control.
- **D-Pad:** Directional input for menus and certain games.
- **Right Analog Stick:** Camera control and aiming.

- **A/B/X/Y Buttons:** Action buttons, typically corresponding to in-game commands.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Buttons:** Trigger buttons.
- **Minus (-) Button:** Typically opens in-game menus or performs specific actions.
- **Plus (+) Button:** Typically opens pause menus or performs specific actions.
- **Home Button:** Returns to the Nintendo Switch HOME Menu.
- **Screenshot Button:** Captures a screenshot of the current screen.
- **M1/M2 Paddles:** Rear remappable paddle buttons.



Image: Back view of the Armor3 NuChamp Wireless Game Controller, showing the remappable M1 and M2 paddle buttons.

3.2 Remapping Pro Paddle Buttons

The M1 and M2 paddle buttons on the back of the controller can be remapped to replicate other button inputs for convenience and improved gameplay.

1. Press and hold the **Program Button** (usually a small button near the paddles) until the indicator light starts

flashing.

2. Press the **paddle button** (M1 or M2) you wish to remap. The indicator light will flash more rapidly.
3. Press the **button** on the front of the controller that you want the paddle to mimic (e.g., A, B, X, Y, L, R, ZL, ZR, D-Pad directions).
4. Press the **Program Button** again to save the mapping. The indicator light will stop flashing.
5. To clear a mapping, repeat the process but do not press a front button after selecting the paddle.

3.3 Turbo Function

The turbo function allows a button to be pressed repeatedly as long as it is held down, which can be useful in certain games.

1. Press and hold the **Turbo Button** (refer to controller diagram if available).
2. While holding the Turbo Button, press the **action button** (e.g., A, B, X, Y, L, R, ZL, ZR) you wish to apply turbo to.
3. Release both buttons. The selected action button now has turbo enabled.
4. To disable turbo for a specific button, repeat the process.

4. MAINTENANCE

4.1 Cleaning

To maintain your controller's condition, regularly wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the controller's finish and internal components.

4.2 Storage

Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Do not place heavy objects on the controller, and avoid dropping it to prevent damage.

4.3 Battery Care

The controller contains a rechargeable Lithium Ion battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the controller regularly, even if not in use for extended periods (e.g., once every 3-6 months).
- Do not expose the controller to extreme heat or cold.

5. TROUBLESHOOTING

5.1 Controller Not Connecting/Pairing

- **Check Battery:** Ensure the controller is fully charged.
- **Re-sync:** Try pressing the Sync button on the controller again while on the Switch's "Change Grip/Order" screen.

- **Restart Switch:** Power off your Nintendo Switch console completely and then turn it back on.
- **Interference:** Move closer to the Nintendo Switch console and ensure no other wireless devices are causing interference.

5.2 Buttons Not Responding

- **Re-pair Controller:** Disconnect and re-pair the controller with your Nintendo Switch.
- **Check for Damage:** Inspect buttons for any physical damage or debris.
- **Firmware Update:** Check the manufacturer's website (Armor3) for any available firmware updates for the controller.

5.3 Motion Controls Not Working

- **Recalibrate:** On your Nintendo Switch, go to System Settings > Controllers and Sensors > Calibrate Motion Controls. Follow the on-screen instructions.
- **Restart:** Restart both the controller and the Nintendo Switch console.

6. SPECIFICATIONS

Feature	Detail
Model Number	M07467-BK
Connectivity	Wireless Bluetooth
Compatibility	Nintendo Switch, Nintendo Switch Lite
Battery Type	1 Lithium Ion (included)
Battery Life	8-10 hours (approx.)
Product Dimensions	6.69 x 6.3 x 3.54 inches
Item Weight	11.2 ounces
Manufacturer	Armor3
Country of Origin	China

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Armor3 website or contact their customer service. Keep your proof of purchase for any warranty claims.

You can find more information and support resources by visiting the [Armor3 Store on Amazon](#).

