

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Dyson](#) /
- > [Dyson V10 Allergy Cordless Stick Vacuum Cleaner User Manual](#)

## Dyson Cyclone V10 Animal

# Dyson V10 Allergy Cordless Stick Vacuum Cleaner User Manual

Model: Cyclone V10 Animal

## INTRODUCTION

---

Thank you for choosing the Dyson V10 Allergy Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before use and retain this manual for future reference.





Image: The Dyson V10 Allergy Cordless Stick Vacuum Cleaner, showcasing its sleek design and cordless convenience.

## **SAFETY INFORMATION**

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is for household use only. Do not use outdoors or on wet surfaces. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes. Do not use without the

clear bin and filters in place. Unplug from the charger when not in use for extended periods.

## WHAT'S IN THE BOX

---

- Dyson V10 Allergy main body (motor and clear bin)
- Lightweight wand (purple)
- Torque Drive cleaner head (for carpets and hard floors)
- Mini-motorized tool (for pet hair and upholstery)
- Crevice tool (for tight spaces and edges)
- Combination tool (brush and wide nozzle for dusting and larger debris)
- Docking station (wall-mounted for storage and charging)
- Charger



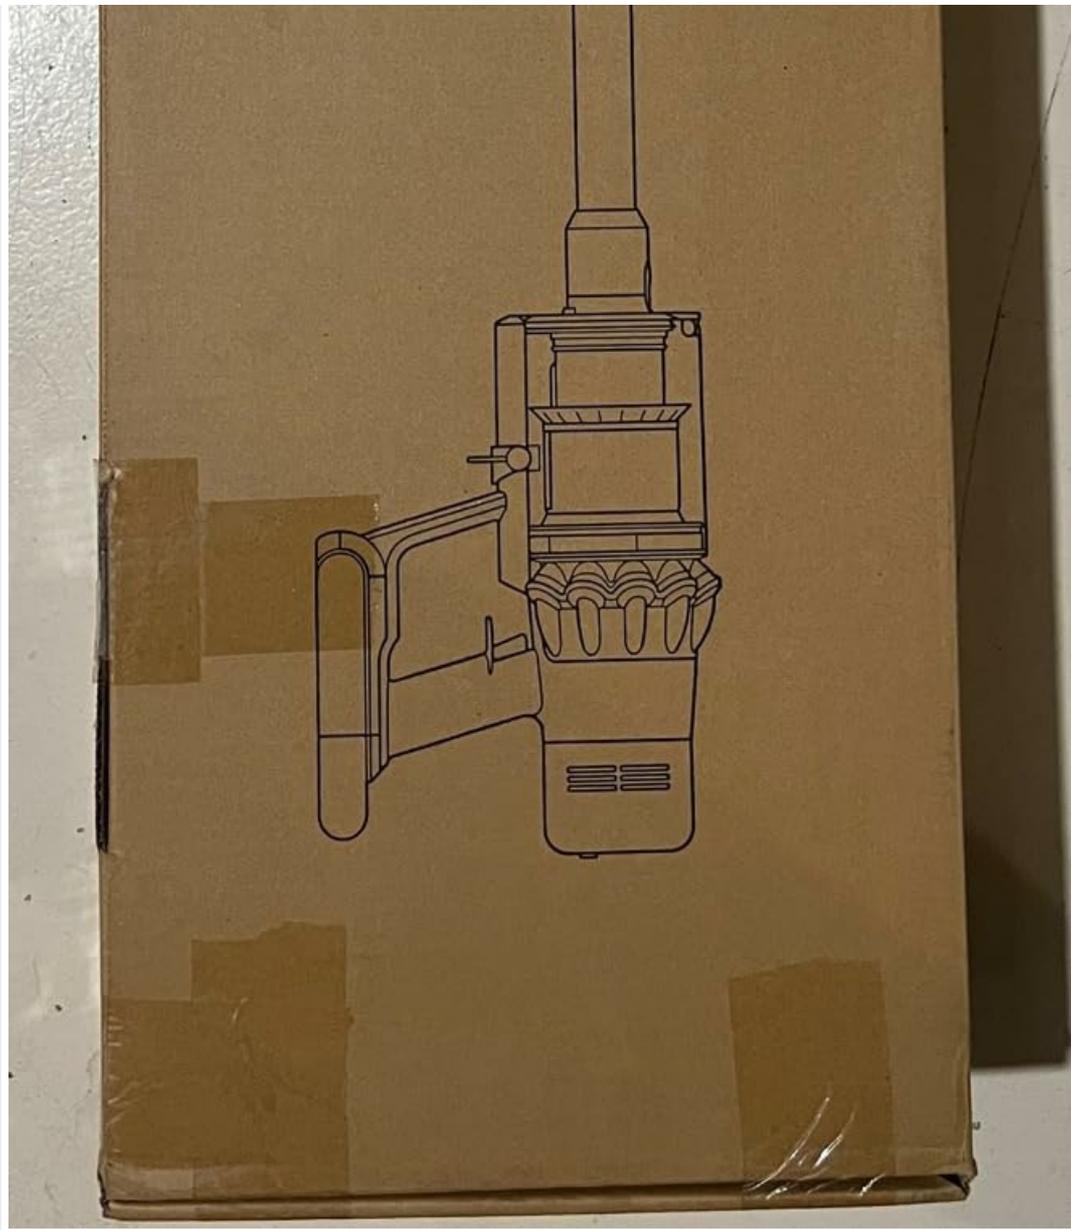


Image: The Dyson V10 Allergy main unit disassembled, showing the various cleaning tools and accessories included in the package.

## SETUP AND ASSEMBLY

1. **Charging:** Fully charge your Dyson V10 before first use. Connect the charger to the main body or the docking station. The blue indicator light will show charging status. A full charge takes approximately 3.5 hours.
2. **Attaching the Wand:** Align the wand with the main body and push until it clicks securely into place.
3. **Attaching a Cleaner Head/Tool:** Select your desired cleaner head or tool. Align it with the end of the wand (or directly to the main body for handheld use) and push until it clicks.
4. **Docking Station Installation (Optional):** Choose a suitable location near an electrical outlet. Secure the docking station to the wall using appropriate screws and anchors (not included). Ensure the charger cable is routed correctly.



yson





Image: The Dyson V10 Allergy main body connected to its charger, illustrating the charging port and indicator lights.

## OPERATING INSTRUCTIONS

### Power Modes

Your Dyson V10 has three power modes for different cleaning tasks:

- **Mode 1 (Low):** For lighter cleaning and longer run time (up to 60 minutes).
- **Mode 2 (Medium):** For everyday cleaning on various surfaces.
- **Boost Mode (Max):** For intensive spot cleaning and stubborn dirt. Provides maximum suction but reduces run time.

To change modes, slide the switch on the top of the main body.

### Using Attachments

- **Torque Drive Cleaner Head:** Ideal for both carpets and hard floors. Its stiff nylon bristles drive deep into carpet to remove ground-in dirt, while carbon fiber filaments capture fine dust from hard floors.
- **Mini-Motorized Tool:** Designed for removing pet hair and ground-in dirt from upholstery, car interiors, and tight spaces.
- **Crevice Tool:** Perfect for cleaning around edges and into narrow gaps.
- **Combination Tool:** Features a wide nozzle and brush. Use the nozzle for quick pick-ups and the brush for dusting delicate surfaces.



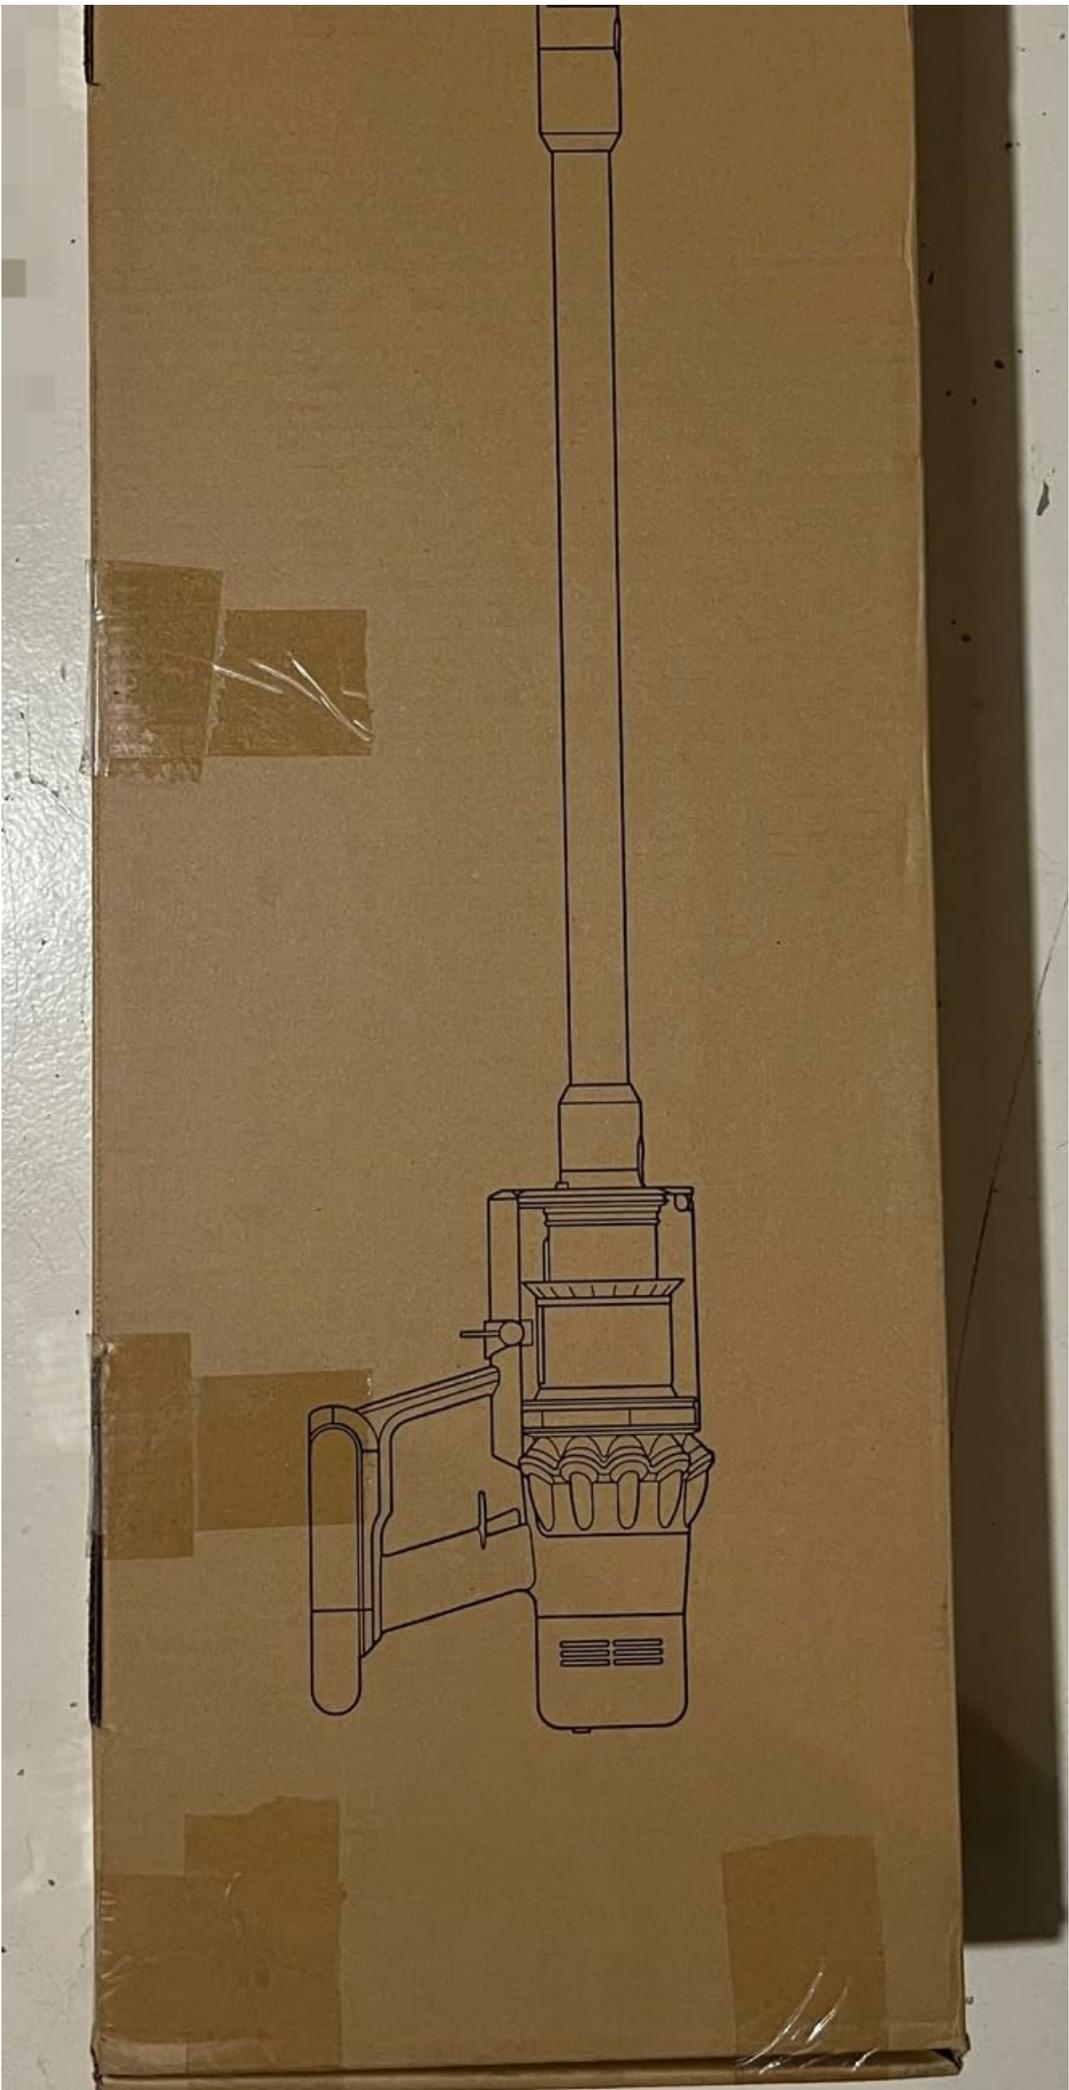


Image: The Dyson V10 Allergy with the Torque Drive cleaner head actively vacuuming a carpet, demonstrating its cleaning power.

## MAINTENANCE

---

### Emptying the Bin

Empty the clear bin as soon as the dirt reaches the MAX mark. To empty, hold the appliance over a bin, push the red lever down firmly, and the bin will open, releasing the dirt. Close the bin base firmly until it clicks.





Image: A hand demonstrating the hygienic bin emptying mechanism of the Dyson V10 Allergy, showing dirt being released into a waste bin.

### **Cleaning the Filter**

Wash the filter at least once a month, or more frequently if used heavily. To remove, twist the filter counter-clockwise from the top of the main body. Wash under cold tap water until the water runs clear. Squeeze and tap to remove excess water. Leave to dry completely for at least 24 hours in a warm, dry place before refitting. Do not use a washing machine, tumble dryer, or microwave.



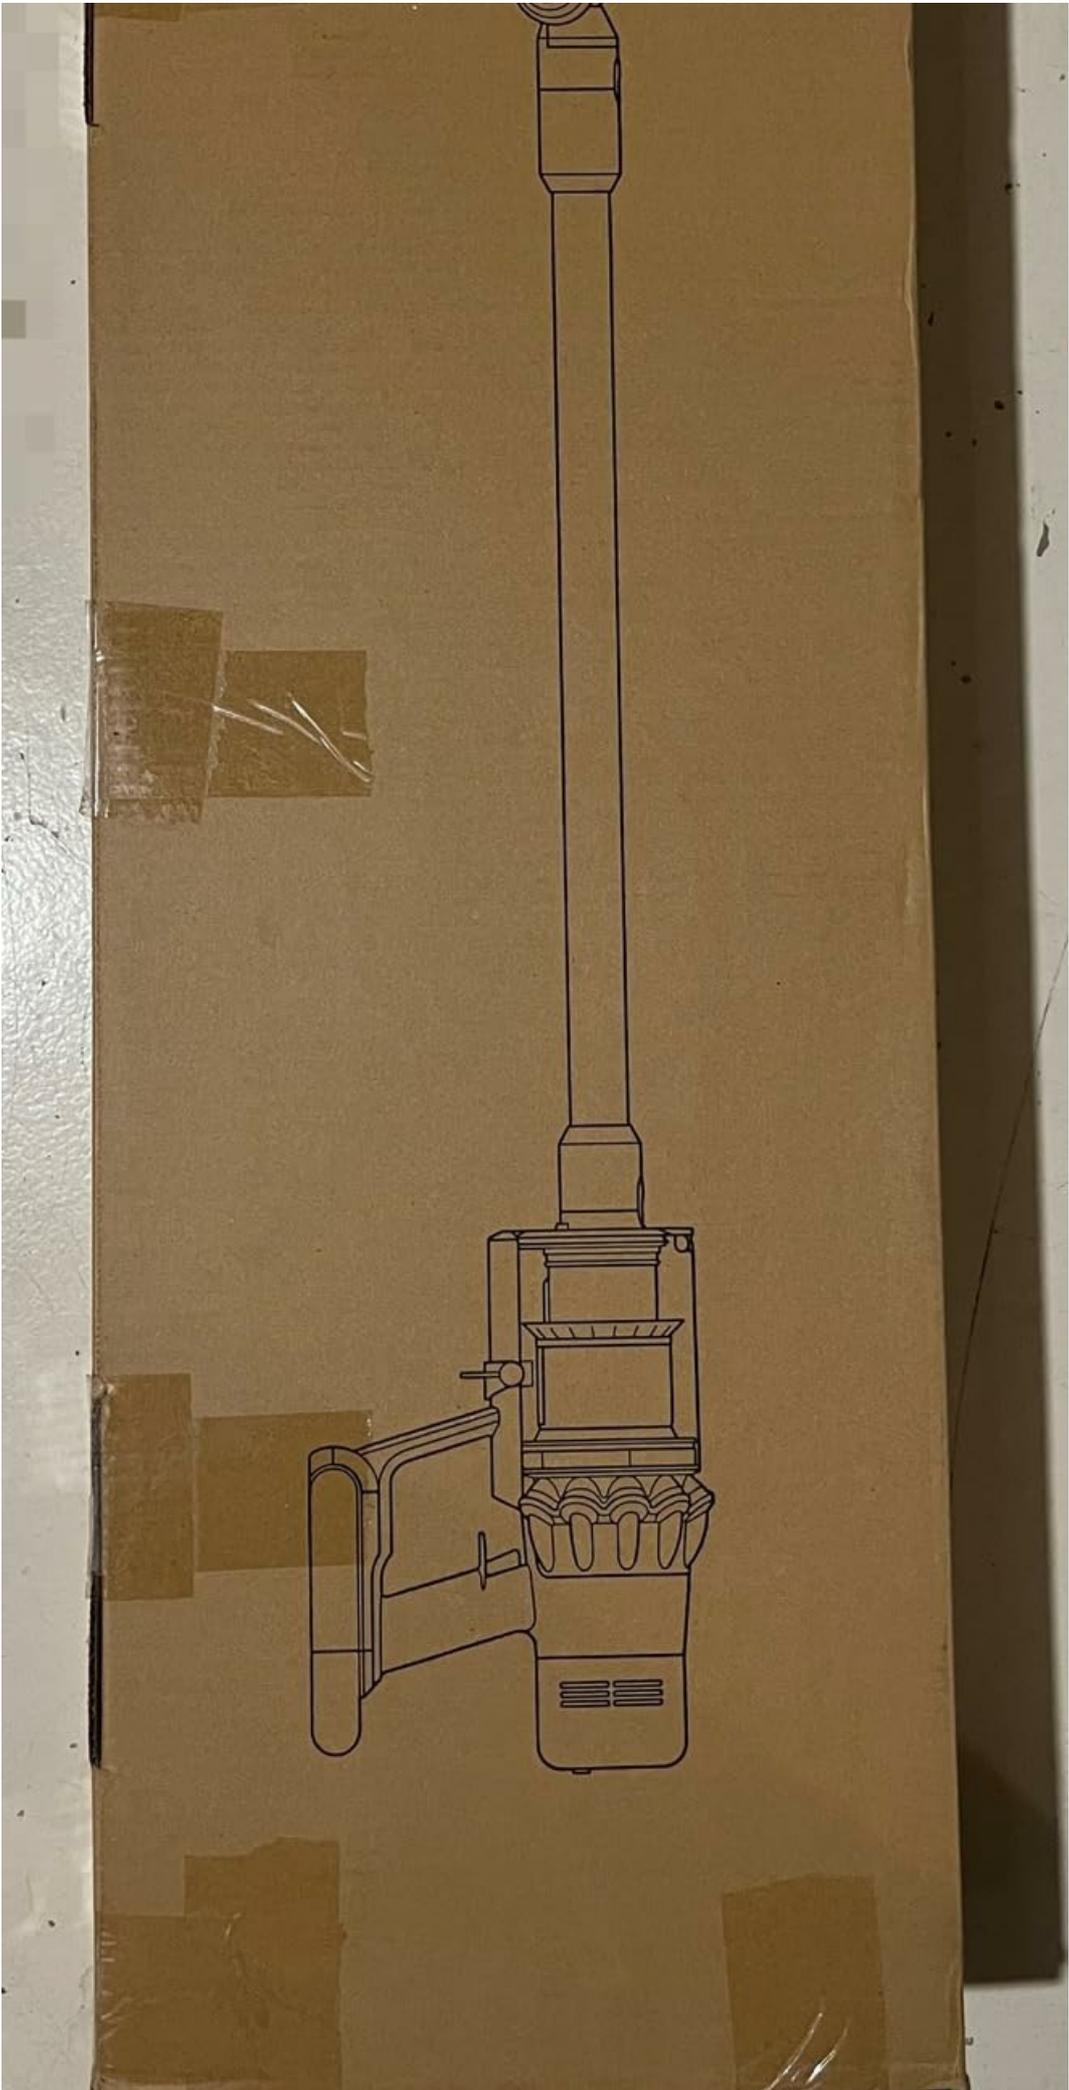




Image: A hand removing the purple filter from the top of the Dyson V10 Allergy main unit for washing.

## Cleaning Brush Bar

If the brush bar becomes blocked, it may stop rotating. Turn off the appliance and remove the cleaner head. Use a coin to unlock the end cap, then slide the brush bar out. Remove any hair or debris wrapped around the brush bar. Slide the brush bar back in and secure the end cap.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance has no power	Battery not charged	Charge the appliance fully.
Loss of suction	Blocked filter or bin full	Wash the filter and/or empty the clear bin. Check for blockages in the cleaner head or wand.
Brush bar not rotating	Blocked brush bar	Clear any obstructions from the brush bar (refer to "Cleaning Brush Bar" section).

## SPECIFICATIONS

Feature	Detail
Brand	Dyson
Model Name	v10 animal iron
Model Number	Cyclone V10 Animal
Filter Type	HEPA Filter
Surface Recommendation	Carpet, Hardwood, Stairs
Power Source	Battery Powered
Voltage	220 Volts
Capacity	4 Pounds
Runtime	Up to 60 minutes
Battery Type	Lithium-Ion
Battery Charge Time	60 minutes (approx. 3.5 hours for full charge)
Item Dimensions L x W x H	28.5"L x 6.25"W x 28.5"H

Feature	Detail
Noise Level	78 Decibels

## WARRANTY AND SUPPORT

---

The Dyson V10 Allergy Cordless Stick Vacuum Cleaner comes with a **2-year parts & labor manufacturer warranty**. For warranty claims, technical support, or to purchase genuine Dyson parts and accessories, please visit the official Dyson website or contact Dyson customer service.

Visit the Dyson Store: [Dyson Official Store](#)