

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rolanstar](#) /

› [Rolanstar 71" Floating TV Stand User Manual](#)

Rolanstar B08QJGVLLT

Rolanstar 71" Floating TV Stand User Manual

Model: 71" Black Floating TV Stand

PRODUCT OVERVIEW

The Rolanstar 71" Floating TV Stand is a wall-mounted media console designed for modern living spaces. It features a built-in power strip with 4 outlets for convenient device charging and integrated wire management. This sturdy unit is suitable for TVs ranging from 43 to 60 inches and offers open shelving for electronic devices, media equipment, and decorative items.



Figure 1: Front view of the Rolanstar 71" Floating TV Stand, showcasing its sleek black finish and open shelf design.

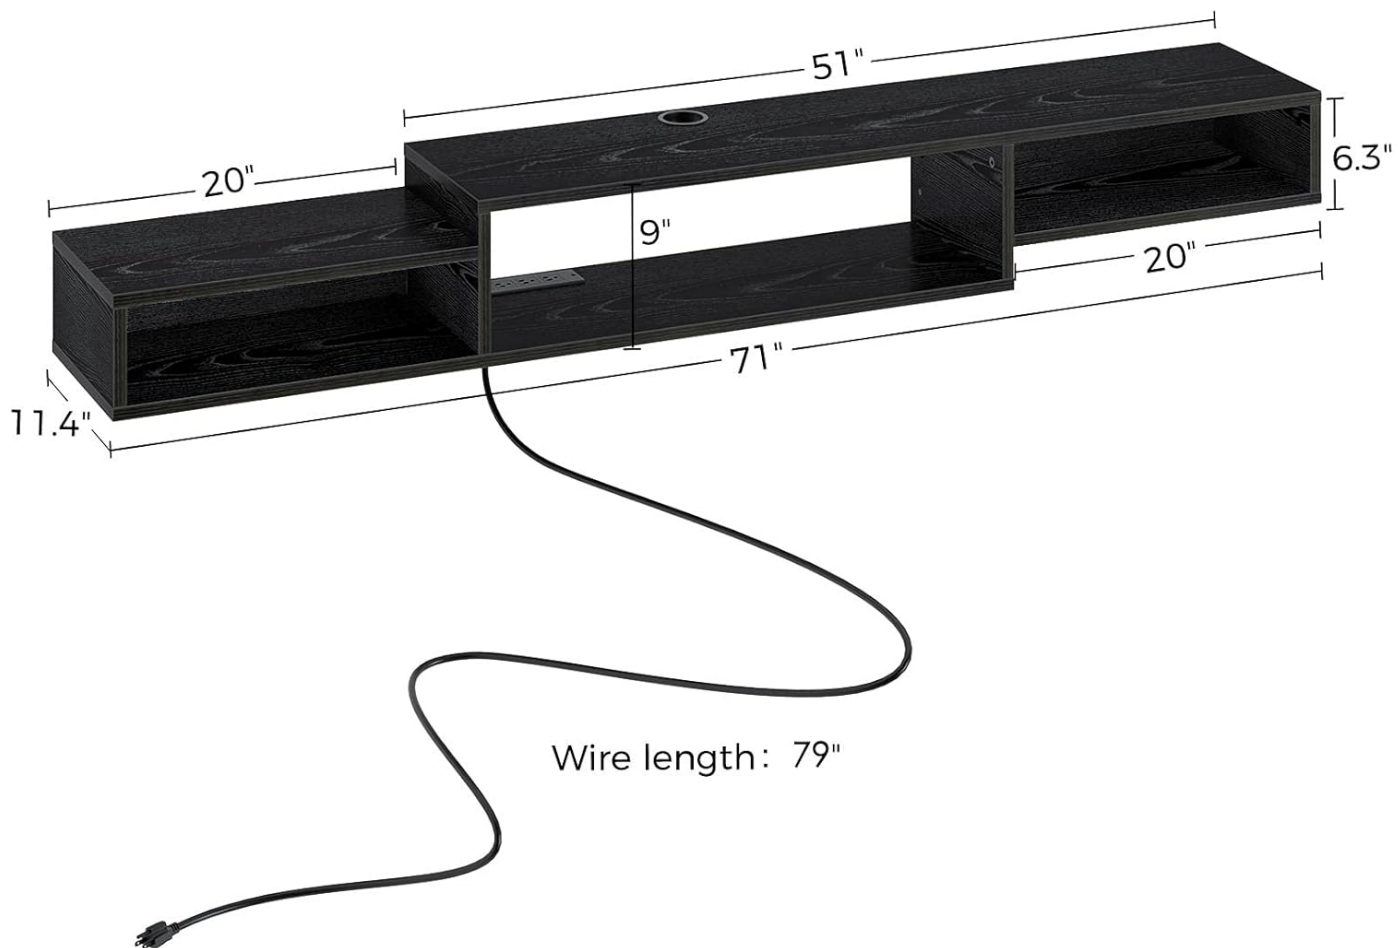 


Figure 2: Detailed dimensions of the 71-inch floating TV stand, including overall length, depth, height, and individual compartment measurements. Wire length is 79 inches.

 
SAFETY INFORMATION

Adherence to safety guidelines is crucial for proper installation and long-term use of your Rolanstar TV Stand. Failure to follow these instructions may result in injury or damage to the product or property.


- Always follow the assembly and installation instructions provided in the included manual.
- Use appropriate safety gear, such as gloves and eye protection, when handling and mounting the product.
- Ensure the wall chosen for installation can adequately support the combined weight of the mounted TV stand and any items placed on it. The floating TV console can hold up to 100 lbs.
- Do not overload the shelves beyond the specified weight capacity.
- Keep the area around the cabinet clear to prevent tripping hazards.
- Always turn off and unplug the TV and other electronic devices before cleaning or performing any maintenance on the cabinet.




Tips: This floating shelf will not work with cavity wall or gypsum board wall.

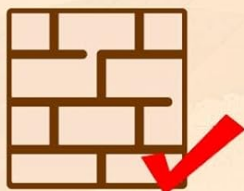


Brick Wall

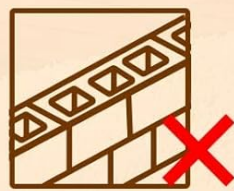

Cavity Walls

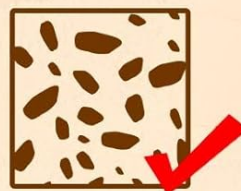

Concrete Wall

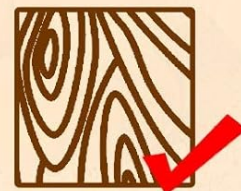 

Wooden Wall

Figure 3: Illustration of compatible wall types for installation. This TV shelf wall mount works with drywall, wooden walls, plastered walls, and solid walls. It is not suitable for cavity walls or gypsum board walls.

SETUP AND INSTALLATION

The Rolanstar TV Stand is designed for customer assembly and wall mounting. It is recommended to have a power drill for installation. All necessary assembly instructions and hardware are included in the package. Product parts are numbered with stickers to facilitate a fast and error-free installation process.

Pre-Installation Checklist:

1. Verify all package contents against the parts list provided in the assembly manual.
2. Ensure you have the necessary tools, including a power drill, level, and stud finder.
3. Identify a suitable wall location that can support the weight of the unit and your TV, avoiding cavity or gypsum board walls.
4. Clear the installation area of any obstructions.

Assembly Steps:

1. Follow the step-by-step instructions in the provided assembly manual to construct the TV stand components. Pay attention to part numbers.
2. Once assembled, determine the desired mounting height on your wall.
3. Use a stud finder to locate wall studs for secure mounting. While the unit comes with anchors, mounting into studs provides maximum stability.
4. Mark the drilling points accurately using a level to ensure the stand is perfectly horizontal.
5. Drill pilot holes as per the instructions, then install the wall anchors (if not mounting directly into studs) or lag bolts.
6. Carefully lift and attach the assembled TV stand to the wall, securing it with the provided screws.
7. Ensure all connections are tight and the stand is stable before placing any items on it.



Figure 4: The 71-inch floating TV stand is suitable for various TV sizes, including 43, 50, 55, and 60 inches, providing a clean and modern entertainment setup.

OPERATING INSTRUCTIONS

The Rolanstar TV Stand is designed for organizing and powering your media devices. Its primary function is to provide a stable, elevated surface for your television and a convenient storage solution for associated electronics.

Power Outlet Usage:

- The built-in power strip features 4 AC outlets (120V/12A) and a 6.5-foot power cord.
- Plug your TV, DVD player, WiFi router, gaming consoles, and other electronic devices into the integrated outlets for centralized power.
- Utilize the wire management features, including cable routing holes, to keep cords organized and prevent tangling.



Figure 5: Close-up view of the integrated power strip with four AC outlets, providing convenient charging and power access for multiple devices.

Storage and Organization:

- The 71" long media stand includes 2 side cubbies and 1 middle center open shelf.
- These compartments are ideal for storing books, electronic devices, media equipment, and decorative items.

- The open design allows for easy access and display of your items.



Figure 6: The Rolanstar floating TV stand integrated into a living room, demonstrating its use for displaying decorative items, books, and media equipment, enhancing the room's aesthetic.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your Rolanstar TV Stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as they may damage the finish.
- **Dusting:** Regularly dust the unit to prevent buildup, especially in and around the power outlets and cable management areas.
- **Hardware Check:** Periodically check all screws and mounting hardware to ensure they remain tight and secure. Retighten if necessary.
- **Cable Management:** Ensure cables remain neatly organized and are not pinched or stressed, which could lead to

damage or safety hazards.

TROUBLESHOOTING

This section addresses common issues you might encounter with your TV stand.

Problem	Possible Cause	Solution
Stand feels unstable or wobbly after mounting.	Insufficient wall support; screws not fully tightened; not mounted into studs.	Ensure the stand is mounted into wall studs. If not, use appropriate heavy-duty wall anchors. Retighten all mounting screws. Verify wall type compatibility (not for cavity/gypsum walls).
Power outlets are not working.	Power cord not fully plugged in; circuit breaker tripped; faulty device.	Check if the power cord is securely plugged into a functional wall outlet. Reset the circuit breaker if it has tripped. Test the devices in another outlet to confirm they are not faulty.
Cables are messy despite wire management features.	Improper routing; too many cables.	Reroute cables through the designated holes and channels. Use cable ties or wraps to bundle excess cable length. Consider adding additional cable management accessories if needed.
Damage to the unit during assembly.	Incorrect tools; excessive force; misinterpretation of instructions.	Review the assembly manual carefully before starting. Use only recommended tools. Apply appropriate force when tightening screws. Contact customer support for replacement parts if damage is significant.

SPECIFICATIONS

Feature	Detail
Brand	Rolanstar
Model Name	71" Floating TV Stand
Product Dimensions	11.4"D x 71"W x 9"H (29cm D x 180cm W x 23cm H)
Color	Black
Material	Engineered Wood (Melamine-Coated Particle Board)
Mounting Type	Wall Mount
Weight Limit	Up to 100 lbs (45.3 kg)
Number of Shelves	1 (with 2 side cubbies and 1 middle center open shelf)
Power Outlet	Built-in 4 AC Outlets (120V/12A)
Power Cord Length	6.5 feet (approx. 79 inches)
Assembly Required	Yes

Feature	Detail
Recommended TV Size	43" / 50" / 55" / 60"

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Rolanstar customer service. Refer to the contact details provided in your product packaging or visit the official Rolanstar website. You can also visit the [Rolanstar Store on Amazon](#) for additional product information and support resources.