

Smoby 810912

Smoby Electronic House Doorbell (Model 810912) Instruction Manual

Brand: Smoby | Model: 810912

1. INTRODUCTION

Thank you for choosing the Smoby Electronic House Doorbell. This accessory is designed to enhance the play experience of various Smoby playhouses by adding realistic doorbell sounds. This manual provides essential information for safe setup, operation, and maintenance of your product.

2. SAFETY INFORMATION

- **Recommended Age:** This product is suitable for children aged 2 years and up.
- **Battery Safety:** Use only the specified battery type (2 x LR03/AAA). Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity. Remove exhausted batteries promptly. Do not recharge non-rechargeable batteries. Keep batteries out of reach of small children.
- **Adult Supervision:** Adult supervision is recommended during installation and initial use.
- **Choking Hazard:** This product contains small parts. Ensure all components are securely attached to prevent choking hazards for young children.

3. PACKAGE CONTENTS











The package includes:

- 1 x Smoby Electronic House Doorbell unit

Note: 2 x LR03 (AAA) batteries are **not included** and must be purchased separately.

Accessories for Smoby houses

Check the compatibility: ✓ Yes ● Accessory not included

	810912	810907	810914	81004	810901
	Compatible everywhere			Compatible on some houses	
 810705 - 810721 810712 - 810723	✓	✓ 1 Set	✓	✓	✓*
 810713 - 810722	✓	✓ 2 Sets	✓	✓	●
 810718	✓	✓ 1 Set	✓	✓	✓
 810800	✓	✓ 2 Sets	✓		
 810500	✓	✓ 2 Sets	✓	✓	✓
 810406	✓	✓ 2 Sets	✓	✓	✓
 810403	✓	✓ 2 Sets	✓	✓	✓
 810405	✓	✓ 2 Sets	✓	✓	✓
 810203	●	✓ 3 Sets	✓	●	✓
 810202	●	✓ 3 Sets	✓	✓	●

* Please check: Possible only if there are holes (pre-drilled) on the wall, to fix the kitchen.



Figure 1: Product Packaging

4. SETUP AND INSTALLATION

4.1 Battery Installation

1. Locate the battery compartment on the back of the doorbell unit.
2. Using a small screwdriver (not included), open the battery compartment cover.

3. Insert 2 x LR03 (AAA) batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

4.2 Mounting the Doorbell

The Smoby Electronic House Doorbell is designed for easy attachment to compatible Smoby playhouses. It typically attaches to the door frame or a designated area on the playhouse structure.

1. Identify the desired mounting location on your Smoby playhouse.
2. The doorbell can be attached using screws (not included) or a strong adhesive (not included), depending on the playhouse model and your preference. Ensure the chosen method provides a secure attachment.
3. Once mounted, ensure the doorbell button is easily accessible for children.



Figure 2: Doorbell installed on a Smoby Playhouse

5. OPERATION

To operate the doorbell, simply press the button on the unit. It will produce a realistic doorbell sound, enhancing imaginative play.



Figure 3: Smoby Electronic House Doorbell Unit

6. COMPATIBILITY

The Smoby Electronic House Doorbell is compatible with the following Smoby playhouse models:

- Nature II
- Nature with Kitchen
- Pretty House II
- Pretty House with Kitchen
- Beach House
- Neo Jura Lodge
- My New House
- Chef House

- Garden House

For detailed compatibility with other Smoby accessories, please refer to the compatibility charts below.



Figure 4: Smoby Accessories Compatibility Chart (Part 1)

ACCESORIOS CASAS DE SMOBY							Check de compatibilidad ✓ SI • Incluido						
MODELOS							COMPATIBILIDADES				COMPATIBILIDAD CON LA MESA DE PICNIC		
810912	810907	810914	810915	850018	810901	810904	810909	810903	810905	810910	810902	810911	810913
C. NATURE II	C. LOVELY	C. PRETTY											
810905 - 810921 - 810912 - 810915	1 Set	✓	✓	✓	✓	✓							
NATUREE CON COCINA	PRETTY CON COCINA												
810913 - 810922	2 Sets	✓	✓	✓	•	✓							
SWEETY CORNER													
810916	1 Set	✓	✓	✓	✓	✓							
CASITA CON ARENERO													
810928	1 Set	✓	✓	✓	•	✓							
CASITA DE LA PLAYA CON TOBOGÁN													
810800	2 Sets	✓	✓	✓	✓								
JURA LODGE II							✓	✓	✓	✓	✓		
810500	2 Sets	✓	✓	✓	✓	✓							
CASITA MY NEW HOUSE							✓		✓	✓	✓		
810406	2 Sets	✓	✓	✓	✓	✓							
CHEF HOUSE							✓		✓	✓	✓		
810403	2 Sets	✓	✓	✓	✓	✓							
CASITA GARDEN HOUSE							•		✓	✓	✓		
810305	2 Sets	✓	✓	✓	✓	✓							
NEO FRIENDS HOUSE							✓	•	✓	✓	✓	•	✓
810203	3 Sets	•	✓	✓	✓	✓							
NEO FRIENDS HOUSE CON COCINA							✓	•	✓	✓	✓	•	✓
810202	3 Sets	•	✓	✓	✓	✓							
FRIENDS HOUSE EVO							✓	✓	✓	✓	✓	✓	✓
810204	2 Sets	✓	✓	✓	✓	✓							

Figure 5: Smoby Accessories Compatibility Chart (Part 2)

7. MAINTENANCE

- **Cleaning:** Wipe the doorbell unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Battery Replacement:** Replace batteries when the sound becomes faint or stops working. Follow the battery installation steps in Section 4.1.
- **Storage:** If the doorbell will not be used for an extended period, remove the batteries to prevent leakage. Store in a

cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound when button is pressed.	Batteries are dead or incorrectly installed.	Check battery polarity or replace with new LR03 (AAA) batteries.
Sound is faint or distorted.	Batteries are low.	Replace with new LR03 (AAA) batteries.
Doorbell does not fit playhouse.	Incompatible playhouse model.	Refer to the compatibility list in Section 6 to ensure your playhouse model is supported.

9. SPECIFICATIONS

- **Product Dimensions:** 1.57 x 1.57 x 1.57 inches
- **Item Weight:** 3.53 ounces
- **Model Number:** 810912
- **Manufacturer Recommended Age:** 24 months - 8 years
- **Batteries:** 2 x LR03 (AAA) batteries required (not included)
- **Manufacturer:** Smoby

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Smoby website.