

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Craig](#) /
- › [Craig CD6925 Portable Top-Loading Stereo CD Boombox User Manual](#)

### Craig CD6925BT-BK

# User Manual for Craig CD6925 Portable Top-Loading Stereo CD Boombox

Model: CD6925BT-BK

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Craig CD6925 Portable Top-Loading Stereo CD Boombox. Please read this manual thoroughly before using the device and retain it for future reference.

The Craig CD6925 is a versatile audio system featuring a top-loading CD player, AM/FM stereo radio, and Bluetooth wireless connectivity. It is designed for portable use, offering both AC and DC (battery) power options.



Figure 1.1: Front view of the Craig CD6925 Boombox. This image displays the main unit with its controls and speakers, providing a general overview of the product's appearance.

## 2. IMPORTANT SAFETY INFORMATION

- **Power Source:** Operate the unit only from the power sources indicated on the marking label.
- **Ventilation:** Do not block any ventilation openings. Ensure adequate space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a dry cloth for cleaning.
- **Batteries:** When using batteries, ensure they are inserted with correct polarity. Do not mix old and new batteries, or different types of batteries. Remove batteries if the unit is not used for a long period.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

## 3. PACKAGE CONTENTS

Please check that the following items are included in your package:

- Craig CD6925 Portable Top-Loading Stereo CD Boombox
- AC Power Cord
- User Manual (this document)

*Note: 6 x "C" size batteries are required for DC operation and are not included.*

## 4. PRODUCT FEATURES

---

The Craig CD6925 Boombox offers a range of features for your audio entertainment:

- Top-loading CD player
- Bluetooth wireless technology for audio streaming
- Total 2 x 0.8W RMS output stereo speakers
- CD-R/CD-RW compatible
- Programmable CD player function
- LED display for track information and radio frequency
- AM/FM stereo radio tuner
- 3.5mm auxiliary input port for external audio devices
- AC operation (via included power cord)
- DC operation (requires 6 x "C" size batteries, not included)
- Integrated sturdy carry handle for portability
- **Important Note:** This unit does **not** include a headphone jack.

# Features

## Programable top loading CD Player




CD-R/CD-W  
compatible



AM / FM  
Stereo Radio



LED  
display

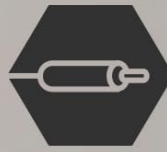

Total 2 x 0.8W  
RMS Output



Bluetooth



Figure 4.1: Overview of key features. This image highlights the main functionalities of the boombox, including CD compatibility, radio, LED display, audio output, and Bluetooth connectivity.

## 5. CONTROLS AND INDICATORS

Familiarize yourself with the controls and indicators on your boombox:



Figure 5.1: Close-up of the LED display and control buttons. This image provides a detailed view of the central control panel, including the digital display and various function buttons.

- **POWER Button:** Turns the unit ON or OFF.
- **MODE Button:** Switches between CD, FM, AM, and Bluetooth modes.
- **PLAY/PAUSE Button (▶/⏸):** Starts or pauses CD playback. In Bluetooth mode, plays or pauses audio.
- **STOP Button (■):** Stops CD playback.
- **SKIP/SEARCH Buttons (◀◀ / ▶▶):**
  - Press briefly to skip to the previous/next track on a CD or Bluetooth device.
  - Press and hold to search backward/forward within a track on a CD.
  - In Radio mode, press briefly to tune to the previous/next station.
- **PROGRAM (PROG) Button:** Used to program CD tracks for playback.
- **REPEAT (RPT) Button:** Repeats the current track or all tracks on a CD.
- **LED Display:** Shows CD track number, radio frequency, and mode indicators.
- **VOLUME Control Knob:** Adjusts the audio output level.

- **TUNING Control Knob:** Adjusts the radio frequency in AM/FM mode.
- **AUX IN Jack:** 3.5mm input for connecting external audio devices.
- **AC IN Jack:** For connecting the AC power cord.
- **Battery Compartment:** Located on the bottom of the unit, for 6 "C" size batteries.

## 6. SETUP

---

### 6.1 Powering the Unit

Your boombox can be powered by either AC power or batteries.

#### AC Power Operation:

1. Ensure the unit is turned OFF.
2. Connect the supplied AC power cord to the AC IN jack on the back of the unit.
3. Plug the other end of the AC power cord into a standard AC wall outlet (120V ~ 60Hz).

#### DC (Battery) Power Operation:

1. Ensure the unit is turned OFF and disconnected from AC power.
2. Open the battery compartment cover located on the bottom of the unit.
3. Insert 6 x "C" size batteries (not included) into the compartment, observing the correct polarity (+/-) as indicated inside.
4. Close the battery compartment cover securely.

*Note: When the AC power cord is connected, the unit will automatically switch to AC power, and the batteries will not be used.*



Figure 6.1: Illustrates the top-loading CD player and power options. This image shows the boombox with its CD compartment open, and text indicating AC/DC operation and battery requirements.

## 7. OPERATING INSTRUCTIONS

### 7.1 General Operation

- Press the **POWER** button to turn the unit ON.
- Press the **MODE** button repeatedly to select the desired function: CD, FM, AM, or Bluetooth.
- Adjust the **VOLUME** control knob to your preferred listening level.

### 7.2 CD Player Operation

1. Press the **MODE** button to select CD mode. The LED display will show "CD".
2. Open the CD compartment door by gently lifting it.
3. Place a CD (or CD-R/CD-RW) with the label side facing up onto the spindle.
4. Close the CD compartment door securely.

5. The CD will begin playing automatically. If not, press the **PLAY/PAUSE** button.
6. To pause playback, press **PLAY/PAUSE**. Press again to resume.
7. To stop playback, press the **STOP** button.
8. To skip tracks, press **SKIP/SEARCH** (◀◀ / ▶▶) briefly.
9. To search within a track, press and hold **SKIP/SEARCH** (◀◀ / ▶▶).

#### Programming CD Tracks:

1. In CD stop mode, press the **PROGRAM (PROG)** button. The LED display will show "01".
2. Use the **SKIP/SEARCH** (◀◀ / ▶▶) buttons to select the desired track.
3. Press **PROGRAM (PROG)** again to confirm the track. The display will show "02".
4. Repeat steps 2 and 3 to program up to 20 tracks.
5. After programming, press the **PLAY/PAUSE** button to start playback of the programmed sequence.
6. To clear the program, press the **STOP** button twice.

#### Repeat Playback:

- During CD playback, press the **REPEAT (RPT)** button once to repeat the current track (indicated by "REP1" on display).
- Press **REPEAT (RPT)** again to repeat all tracks on the CD (indicated by "REP ALL" on display).
- Press **REPEAT (RPT)** a third time to cancel the repeat function.

### 7.3 AM/FM Radio Operation

1. Press the **MODE** button to select FM or AM radio mode. The LED display will show the frequency.
2. Extend the FM telescopic antenna for better FM reception. For AM, the antenna is internal.
3. Rotate the **TUNING** control knob to manually tune to your desired radio station.
4. Adjust the **VOLUME** control knob to your preferred listening level.

### 7.4 Bluetooth Operation

1. Press the **MODE** button to select Bluetooth mode. The LED display will show "BT" and flash, indicating it's in pairing mode.
2. Enable Bluetooth on your external device (e.g., smartphone, tablet) and search for available devices.
3. Select "CD6925" from the list of found devices.
4. Once paired, the "BT" indicator on the LED display will stop flashing and remain solid.
5. You can now play audio from your Bluetooth device through the boombox. Use your device's controls or the boombox's **PLAY/PAUSE** and **SKIP/SEARCH** buttons to control playback.

# Play your favorite music



Figure 7.1: Illustrates Bluetooth connectivity. This image shows the boombox with a prominent Bluetooth logo, indicating its wireless audio streaming capability.

## 7.5 Auxiliary Input Operation

1. Press the **MODE** button to select AUX mode (if available as a distinct mode, otherwise ensure no other media is playing).
2. Connect one end of a 3.5mm audio cable (not included) to the AUX IN jack on the boombox.
3. Connect the other end of the 3.5mm audio cable to the headphone jack or line-out jack of your external audio device (e.g., MP3 player, smartphone).
4. Play audio from your external device. The sound will be output through the boombox speakers.
5. Adjust the volume using the boombox's **VOLUME** control knob and/or your external device's volume control.

## 8. MAINTENANCE AND CARE

- **Cleaning the Unit:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents.

- **Cleaning the CD Lens:** If the CD player experiences reading errors, the lens may need cleaning. Use a commercially available CD lens cleaner disc.
- **CD Care:** Handle CDs by their edges. Keep them clean and free from scratches. Store CDs in their cases when not in use.
- **Storage:** If the unit will not be used for an extended period, remove the batteries and store the unit in a cool, dry place.

## 9. TROUBLESHOOTING

Before seeking service, please refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
No power	AC cord not connected; Batteries depleted or incorrectly inserted.	Check AC cord connection; Replace batteries or ensure correct polarity.
CD does not play	CD inserted incorrectly; CD is dirty or scratched; Unit in wrong mode.	Insert CD with label side up; Clean or replace CD; Select CD mode.
Poor radio reception	Antenna not extended; Weak signal.	Extend FM telescopic antenna; Reposition the unit for better reception.
Bluetooth not pairing	Unit not in Bluetooth mode; Device too far; Bluetooth not enabled on external device.	Select Bluetooth mode; Move device closer; Enable Bluetooth on external device and search for "CD6925".
No sound from AUX IN	Cable not connected properly; Unit in wrong mode; Volume too low.	Ensure 3.5mm cable is fully inserted; Select AUX mode (if applicable); Increase volume on both boombox and external device.

## 10. SPECIFICATIONS

Feature	Description
Model Number	CD6925BT-BK
Brand	Craig
Product Dimensions (L x W x H)	9 x 9.6 x 5.8 inches
Item Weight	2.8 pounds
Connectivity Technology	Bluetooth
Speaker Type	Stereo
Output Power	Total 2 x 0.8W RMS
CD Compatibility	CD, CD-R, CD-RW
Radio Tuner	AM/FM Stereo
Auxiliary Input	3.5mm Jack

Feature	Description
Headphone Jack	None
Power Source	AC 120V ~ 60Hz or 6 x "C" size batteries (not included)
Color	Black
Manufacturer	Craig Electronics, LLC

## 11. WARRANTY AND SUPPORT

**Limited Warranty:** Craig Electronics, LLC warrants this product to be free from defects in material and workmanship for a period of 90 days from the date of purchase. This warranty is valid only for the original purchaser and is not transferable. It does not cover damage caused by accident, misuse, abuse, improper installation or operation, lack of reasonable care, or unauthorized modification.

**Customer Support:** For technical assistance or warranty service, please contact Craig Electronics, LLC customer support. Please have your model number (CD6925BT-BK) and proof of purchase available when contacting support. *Contact information for Craig Electronics, LLC can typically be found on their official website or product packaging.*

