

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Corbero](#) /
- › [Corberó E-CLA6018W Washing Machine User Manual](#)

## Corbero E-CLA6018W

# Corberó E-CLA6018W Washing Machine User Manual

Model: E-CLA6018W | Brand: Corberó

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Corberó E-CLA6018W front-load washing machine. Please read these instructions carefully before installation, use, and maintenance. Keep this manual for future reference.

## SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep packaging materials out of reach of children.

## PRODUCT OVERVIEW

The Corberó E-CLA6018W is a front-load washing machine designed for household use. It features a 6 kg capacity, 1000 RPM spin speed, and a variety of programs to suit different fabric types and washing needs.



Figure 1: Front view of the Corberó E-CLA6018W washing machine.

## SETUP AND INSTALLATION

## 1. Unpacking

- Remove all packaging materials, including the polystyrene base and any protective films.
- Carefully remove the transport bolts located at the rear of the machine. Keep these bolts for future transport.

## 2. Positioning the Appliance

Place the washing machine on a firm, level floor. Ensure there is adequate space around the appliance for ventilation and access.

- **Dimensions (HxWxD):** 84.5 cm x 59.7 cm x 49.7 cm.
- **Weight:** 56 kg.



Figure 2: Front view of the washing machine, illustrating its compact design suitable for various placements.

## 3. Leveling the Appliance

Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level. A level appliance reduces vibration and noise during operation.

## 4. Water Connection

- Connect the inlet hose to a cold water tap with a 3/4" thread.
- Ensure all connections are tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fastened to prevent

displacement during draining.

## 5. Electrical Connection

- Plug the appliance into a grounded electrical outlet.
- Ensure the power supply matches the specifications: 220-240V, 50Hz.

## OPERATING INSTRUCTIONS

### 1. Control Panel Overview

The control panel consists of a program selector knob, a digital LED display, and function buttons.



Figure 3: Close-up of the washing machine control panel, showing the program selector and display.



Figure 4: Detailed view of the LED display and function buttons, including temperature, spin, delayed start, quick wash, and start/pause.

### 2. Loading Laundry

- Open the door and load laundry into the drum, ensuring not to overload. The maximum capacity is 6 kg.
- Close the door firmly.

### 3. Adding Detergent and Softener

Pull out the detergent drawer and add the appropriate amount of detergent to the main wash compartment and softener to its designated compartment. Refer to your detergent packaging for dosage recommendations.

### 4. Program Selection

Turn the program selector knob to choose one of the 15 available washing programs. The selected program will be indicated on the LED display.

Key programs include:

- **Anti-Allergy Program:** Designed for sensitive skin, providing thorough rinsing.
- **Quick Wash 15 min:** For lightly soiled items requiring a fast wash cycle.
- **ECOlogic:** Optimizes water and detergent usage for environmental efficiency.
- **Cotton:** For durable cotton items.
- **Synthetics:** For synthetic and mixed fabrics.
- **Wool:** Gentle wash for woolens.
- **Rinse:** Additional rinse cycle.
- **Spin:** Draining and spinning cycle.

### 5. Function Buttons

Customize your wash cycle using the function buttons:

- **Temperature (Temp.):** Adjust the wash temperature.
- **Spin Speed (Essorage):** Modify the spin speed or select no spin.
- **Delayed Start (Départ Différé):** Set a delay for the wash cycle to begin (up to 23 hours).
- **Quick Wash (Lavage Rapide):** Shortens the selected program duration.
- **Start/Pause (Départ Pause):** Start, pause, or cancel the current program.

### 6. Starting the Wash Cycle

After selecting the program and desired functions, press the Start/Pause button to begin the wash cycle. The LED display will show the remaining time.

## MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine. Always unplug the appliance before cleaning.

### 1. Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### 2. Cleaning the Detergent Drawer

Periodically remove the detergent drawer and rinse it under running water to remove any detergent residue. Clean the housing of the drawer with a brush.

### 3. Cleaning the Drain Filter

The drain filter should be cleaned regularly to prevent blockages. Refer to the full instruction manual for detailed steps on accessing and cleaning the filter.

## 4. Drum Cleaning

Run a maintenance wash (e.g., a hot cycle with no laundry and a descaling agent) periodically to clean the drum and remove any buildup.

## TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start.	Power cord not plugged in; door not closed properly; program not selected; Start/Pause button not pressed.	Check power connection; ensure door is latched; select a program; press Start/Pause.
No water intake.	Water tap closed; inlet hose kinked; water supply cut off.	Open water tap; straighten hose; check household water supply.
Water not draining.	Drain hose kinked or blocked; drain filter clogged.	Straighten or clear drain hose; clean drain filter.
Excessive vibration/noise.	Transport bolts not removed; machine not level; uneven load.	Remove transport bolts; adjust leveling feet; redistribute laundry.
Error code on display.	Specific malfunction.	Refer to the full manual for a list of error codes and their solutions. If the problem persists, contact customer service.

## TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	E-CLA6018W
Brand	Corberó
Type	Front-Load Washing Machine
Capacity	6 kg
Maximum Spin Speed	1000 RPM
Energy Efficiency Class (New)	D
Energy Consumption (per 100 cycles)	65 kWh
Water Consumption (per cycle)	43 L
Noise Level (Spin)	76 dB

Feature	Specification
Dimensions (HxWxD)	84.5 cm x 59.7 cm x 49.7 cm
Weight	56 kg
Number of Programs	15
Special Functions	Anti-Allergy, Delayed Start, ECOlogic, Quick Wash, Temperature Selection, Spin Speed Selection
Power Supply	220-240V, 50Hz
Installation Type	Free-standing

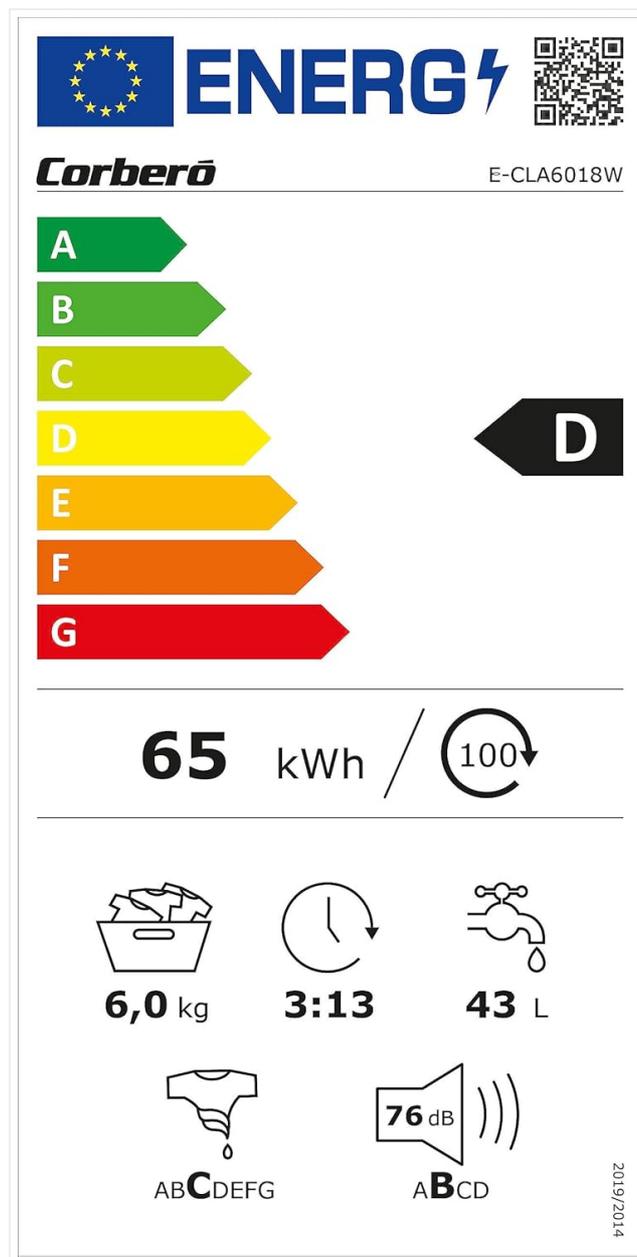




Figure 5: Energy label for the Corberó E-CLA6018W, indicating Energy Efficiency Class D.

For more details, visit the [EPREL database](#).

# Lavadora Gama Plus\_E-CLA6018W



	Modelo	E-CLA6018W
	EAN	8436555986896
<b>Características</b>		
Color	Blanco	
Capacidad (kg.)	6kg.	
Clase eficiencia energética	D	
Consuma de energía por 100 ciclos (kWh)	65 kWh	
Consuma de energía programa ECO carga completa (kWh)/ciclo	0,92 kWh	
Consuma de energía programa ECO 1/2 carga (kWh)/ciclo	0,53 kWh	
Consuma de energía programa ECO 1/4 carga (kWh)/ciclo	0,29 kWh	
Consumo eléctrico en modo apagado/ modo sin apagar W	0,50 / 1 W	
Consumo de agua por ciclo (L)	43L	
Clase de eficiencia de centrifugado	C	
Velocidad Máxima Centrifugado (rpm)	1000 rpm	
Contenido de humedad residual % 1200 rpm	62%	
Duración del programa ECO carga completa (kWh)/h	3:13	
Duración del programa ECO 1/2 carga (kWh)/h	2:34	
Duración del programa ECO 1/4 carga(kWh)/h	2:32	
Clase de ruido acústico db (A)	76 db (A)/B	
Tipo de instalación	Libre Instalación	
<b>Prestaciones</b>		
Motor	Universal	
Display	Display LED	
Sistema ECOlogic	Si	
Sistema control balanceo	Si	
Sistema detección errores	Si	
Selección de velocidad de centrifugado	Si	
Selección de Temperatura	Si	
Indicador ciclo de lavado	Si	
Volumen del tambor (L)	44 L	
Inicio retardado	Si (1-23 horas)	
Opción Antialérgico	Si	
Planchado Facil	No	
<b>Seguridad</b>		
Control espuma	Si	
Control anti desbordamiento	Si	
Bloqueo niños	Si	
<b>Programas</b>		
Número de programas	15	
<b>Equipamiento</b>		
Apertura escotilla	30cm	
Tamaño exterior puerta	44cm	
Tambor de acero inoxidable	Si	
Número de compartimentos en el dispensador	3	
Pies ajustables	Si	
<b>Datos técnicos</b>		
Tensión nomina (V.)	220-240v	
Intensidad de corriente eléctrica (A.)	10 A	
Potencia de conexión (W)	2100 W	
Frecuencia de red (Hz)	50Hz	
<b>Dimensiones mm</b>		
Alto x Ancho x Profundidad (producto)	845 X 597 X 497	
Alto x Ancho x Profundidad (embalaje)	881 X 641 X 547	
Peso neto (KG)	56 Kg	
Peso Bruto (KG)	57,5 Kg	

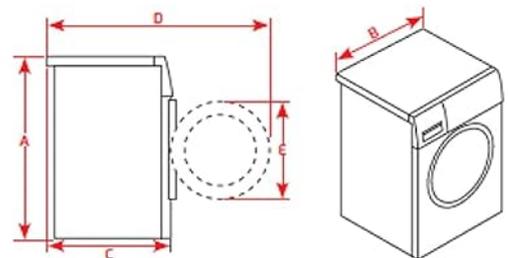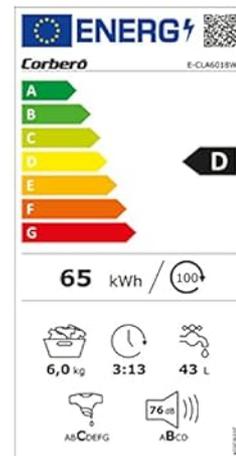

**Corberó**  
www.corbero.es

Figure 6: Detailed product information sheet with comprehensive specifications and dimensions.

---

## Warranty Information

Your Corberó E-CLA6018W washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

## Customer Support

For technical assistance, spare parts, or service requests, please contact Corberó customer support or your authorized dealer. Have your model number (E-CLA6018W) and serial number ready when contacting support.

You can typically find contact information on the manufacturer's official website or in the documentation provided with your appliance.



© 2024 Corberó. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.