

GE 46410

GE Pro HDMI 4-Device Switch and Universal Remote

Model: 46410

INTRODUCTION

The GE Pro HDMI 4-Device Switch and Universal Remote (Model 46410) is designed to expand your television's HDMI input capabilities and simplify control of your entertainment devices. This product includes a 4-device HDMI switch and a preprogrammed universal remote. The HDMI switch allows you to connect up to four HDMI-enabled devices to a single HDMI port on your TV, facilitating easy switching between equipment without cable disconnection. It supports 4K with HDR for high-quality video and complies with HDCP 2.2 standards. The universal remote is preprogrammed for the HDMI switch, Samsung TVs, and Roku boxes, and can control other major brands, offering a streamlined user experience with features like master volume control and programmable favorites.

PACKAGE CONTENTS

- GE Pro HDMI 4-Device Switch
- Universal Remote Control
- Power Adapter

SETUP INSTRUCTIONS

1. Connecting the HDMI Switch

1. **Power Off Devices:** Ensure your television and all HDMI-enabled devices (e.g., Blu-ray player, gaming console, streaming media player) are powered off before making connections.
2. **Connect Input Devices:** Connect up to four HDMI-enabled devices to the "INPUT 1", "INPUT 2", "INPUT 3", and "INPUT 4" ports on the GE Pro HDMI Switch using HDMI cables (not included).
3. **Connect to TV:** Connect one end of an HDMI cable (not included) to the "OUTPUT" port on the HDMI switch and the other end to an available HDMI input port on your television.
4. **Connect Power Adapter:** Plug the included power adapter into the "DC 5V" port on the HDMI switch, then plug the adapter into a standard wall outlet.
5. **Power On:** Power on your television and connected HDMI devices. The HDMI switch will automatically detect active inputs.



Image: Rear view of the GE Pro HDMI 4-Device Switch, illustrating the HDMI input ports (1-4), HDMI output port, and DC 5V power input.



Image: The power adapter for the GE Pro HDMI 4-Device Switch.

2. Universal Remote Setup

The included universal remote is preprogrammed for immediate use with the GE Pro HDMI switch, Samsung TVs, and Roku boxes. For other devices, refer to the comprehensive code library provided with the remote or visit the manufacturer's website for programming instructions.





Image: The GE Pro Universal Remote Control, showing its various buttons for device control.

OPERATING INSTRUCTIONS

Using the HDMI Switch

- **Automatic Switching:** The HDMI switch is designed to automatically detect and switch to the most recently activated input.
- **Manual Switching (Device Button):** Press the input selection button on the top of the HDMI switch to cycle through the connected devices (Input 1, 2, 3, 4). The corresponding LED indicator will illuminate to show the currently selected input.
- **Manual Switching (Remote Control):** Use the "SWCH" button on the universal remote to switch between connected HDMI devices.



Image: Front view of the GE Pro HDMI 4-Device Switch, displaying the input selection button and LED indicators for active inputs.

Using the Universal Remote Control

- **Device Selection:** Use the dedicated device buttons (e.g., TV, DVD, STRM, SWCH) at the top of the remote to select the device you wish to control.
- **Master Volume Control:** The master volume control feature allows you to adjust the audio level regardless of which device is currently selected.
- **One-Touch Streaming:** The one-touch streaming button provides direct access to your preferred media platforms (requires prior programming for specific streaming services).
- **Programmable Favorites:** Store up to 10 of your favorite channels for instant access using the programmable favorites button.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the HDMI switch and remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

for extended periods.

- **Battery Replacement:** Replace batteries in the universal remote control as needed. Refer to the remote's specific instructions for battery type and replacement procedure.

TROUBLESHOOTING

Problem	Solution
No picture or sound from a connected device.	• Ensure all HDMI cables are securely connected to both the source device, the HDMI switch, and the TV. • Verify the correct input is selected on the HDMI switch (check LED indicator) and on your TV. • Confirm the source device is powered on and functioning correctly. • Try a different HDMI cable. • Ensure the HDMI switch's power adapter is properly connected and receiving power.
Remote control is not responding.	• Check and replace the batteries in the remote control. • Ensure there are no obstructions between the remote and the device. • Verify the remote is pointed directly at the device's IR receiver. • If controlling a device other than the HDMI switch, ensure the remote is programmed correctly for that device.
Picture quality issues (e.g., flickering, distorted image).	• Ensure you are using high-quality HDMI cables, especially for 4K content. • Check that the resolution settings on your source device are compatible with your TV and the HDMI switch. • Verify that the HDMI switch is receiving adequate power.

SPECIFICATIONS

Feature	Detail
Product Type	HDMI 4-Device Switch with Universal Remote
Model Number	46410
Brand	GE
Number of HDMI Ports	4 Inputs, 1 Output
Supported Resolution	Up to 4K@60fps, Full HD 1080P
HDR Compatibility	Yes
HDCP Compliance	HDCP 2.2
Data Transfer Rate	18Gbps
ARC Enabled	Yes

Feature	Detail
Power Input	DC 5V (via included power adapter)
Universal Remote Compatibility	Preprogrammed for HDMI switch, Samsung TVs, Roku boxes; compatible with major brands.
UPC	030878464109
ASIN	B08QNHQ5W

WARRANTY AND SUPPORT

This GE Pro HDMI 4-Device Switch and Universal Remote is backed by **alimited-lifetime warranty**. For technical assistance or any questions regarding your purchase, please contact our U.S.-based Consumer Care team.

- **Phone Support:** 1-800-654-8483
- **Hours:** Monday - Friday, 7 AM - 8 PM Central Time

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08QNHQ5W>

More documents and user manuals: <https://manuals.plus/>