

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Prestige](#) /
- › [Prestige IRIS 2.0 Induction Cooktop User Manual](#)

Prestige IRIS 2.0

Prestige IRIS 2.0 Induction Cooktop User Manual

Model: IRIS 2.0 | Brand: Prestige

1. INTRODUCTION

Thank you for choosing the Prestige IRIS 2.0 Induction Cooktop. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.



Image 1.1: The Prestige IRIS 2.0 Induction Cooktop, a sleek black unit with touch controls.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or damage to the appliance, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW AND FEATURES

The Prestige IRIS 2.0 Induction Cooktop is designed for efficient and convenient cooking. Key features include:



Indian Menu Option: Pre-set cooking modes for popular Indian dishes, simplifying meal preparation.



Anti-Magnetic Wall: Effectively blocks surplus magnetic radiation, enhancing safety and efficiency.



Automatic Voltage Regulator: Protects the appliance from voltage fluctuations, ensuring stable operation and longevity.



Intelligent Control: Computer-controlled procedures with automatic power and temperature adjustments for various foods.



Energy Saving: Direct heating minimizes energy and heat wastage.



Eco-friendly: Flame-free heating ensures a safe cooking process without environmental hazards.

Timer with User Pre-Set: Allows for precise cooking times.

2000 Watts Power: Provides powerful and fast heating.



ELEGANT AND EFFICIENCY NOW AFFORDABLE



Image 3.1: Overview of the Prestige IRIS 2.0 Induction Cooktop's main features, including Indian Menu, Anti-magnetic Wall, Automatic Voltage Regulator, and User Pre-set Timer.

4. SETUP

1. **Unpacking:** Carefully remove the induction cooktop from its packaging. Retain the packaging for future storage or transport.
2. **Placement:** Place the cooktop on a flat, stable, heat-resistant surface. Ensure there is adequate ventilation around the unit. Do not place it near water sources or flammable materials.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance.
4. **Initial Cleaning:** Before first use, wipe the ceramic plate with a soft, damp cloth. Ensure it is completely dry before plugging in.

5. OPERATING INSTRUCTIONS

The Prestige IRIS 2.0 Induction Cooktop features intuitive touch controls for ease of use.

5.1 Basic Operation

1. **Power On/Off:** Press the **ON/OFF** button to turn the cooktop on or off.
2. **Place Cookware:** Place suitable induction-compatible cookware (e.g., cast iron, magnetic stainless steel) centrally on the cooking zone. The cooktop will not operate without compatible cookware.
3. **Adjust Power/Temperature:** Use the **+** and **-** buttons to adjust the power level or temperature.

5.2 Indian Menu Options

The cooktop includes pre-programmed settings for various Indian dishes:

- Press the **MENU** button to cycle through the pre-set Indian menu options.
- Each press will select a different mode (e.g., Dosa, Idli, Heat Milk, Curry, Deep Fry, Pressure Cook).
- The cooktop will automatically adjust power and temperature for the selected mode.

5.3 Timer Function

- Press the **TIMER PRESET** button to activate the timer.
- Use the **+** and **-** buttons to set the desired cooking time.
- The cooktop will automatically switch off once the set time has elapsed.

Your browser does not support the video tag.

Video 5.1: An official product video demonstrating the features and operation of the Prestige IRIS 2.0 Induction Cooktop, including its 2000W power, anti-magnetic wall, user pre-set timer, Indian menu options, and automatic voltage regulator. It also shows the product dimensions and contents of the box.

6. MAINTENANCE AND CARE

- **Cleaning the Surface:** After each use, allow the cooktop to cool completely. Wipe the ceramic glass surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for induction cooktops.
- **Control Panel:** Wipe the control panel with a soft, dry cloth. Do not use excessive water or abrasive cleaners.
- **Ventilation:** Ensure the ventilation openings on the bottom and sides of the cooktop are clear of obstructions to prevent overheating.
- **Storage:** Store the cooktop in a dry, safe place when not in use.
- **Do Not Immerse:** Never immerse the cooktop in water or any other liquid.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; power cord not plugged in; fuse blown.	Check power connection; check household fuse/circuit breaker.

Problem	Possible Cause	Solution
Cooktop beeps and displays an error code.	Incompatible cookware; no cookware on the surface; overheating.	Use induction-compatible cookware; place cookware centrally; allow unit to cool down. Refer to specific error codes in a detailed manual if available.
Cooking process is slow or inefficient.	Incorrect power setting; cookware not flat or too small for the zone.	Increase power setting; ensure cookware has a flat bottom and covers the cooking zone adequately.
Unusual noise during operation.	Normal fan operation; vibration from cookware.	A slight humming sound from the fan is normal. Ensure cookware is stable. If noise is excessive or unusual, contact customer support.

If the problem persists after attempting these solutions, please contact Prestige customer support.

8. SPECIFICATIONS

Model Number: 41977

Power: 2000 Watts

Color: Black

Item Weight: 2 kg 500 g

Item Dimensions (LxWxH): 31 x 36 x 11 Centimeters

Heating Elements: 1

Power Source: Electric

Generic Name: Induction Cooktop

Manufacturer: TTK Prestige Limited

9. WARRANTY AND SUPPORT

The Prestige IRIS 2.0 Induction Cooktop comes with a **1-year warranty** from the date of purchase. Please retain your purchase receipt as proof of warranty.

For warranty claims, technical support, or any other inquiries, please contact Prestige customer service.

Contact details can typically be found on the official Prestige website or on the product packaging.

For more information, you may visit the official [Prestige Store on Amazon.in](#).