

[Manuals.plus](#) /

> [DASH](#) /

> DASH Tasti-Crisp™ Electric Air Fryer Oven, 2.6 Qt., Black – Compact Air Fryer for Healthier Food in Minutes, Ideal for Small Spaces - Auto Shut Off, Digital, 1000-Watt Instruction Manual

DASH DCAF260GBBK02

DASH Tasti-Crisp™ Electric Air Fryer Oven

INSTRUCTION MANUAL

INTRODUCTION

Welcome to the DASH Tasti-Crisp™ Electric Air Fryer Oven manual. This appliance is designed to provide a healthier way to cook your favorite foods by using AirCrisp® Technology, which circulates hot air instead of oil. Its compact design makes it ideal for any kitchen size, from small apartments to dorm rooms.

For detailed information and recipes, please refer to the [Official User Manual \(PDF\)](#).

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your DASH Tasti-Crisp™ Air Fryer Oven. Failure to follow these instructions may result in property damage, personal injury, or death.

- Always place the Air Fryer on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Do not block any ventilation openings.
- Always unplug the Air Fryer when not in use and before cleaning.
- Exercise extreme caution when removing the Crisper Basket or disposing of hot grease.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

SETUP

Before first use, ensure all packaging materials are removed. Clean the Crisper Basket and Crisper Tray with warm, soapy water, then rinse and dry thoroughly. Wipe the exterior of the Air Fryer with a damp cloth.

Place the Air Fryer on a clean, dry, and stable surface, ensuring there is at least 6 inches of space from walls or

other appliances to allow for proper air circulation.



The DASH Tasti-Crisp Air Fryer Oven, showcasing its sleek black design and compact form factor.

UP TO 3 PRESETS

Use the Digital Display to save your favorites for easy one-touch cooking!



The air fryer with its compact dimensions (8.75" wide, 11.25" high) and a note about its three digital presets for easy cooking.

OPERATING INSTRUCTIONS

The DASH Tasti-Crisp™ Air Fryer features a digital interface for precise control over cooking time and temperature. It also includes three saved preset buttons for your favorite settings.

Basic Operation:

1. Plug the Air Fryer into a wall outlet.
2. Pull out the Crisper Basket by the handle.
3. Place food evenly in the Crisper Basket. Do not overfill.
4. Slide the Crisper Basket back into the Air Fryer until it clicks into place.
5. Use the TEMP arrows to adjust the temperature (200-400°F).
6. Use the TIME arrows to adjust the cooking time (up to 60 minutes).
7. Press the START/STOP button to begin cooking.

8. To use a preset, press PRE 1, PRE 2, or PRE 3. You can customize and save these settings.
9. The Air Fryer will automatically shut off when the timer expires.



A detailed view of the digital control panel, showing temperature and time adjustments, along with the three preset buttons.

Cooking Versatility:

The Tasti-Crisp™ Air Fryer is perfect for a variety of foods, from crispy fried chicken to roasted vegetables and even desserts.

Delicious FRIED FOOD



FRIED CHICKEN



ROASTED VEGGIES



PIZZAS & MELTS



DESSERTS

Visual examples of delicious foods that can be prepared using the air fryer, including fried chicken, roasted vegetables, pizzas, and desserts.



- Capacity
2.6 Quarts

- Color
Black

- Item Weight
7.2 Pounds

The air fryer's basket filled with perfectly cooked, crispy fries, demonstrating its capacity and cooking efficiency.

Cooked fries being easily poured from the non-stick Crisper Basket, highlighting the convenience of the design.

A steak cooking within the air fryer's Crisper Basket, illustrating its ability to handle various food types.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Air Fryer.

Cleaning:

1. Always unplug the Air Fryer and allow it to cool completely before cleaning.
2. The Crisper Basket and Crisper Tray are dishwasher safe for easy cleaning.
3. For stubborn food residue, soak the basket and tray in warm, soapy water for 10-15 minutes.
4. Wipe the exterior of the Air Fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Clean the interior of the Air Fryer with a damp cloth and mild detergent, if necessary.

Storage:

Once clean and dry, store the Air Fryer in a cool, dry place. Its compact size allows for convenient storage in cabinets or on countertops.

The compact design of the air fryer allows for easy storage in standard kitchen cabinets.

TROUBLESHOOTING

If you encounter any issues with your DASH Tasti-Crisp™ Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air Fryer does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Ensure plug is securely in outlet. Check power outlet. Push Crisper Basket firmly until it clicks into place.
Food is not crispy.	Basket overloaded; incorrect temperature/time; food not shaken/flipped.	Cook in smaller batches. Adjust temperature/time settings. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean Crisper Basket and Tray thoroughly. For high-fat foods, drain excess oil from the basket.
Digital display not working.	Power interruption; internal malfunction.	Unplug and plug back in. If issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Tasti-Crisp™ Digital Air Fryer
Product Dimensions	8.7"D x 10.7"W x 11.3"H
Color	Black
Capacity	2.6 Quarts
Material	Aluminum, Plastic, Polypropylene (PP)
Inner Material	PTFE (Non-stick coating) on Polypropylene (PP)
Output Wattage	1000 Watts
Voltage	110 Volts
Control Method	Touch
Max Temperature Setting	400 Degrees Fahrenheit
Special Features	Automatic Shut-Off, Non Stick, Programmable, Temperature Control, Timer
Dishwasher Safe Parts	Yes (Crisper Basket and Tray)
Item Weight	6.89 pounds
Manufacturer	Dash

Feature	Detail
Item Model Number	DCAF260GBBK02
UPC	810051851953

WARRANTY AND SUPPORT

DASH products are manufactured to high quality standards. For information regarding warranty coverage and customer support, please refer to the documentation included with your product or visit the official DASH website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B08QR14BKG>

More documents and user manuals: <https://manuals.plus/>