

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer Powersound BTS-102 Portable Bluetooth Speaker User Manual

Energizer BTS-102

Energizer Powersound BTS-102 Portable Bluetooth Speaker User Manual

Model: BTS-102 | Brand: Energizer

1. INTRODUCTION

The Energizer Powersound BTS-102 is a versatile portable Bluetooth speaker designed for high-quality audio playback and convenience. It features Bluetooth connectivity, FM radio, USB and Micro-SD card playback, and a built-in microphone for hands-free calling. Additionally, it includes a power bank function to charge your mobile devices. Its rugged design ensures durability and a secure grip.



Image 1: Front view of the Energizer Powersound BTS-102 Portable Bluetooth Speaker, showcasing its black finish and speaker grille.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Energizer Powersound BTS-102 Bluetooth Speaker
- USB Charging Cable
- User Manual





Image 2: The retail packaging for the Energizer Powersound BTS-102, illustrating the product and its key features.

3. PRODUCT OVERVIEW

The BTS-102 speaker offers a range of features for an enhanced audio experience:

- **Premium Sound:** Delivers clear audio with a transmission range of up to 10 meters.
- **Universal Compatibility:** Supports Bluetooth, AUX input, USB, and Micro-SD card playback.
- **Hands-Free Audio:** Built-in microphone allows for answering calls and conference calls directly through the speaker.
- **FM Radio:** Integrated FM mode for listening to your favorite radio stations.
- **Power Bank Function:** Features a USB-A output to charge external devices, acting as a power bank.
- **Rugged Design:** Durable construction with good grip to prevent slips and scratches.
- **Portability:** Compact design with a carrying strap for easy transport.



Image 3: The Energizer Powersound BTS-102 speaker being placed into a backpack, highlighting its portable design.

4. SETUP

4.1 Initial Charging

1. Connect the provided USB charging cable to the speaker's charging port.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. Allow the speaker to fully charge before first use. The charging indicator light will change when charging is complete.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button for a few seconds until you hear an audible prompt or see the indicator light illuminate.
- **To Power Off:** Press and hold the Power button again for a few seconds until the speaker powers down.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (usually indicated by a flashing blue LED). If not, briefly press the Mode button to switch to Bluetooth mode.
2. On your smartphone or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "Energizer BTS-102" from the list.
4. Once paired, the speaker will provide an audible confirmation, and the Bluetooth indicator light will become solid.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Mode

After successful pairing, audio from your connected device will play through the speaker. Use the speaker's controls or your device to manage playback.

- **Play/Pause:** Press the Play/Pause button.
- **Next Track:** Press the Next Track button.
- **Previous Track:** Press the Previous Track button.
- **Volume Up:** Press the Volume Up button.
- **Volume Down:** Press the Volume Down button.

5.2 FM Radio Mode

1. Press the Mode button repeatedly until you hear the FM radio function activate.
2. Press the Play/Pause button to automatically scan and save available FM stations.
3. Use the Next Track and Previous Track buttons to navigate between saved stations.

5.3 AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the speaker's AUX port.
2. Connect the other end to the audio output of your external device.
3. The speaker will automatically switch to AUX mode or you may need to press the Mode button.

5.4 USB / Micro-SD Card Playback

1. Insert a USB flash drive or a Micro-SD card (with audio files) into the respective port on the speaker.
2. The speaker will automatically detect the storage device and begin playing audio files, or you may need to press the Mode button to switch.
3. Use the Play/Pause, Next Track, and Previous Track buttons to control playback.

5.5 Hands-Free Calling

When connected via Bluetooth to a smartphone:

- **Answer Call:** Press the Play/Pause button once to answer an incoming call.
- **End Call:** Press the Play/Pause button once during a call to end it.
- **Reject Call:** Press and hold the Play/Pause button to reject an incoming call.

5.6 Power Bank Function

The speaker can be used to charge other devices:

1. Connect your mobile device's charging cable to the USB-A output port on the speaker.
2. The speaker will begin charging your device. Ensure the speaker has sufficient battery charge for this function.



Image 4: The Energizer Powersound BTS-102 speaker in a casual setting, demonstrating its versatility for personal use.



Image 5: The Energizer Powersound BTS-102 speaker positioned on a desk alongside a laptop and coffee, indicating its suitability for various environments.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker at least once every three months if not in regular use.
- **Water Exposure:** While the speaker features a rugged design, avoid submerging it in water or exposing it to heavy rain unless explicitly stated as waterproof in the product specifications.

7. TROUBLESHOOTING

- **No Power:** Ensure the speaker is fully charged. Connect it to a power source and try again.
- **No Sound:** Check the volume levels on both the speaker and the connected device. Ensure the device is properly paired via Bluetooth or connected via AUX/USB/Micro-SD.
- **Bluetooth Disconnection/Cannot Pair:** Ensure the speaker is within the 10-meter range of your device. Turn off and on Bluetooth on your device, then restart the speaker and try pairing again. Clear previous Bluetooth connections on your device if necessary.
- **FM Radio Static:** Extend the antenna (if applicable) or reposition the speaker to improve signal reception. Automatic scanning may help find stronger stations.
- **Power Bank Not Charging Device:** Ensure the speaker has sufficient battery charge. Check the charging cable and the connection to your device.

8. SPECIFICATIONS

Feature	Specification
Model Name	BTS-102
Brand	Energizer
Connectivity Technology	Bluetooth, USB, Wireless
Speaker Maximum Output Power	10 Watts
Audio Output Mode	Stereo
Power Source	Battery Powered
Item Weight	790 g
Package Dimensions	23.6 x 10.8 x 10.8 cm
Special Features	Built-in Microphone, Portable, Radio, Stereo Pairing, Waterproof
Compatible Devices	Smartphone
Mounting Type	Tabletop
Color	Black

9. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble or modify the speaker. This will void the warranty and may cause damage.
- Keep the speaker away from children and pets.
- Use only the provided or recommended charging cables.

10. WARRANTY AND SUPPORT

Energizer products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Energizer website for customer service contact details in your region.