

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PowerLocus](#) /

› [PowerLocus P1 Wireless Bluetooth Over-Ear Headphones Instruction Manual](#)

PowerLocus P1

PowerLocus P1 Wireless Bluetooth Over-Ear Headphones

Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the PowerLocus P1 Wireless Bluetooth Over-Ear Headphones. Please read this manual carefully before using the product to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.

WHAT'S IN THE BOX

Upon opening the package, please verify that all the following items are included:

- PowerLocus P1 Bluetooth Headphones
- 3.5mm Audio Cable
- USB Charging Cable
- Hard Protective Carrying Case



Image: PowerLocus P1 headphones and their complete set of accessories.

PRODUCT OVERVIEW

The PowerLocus P1 headphones are designed for versatility and comfort, offering both wireless Bluetooth and wired connectivity options. They feature a foldable design for portability and are equipped with soft, faux leather earmuffs for extended wear.

Key Features:

- **Hi-Fi Stereo Sound:** Equipped with 40mm dynamic audio drivers for deep bass and clear audio across a 110 Hz – 20,000 Hz frequency range.
- **Multiple Playback Modes:** Supports Bluetooth, 3.5mm AUX input, FM radio, and Micro SD/TF card playback.
- **Built-in Microphone:** Enables hands-free calling with clear voice transmission.
- **Universal Compatibility:** Connects seamlessly with iOS, Android, and Windows devices, including smartphones, tablets, laptops, and gaming consoles.
- **Foldable & Portable:** Designed for easy storage and transport, ideal for travel and daily use.
- **Comfortable Design:** Features soft protein foam artificial leather earmuffs and an adjustable headband for a comfortable fit for various head sizes.
- **Long Battery Life:** Up to 15 hours of playtime on a single charge.



Image: The PowerLocus P1 headphones and their included protective case.



Image: The headphones in their folded configuration, demonstrating portability.



Image: Demonstrating the ease of storing the folded headphones in a bag.

SETUP

1. Charging the Headphones

Before first use, fully charge the headphones. Connect the small end of the USB charging cable to the charging port on the headphones and the larger end to a USB power source (e.g., computer USB port, wall adapter). The LED indicator will show charging status and turn off when fully charged. A full charge takes approximately 2.5 hours.



Image: The charging port and included cables for the headphones.

2. Powering On/Off

To power on the headphones, press and hold the Power button until the LED indicator lights up. To power off, press and hold the Power button again until the LED indicator turns off.

3. Bluetooth Pairing

1. Ensure the headphones are charged and powered off.
2. Press and hold the Power button for approximately 5-7 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "PowerLocus P1" from the list of found devices.
5. Once connected, the LED indicator on the headphones will flash blue slowly or remain solid blue.
6. The headphones support multipoint pairing, allowing connection to two devices simultaneously.

4. Wired Connection (AUX Mode)

To use the headphones in wired mode, connect one end of the included 3.5mm audio cable to the AUX port on the

headphones and the other end to the audio output jack of your device. The headphones will automatically switch to wired mode, and no battery power is required for this connection.

OPERATING INSTRUCTIONS

Controls Overview



Image: Detailed view of the control buttons on the right earcup.

- **Power Button:** Press and hold to power on/off. Short press to play/pause music or answer/end calls.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Mode (M) Button:** Short press to switch between Bluetooth, FM Radio, and Micro SD/TF card modes.

Music Playback

- **Play/Pause:** Short press the Power button.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.
- **Volume Adjustment:** Short press Volume Up (+) or Volume Down (-) buttons.

Phone Calls

- **Answer/End Call:** Short press the Power button.
- **Reject Call:** Long press the Power button.
- **Redial Last Number:** Double-press the Power button.

FM Radio Mode

1. Press the Mode (M) button to switch to FM Radio mode.
2. Long press the Power button to automatically scan and save available FM stations.
3. Short press Volume Up (+) or Volume Down (-) to switch between saved stations.

Micro SD/TF Card Mode

Insert a Micro SD/TF card with MP3 audio files into the designated slot. The headphones will automatically switch to TF card mode and begin playing music. Use the playback controls as described above.



Image: User enjoying music wirelessly with the PowerLocus P1 headphones.



Image: The headphones in use during a work or study session.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in the provided protective carrying case to prevent damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** These headphones are not water resistant. Avoid exposure to liquids, moisture, or rain.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in frequent use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair via Bluetooth.	Headphones not in pairing mode. Bluetooth on device is off or not searching.	Ensure headphones are flashing red/blue. Turn Bluetooth off/on on your device and search again. Move headphones closer to the device.
No sound or distorted sound.	Volume too low. Incorrect mode selected. Loose wired connection.	Increase volume on headphones and device. Press 'M' button to select correct mode. Re-insert 3.5mm cable firmly.
Microphone not working.	Device settings.	Ensure headphones are selected as the audio input device in your device's settings.
Intermittent connection.	Too far from device. Interference.	Move closer to the paired device (within 33 feet). Avoid strong electromagnetic interference.

SPECIFICATIONS

Feature	Detail
Model Name	P1
Connectivity	Bluetooth 5.0, 3.5mm AUX
Bluetooth Range	Up to 33 feet (10 meters)
Audio Driver Size	40 mm
Frequency Range	110 Hz – 20,000 Hz
Impedance	32 Ohm
Battery Life	Up to 15 hours playtime
Charging Time	Approximately 2.5 hours
Material	Faux Leather (earmuffs)
Weight	165 Grams (5.8 ounces)
Special Features	Foldable, Adjustable Headband, Built-in Microphone, Multipoint Pairing, Sound Isolation
Water Resistance	Not Water Resistant

WARRANTY AND SUPPORT

PowerLocus provides a **24-Month Warranty** for the P1 headphones, covering manufacturing defects and ensuring product quality. Additionally, a **45-Day Money Back Guarantee** is offered if you are not satisfied with the product quality.

For any questions, technical assistance, or warranty claims, please contact PowerLocus customer support. We offer **24/7 support** to assist you.

For more information, please visit the official PowerLocus store or contact their customer service directly through the platform of purchase.